



# Oster 16-Speed Blender Container Replacement

This guide will show you how to remove the container in order to replace it in the case of a crack in the container.

Written By: Dana



This document was generated on 2020-11-18 05:31:11 PM (MST).

## Step 1 — Container





- First, remove the blender container from the Blender Base, by grabbing the handle and lifting up.

## Step 2



- Next, remove the lid from the Blender Container.

### Step 3

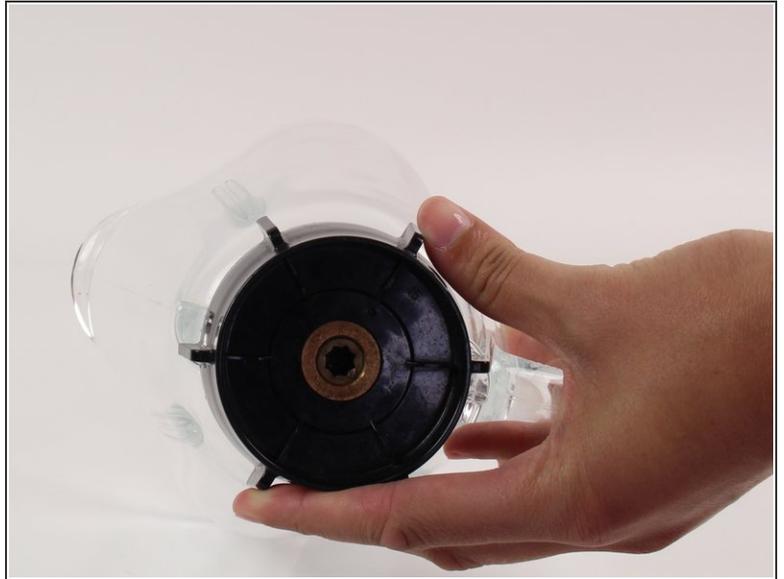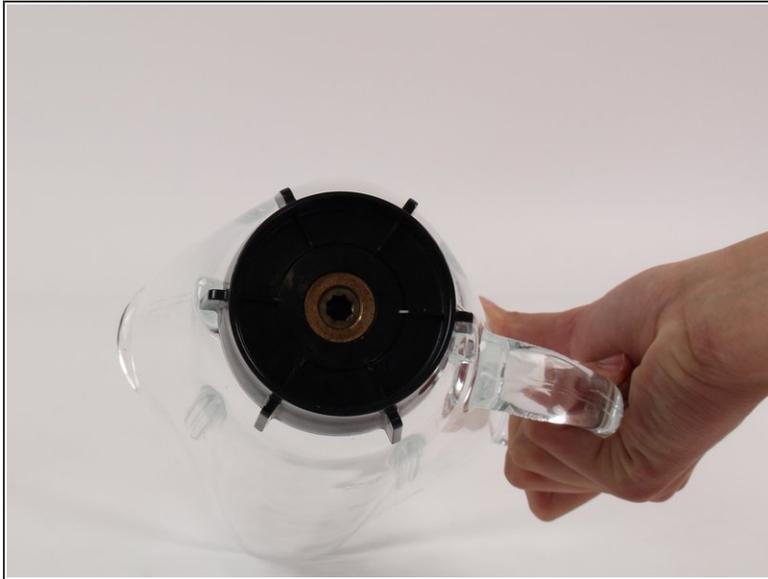

- Flip the container on its side so that the bottom faces you.
- Now rotate the bottom counter-clockwise to remove it from the container.

## Step 4



- Now you will see the bottom of the blender blades once the bottom piece is removed

 Carefully remove the blender blades from the container seeing as they are very sharp and can cut you.

## Step 5



- Now your container is separated.

With your container separated, it can now be replaced. To reassemble your device, follow these instructions in reverse order.