



# Lenovo IdeaPad N586 Battery Replacement

Changing the battery can be as easy as sliding...

Written By: Christopher



# INTRODUCTION

Changing the battery can be as easy as sliding to the right.

## PARTS:

[121500043 - Lenovo IdeaPad Battery](#) (1)

[121500040 - Lenovo IdeaPad Battery](#) (1)


[121500042 - Lenovo IdeaPad Battery](#) (1)

## Step 1 — Battery



- To unlock the battery, flip the laptop over so that the bottom is facing upward. Then unlock the left clip by pushing the clip to the left.

## Step 2

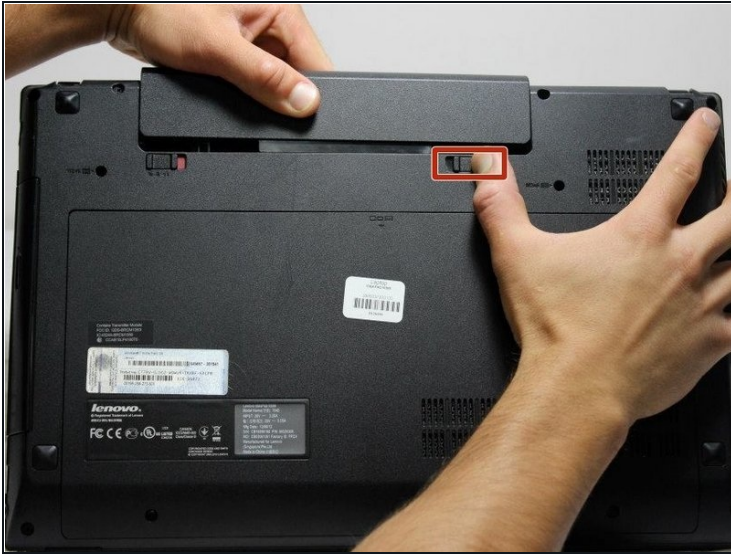

- Now push the right clip to the right and hold it while using your other hand to pull the battery out.

To reassemble your device, follow these instructions in reverse order.