



# HP HDX 16-1160US RAM Replacement

This guide will show the user how to replace the RAM

Written By: Marshall Reid



 **TOOLS:**

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — RAM



- Flip the device over so that the bottom side is facing up and use the Phillips #1 Screw Driver to remove the four 4mm screws on the cover panel.
- Lift the panel to remove it from the device.

## Step 2



- Remove the RAM by placing your thumbs on the silver tabs on each side of the RAM stick and pulling the tabs away from the RAM stick.
  - ⓘ The RAM stick should "flip" up when it is released from its holders.
- Pull the RAM stick toward you to remove it.
- Repeat the above step to remove the second RAM stick

This document was generated on 2020-11-28 03:26:17 AM (MST).

To reassemble your device, follow these instructions in reverse order.