




Kodak EasyShare C713 Battery Door Replacement

Use this guide to remove and replace the...

Written By: Trevor DeVore

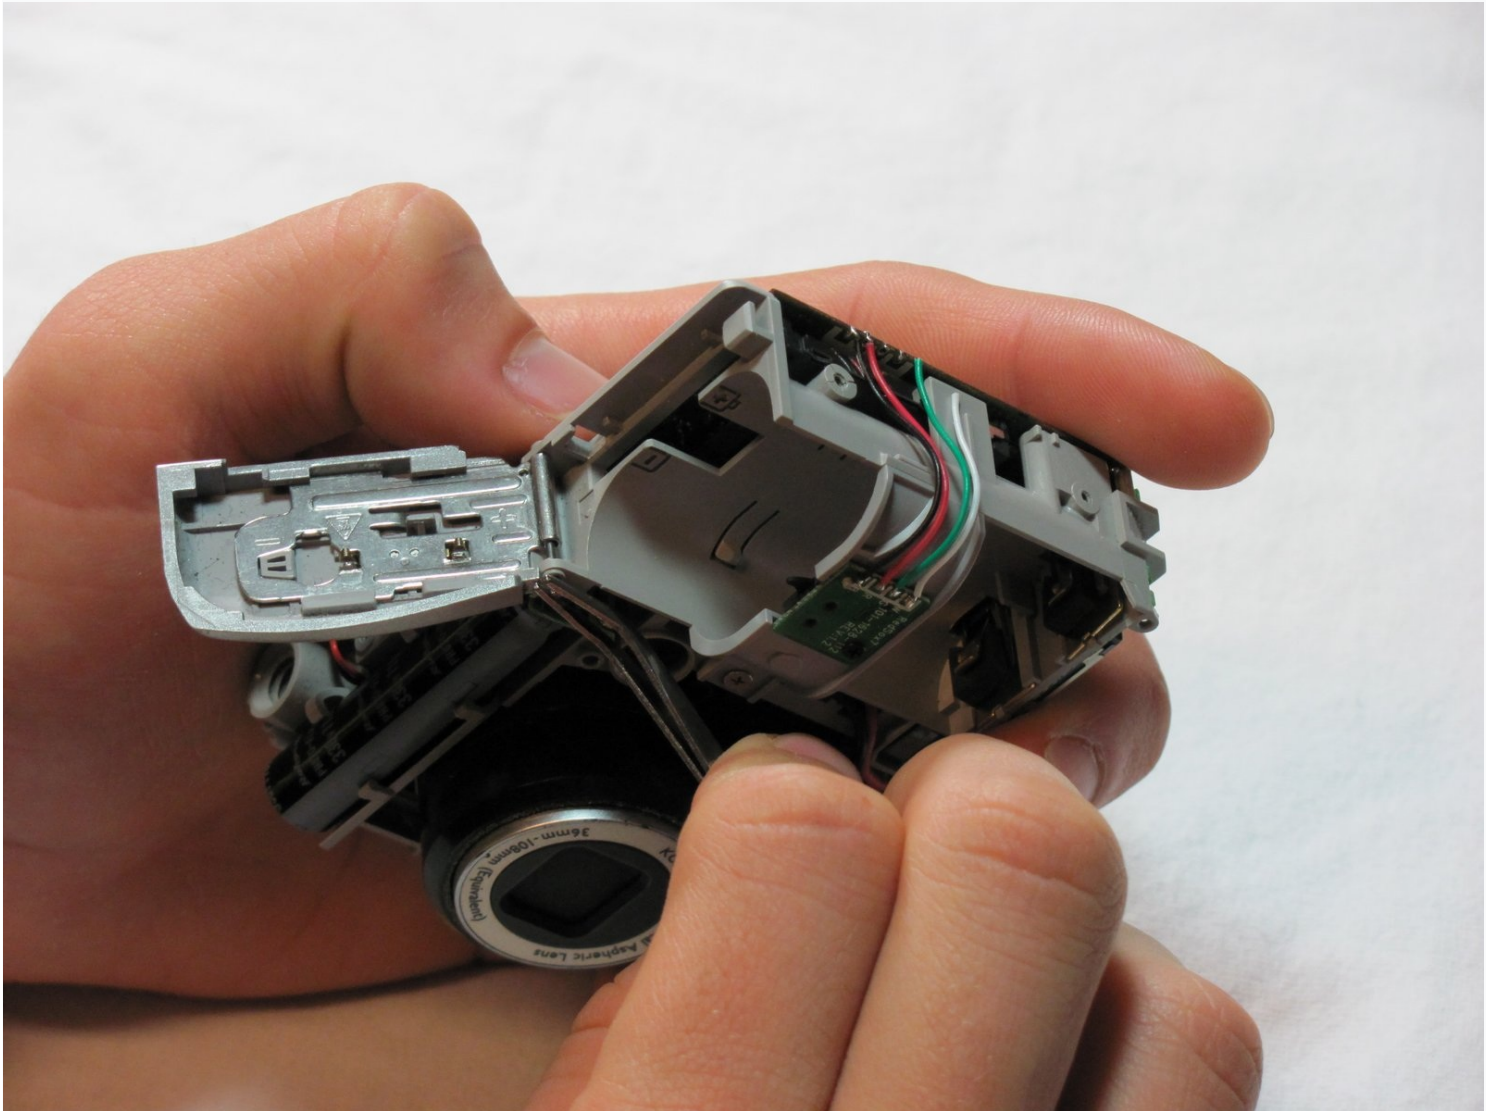

INTRODUCTION

Use this guide to remove and replace the battery door.

TOOLS:

Phillips #00 Screwdriver (1)


Tweezers (1)

Step 1 — Batteries



- Use your finger tip to slide battery cover door away from the center of the camera.
- The battery door should spring open.
- If this does not happen, gently open the door lifting from the outer bottom side of the camera.

Step 2

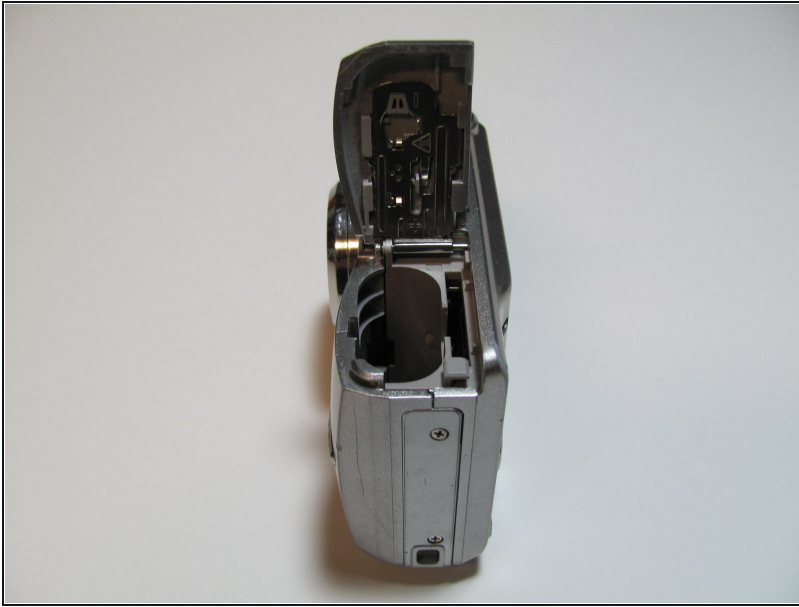


- Remove the old batteries.

Step 3 — Outer Case



- Remove the seven screws from the outer case with a Phillips #00.
- All screws are 4.45mm.
- There are 2 screws on the port side.
- There are 2 screws on starboard side.
- There are 3 screws on the bottom.


Step 4

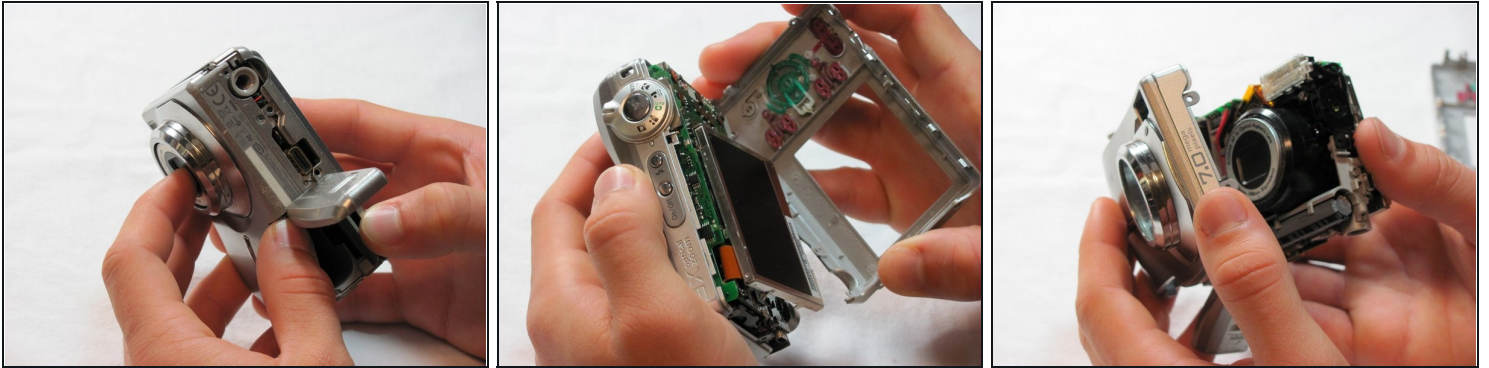

⚠ Make sure the battery cap is "up".

- Pull the outer case off with your hands.

Step 5 — Battery Door

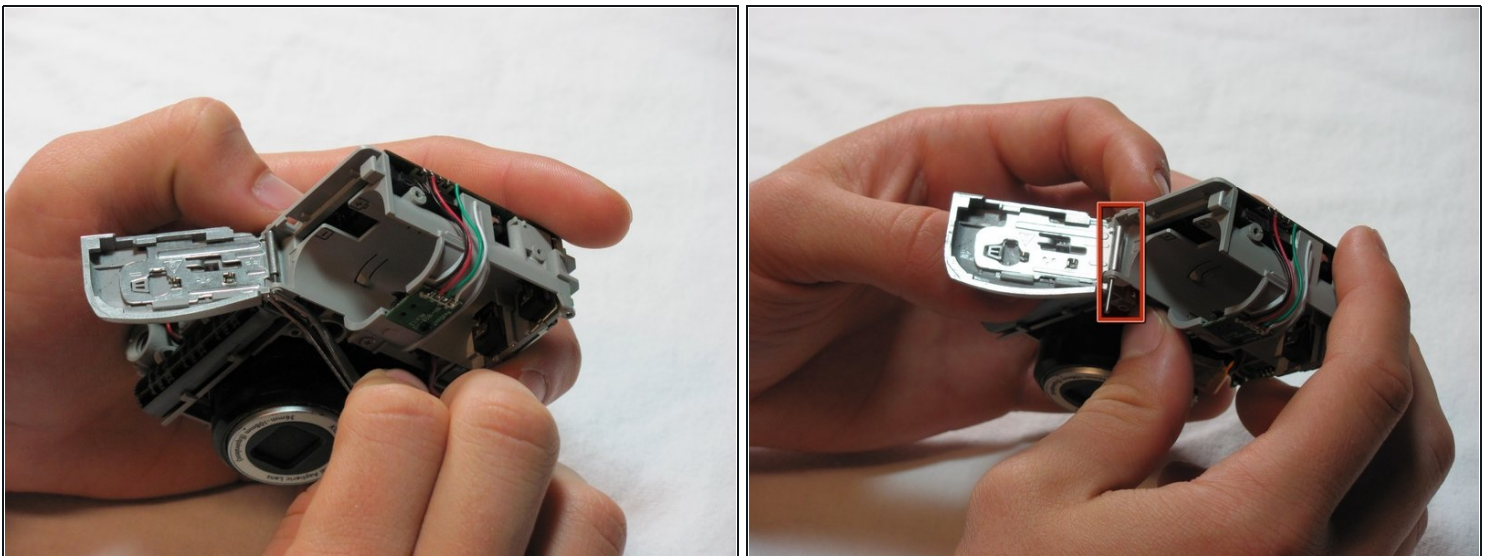

- Make sure the battery door is open.
- Using a pair of [tweezers](#), remove the metal rod at the junction of the battery door and the inner camera case.
 - ⓘ This rod serves as the hinge for the door.

⚠ Make sure not to lose the battery door spring which may fall when the rod is removed.

To reassemble your device, follow these instructions in reverse order.