




Toshiba Satellite M45 RAM Replacement

Written By: Sophie Schneider

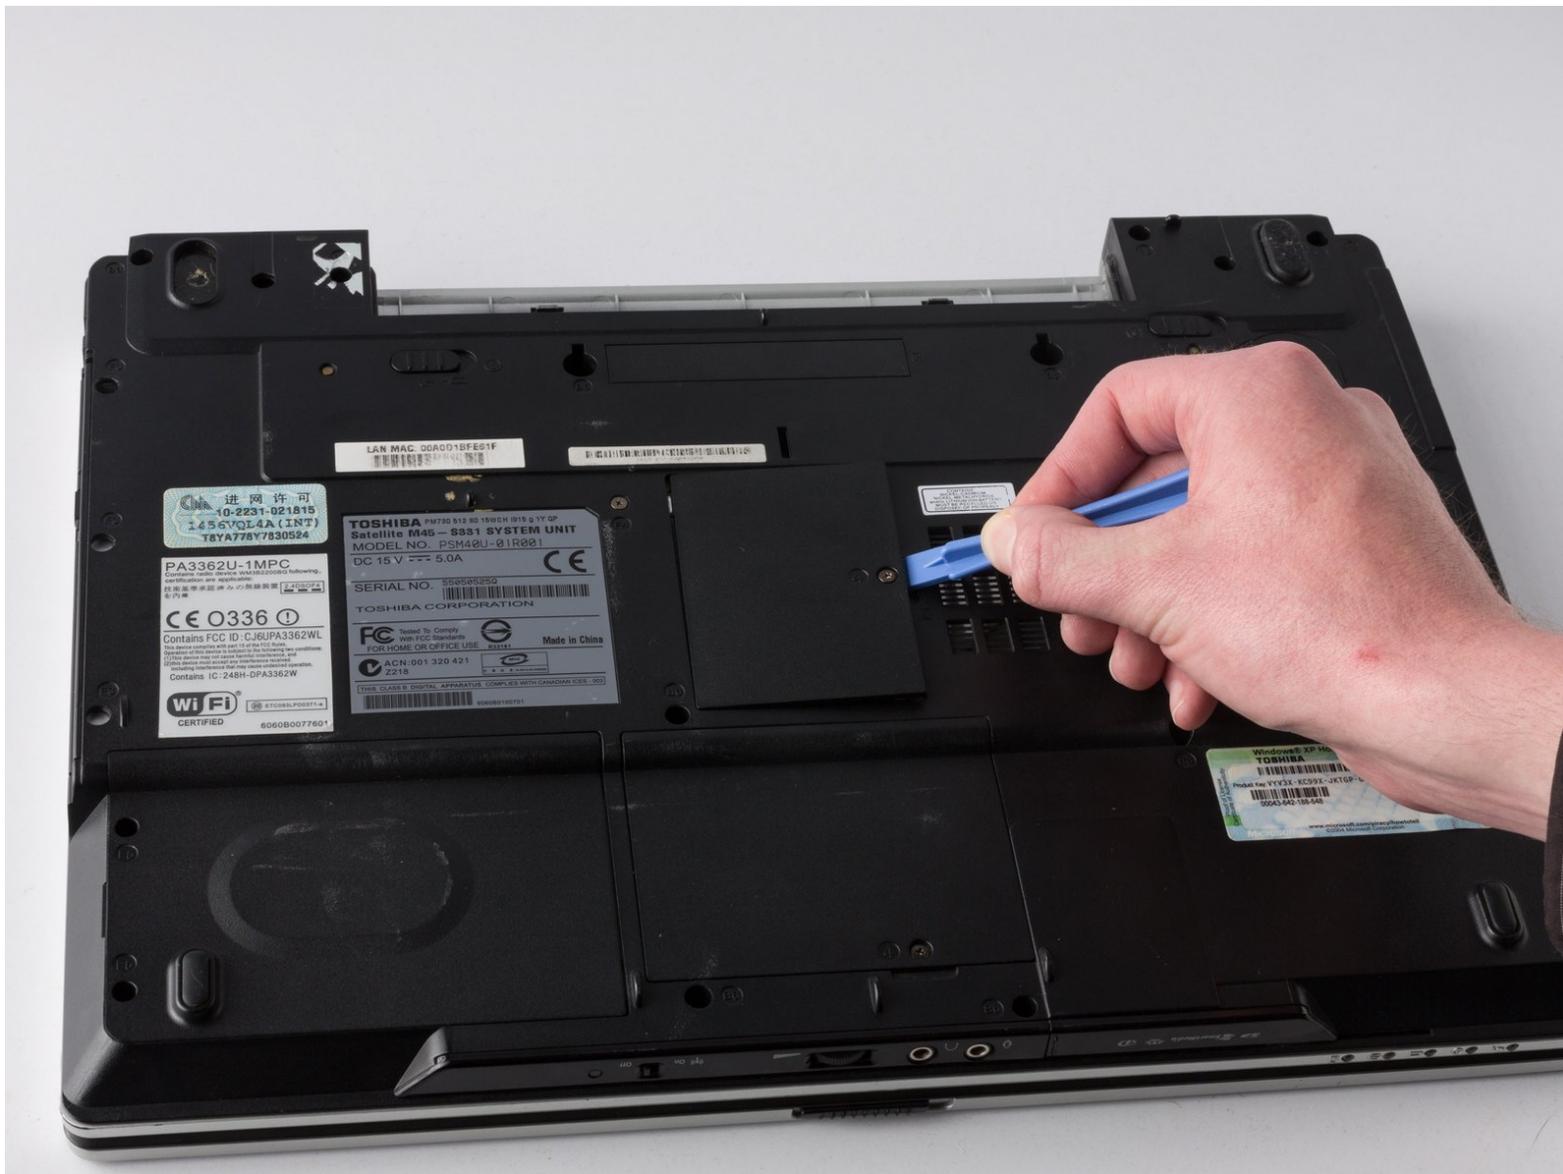

INTRODUCTION

Learn how to replace your laptop's RAM.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — RAM



- Use a #1 Phillips head screwdriver to remove the screw on the middle right of the RAM's cover panel.
 - Then, use a the blue iFixit Opening Tool to pry the cover panel off.
- Push on to the RAM tabs to disconnect the RAM form the device.
 - The RAM will pop off from the socket. Gently pull the RAM out of the socket.

To reassemble your device, follow these instructions in reverse order.