 




# Toshiba Satellite M45 Wi-Fi Card Replacement

Written By: Sophie Schneider

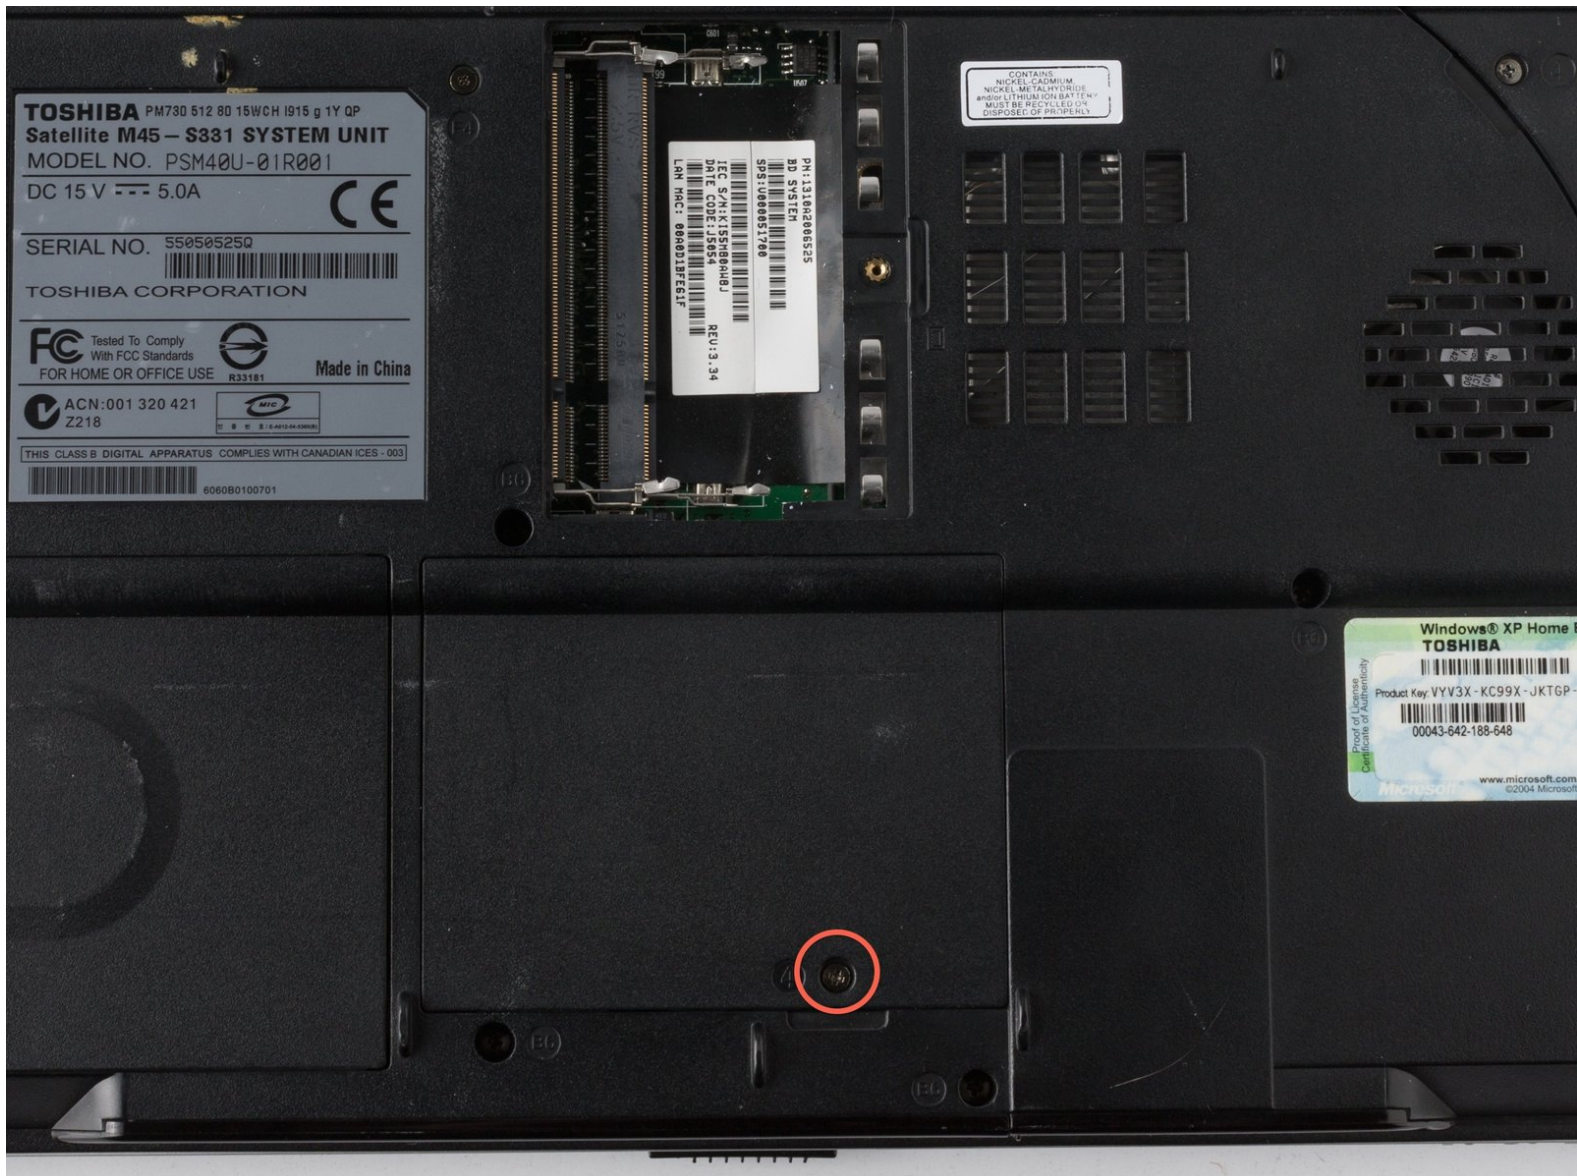

---

## INTRODUCTION

 
Learn to replace your wifi card.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Wi-Fi Card

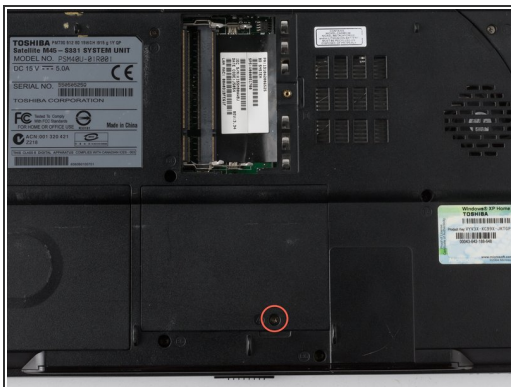

- Use the #1 Phillips head screwdriver to unscrew the panel.
- Disconnect the black and white wires.
- Push on the tabs to disconnect the Wi-Fi card.
- Use the blue iFixit Opening Tool to pull the Wi-Fi Card out.

To reassemble your device, follow these instructions in reverse order.