



# Disassembling JVC GR-D290U

Written By: justin chen






## TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-


## Step 1 — Disassembling JVC GR-D290U

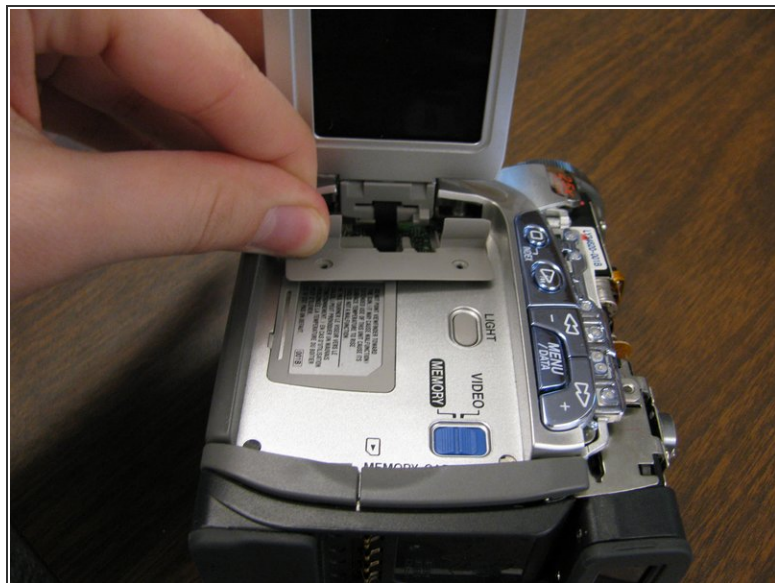

- Open the liquid-crystal display (LCD) screen.
- Using a Phillips #1 screwdriver, remove the two hinge screws.
- Remove the hinge cover. Shut the screen after the cover is removed.




## Step 2

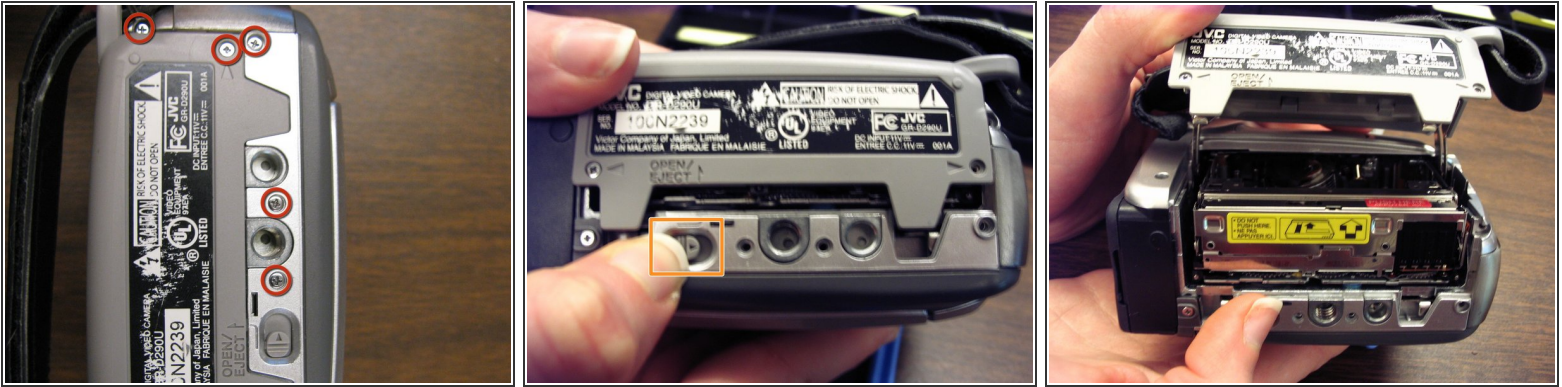

- Flip the camera over to look at the bottom panel.
- Remove the five screws that are located along the sides of the bottom panel with a Phillips #1 screwdriver.
- Push the eject button beneath the bottom panel to open the cassette cover.
- Shut the cassette cover.
- Place the camera upright.

## Step 3

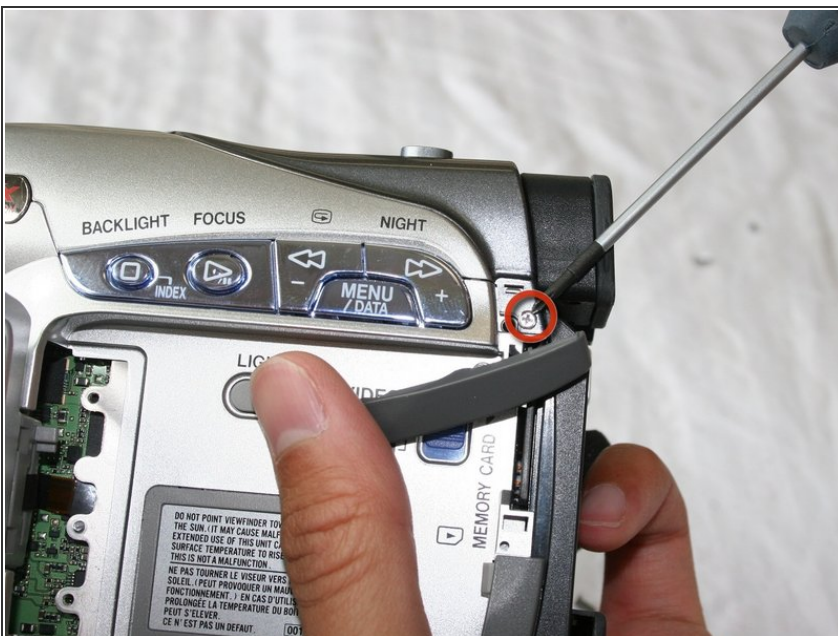


- Open the LCD screen. Move the dark gray tab located near the eyepiece aside.
- Remove the screw located under the dark gray tab with a Phillips #1 screwdriver.
- Replace the dark gray tab and close the LCD screen.

## Step 4



- Go to the side of the camera that is opposite the LCD screen.
- Remove the two screws located on this side of the camera with a Phillips #1 screwdriver.

## Step 5

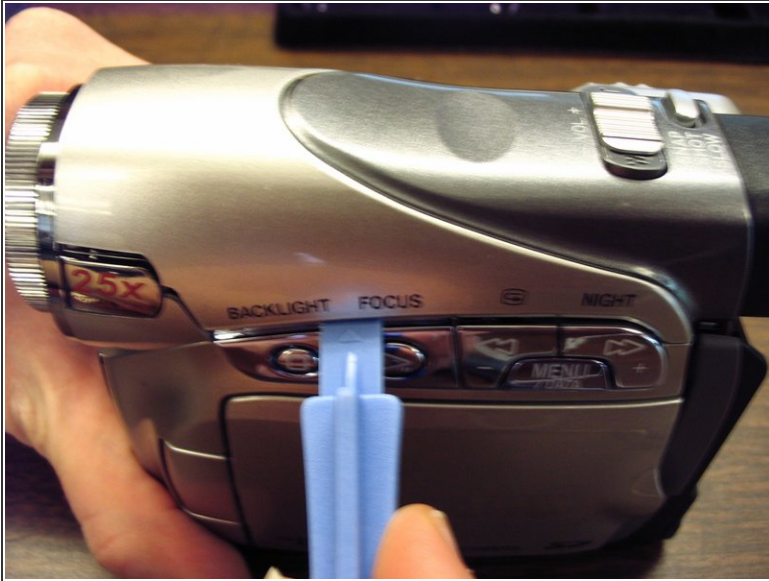

- Go to the side of the camera that has the LCD screen.
- Place the plastic opening tool into the seam between the top cover and the bottom cover of the camera.
- Pry the top cover from the bottom cover until you hear a snapping sound.
- Gently remove the top cover from the camera base.

To reassemble your device, follow these instructions in reverse order.