



Acer Iconia B1-A71 LCD Display Replacement

Acer Iconia B1 (Tablet) LCD Display Replacement

Written By: ZFix



INTRODUCTION

The video is for fully disassemble the tablet, but you can follow the steps until the separating the LCD display.

[Please SUBSCRIBE to my channel ツ](#)




[video: <https://www.youtube.com/watch?v=-0BSN2RipOQ>]



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [knife - cutter](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
-

Step 1 — Acer Iconia B1-A71 LCD Display Replacement

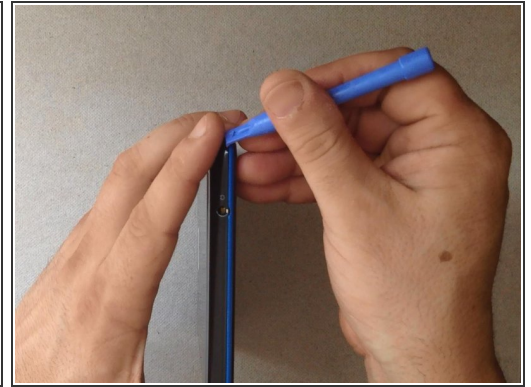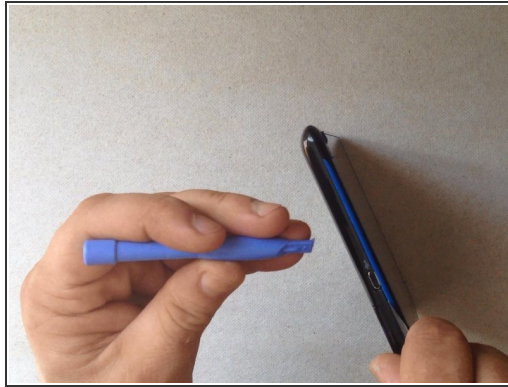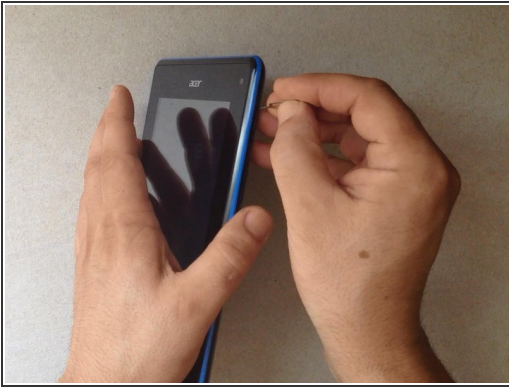

- Switch-off the tablet.
- If you can't switch it off, use the reset button to do this.
- With a cutter and a plastic tool remove the back cover.


⚠ If you have a memory card inside, don't forget to remove it!

Step 2




- First, disconnect the battery.
- Now, disconnect the loudspeaker and remove the back cover.
- Remove all scotch tapes and disconnect the touch screen flex cable...
- LCD display flex cable,
- the microphone,
- and the WiFi and Bluetooth antennas flex cables.

Step 3

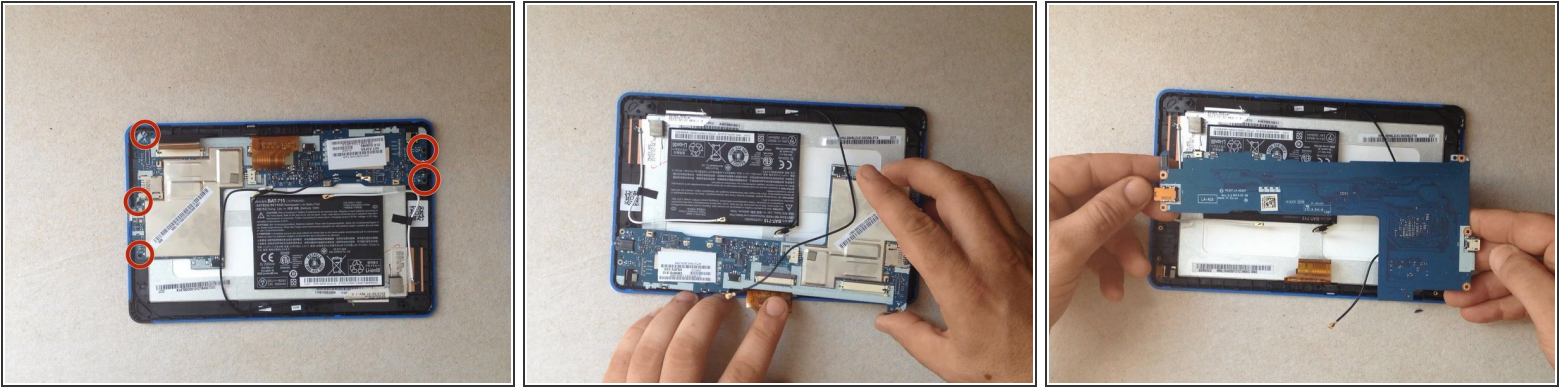


- Unscrew 5x screws and remove the main board.

Step 4

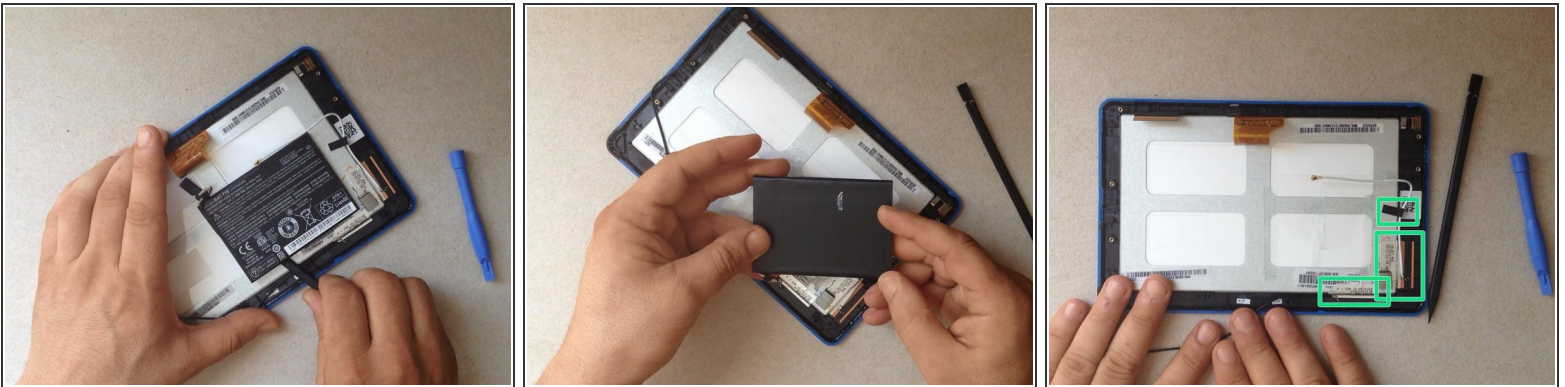

- The battery is glued to the LCD display metal shield with a double sided adhesive tape.
- Use plastic tools and carefully remove it.
- Remove all tapes from the LCD display metal shield.

Step 5

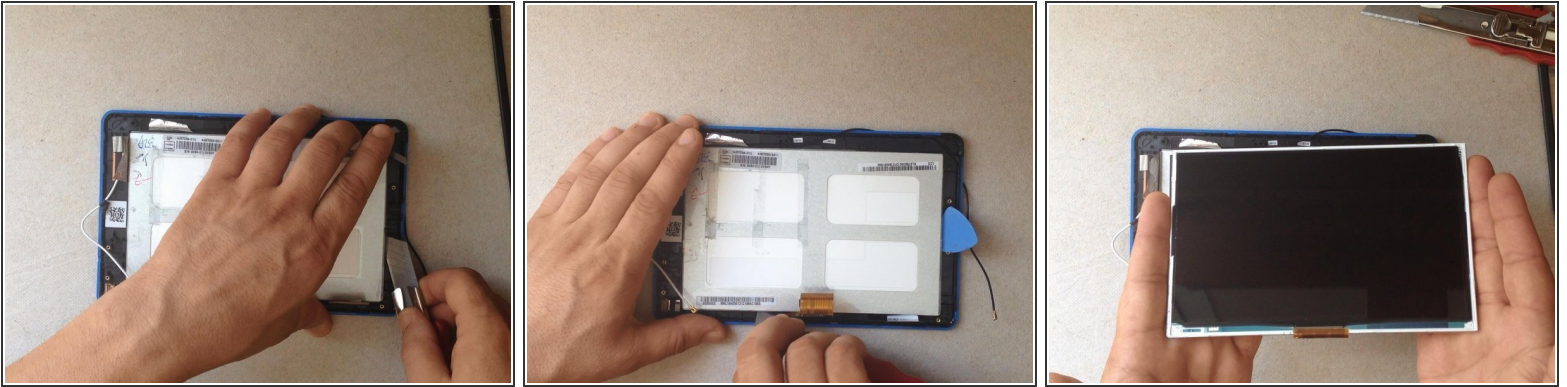

- The LCD display is held by metal frame and some locking clips on it.
- Use a cutter and a plastic tool to separate the LCD.

⚠ You have to work slowly so as not to break the display.

- Now, install the new LCD display and reassemble the tablet.

- .

- **Did you do it successfully?**



[Please SUBSCRIBE to my channel ツ](#)

To reassemble your device, follow these instructions in reverse order.