



Dell Inspiron 6000 Battery Replacement

Replace your dying battery to bring power back to your laptop.

Written By: Kenneth Odum



INTRODUCTION

The laptop is powered by the battery. The battery may need to be replaced if the laptop will not turn on with the battery installed or if the battery will not charge.


Step 1 — Battery



⚠ To prevent injury, make sure the laptop is unplugged before removing the battery.

- Flip the laptop over, bottom-side up.

Step 2

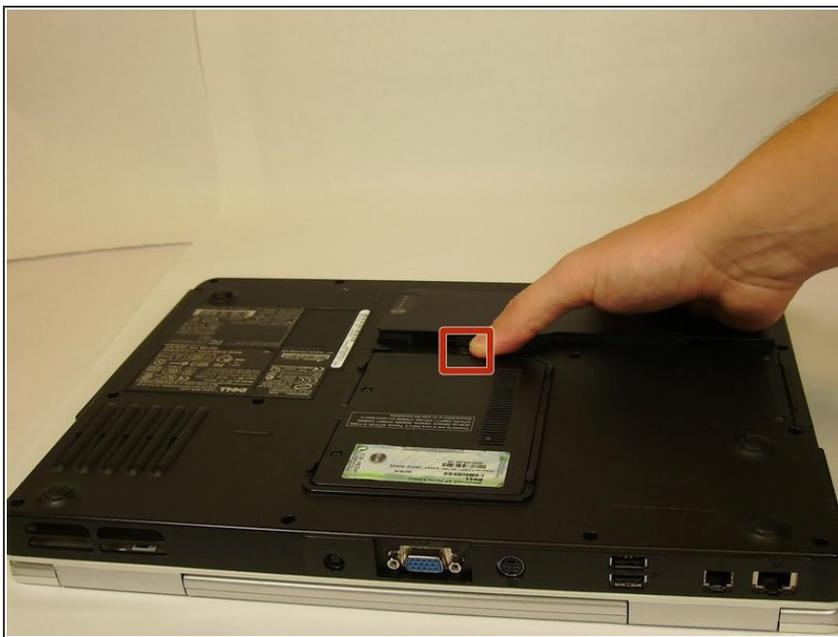

- Push the switch next to the battery.
- At the same time, lift the battery away from the laptop.

To reassemble your device, follow these instructions in reverse order.