




# Sony CDX-GT540UI Face-Plate Eject Lever Replacement

This will show how to remove and replace the face-plate eject lever. This will allow one to take advantage of the security feature of a removable face-plate.

Written By: Odelkys Marquez

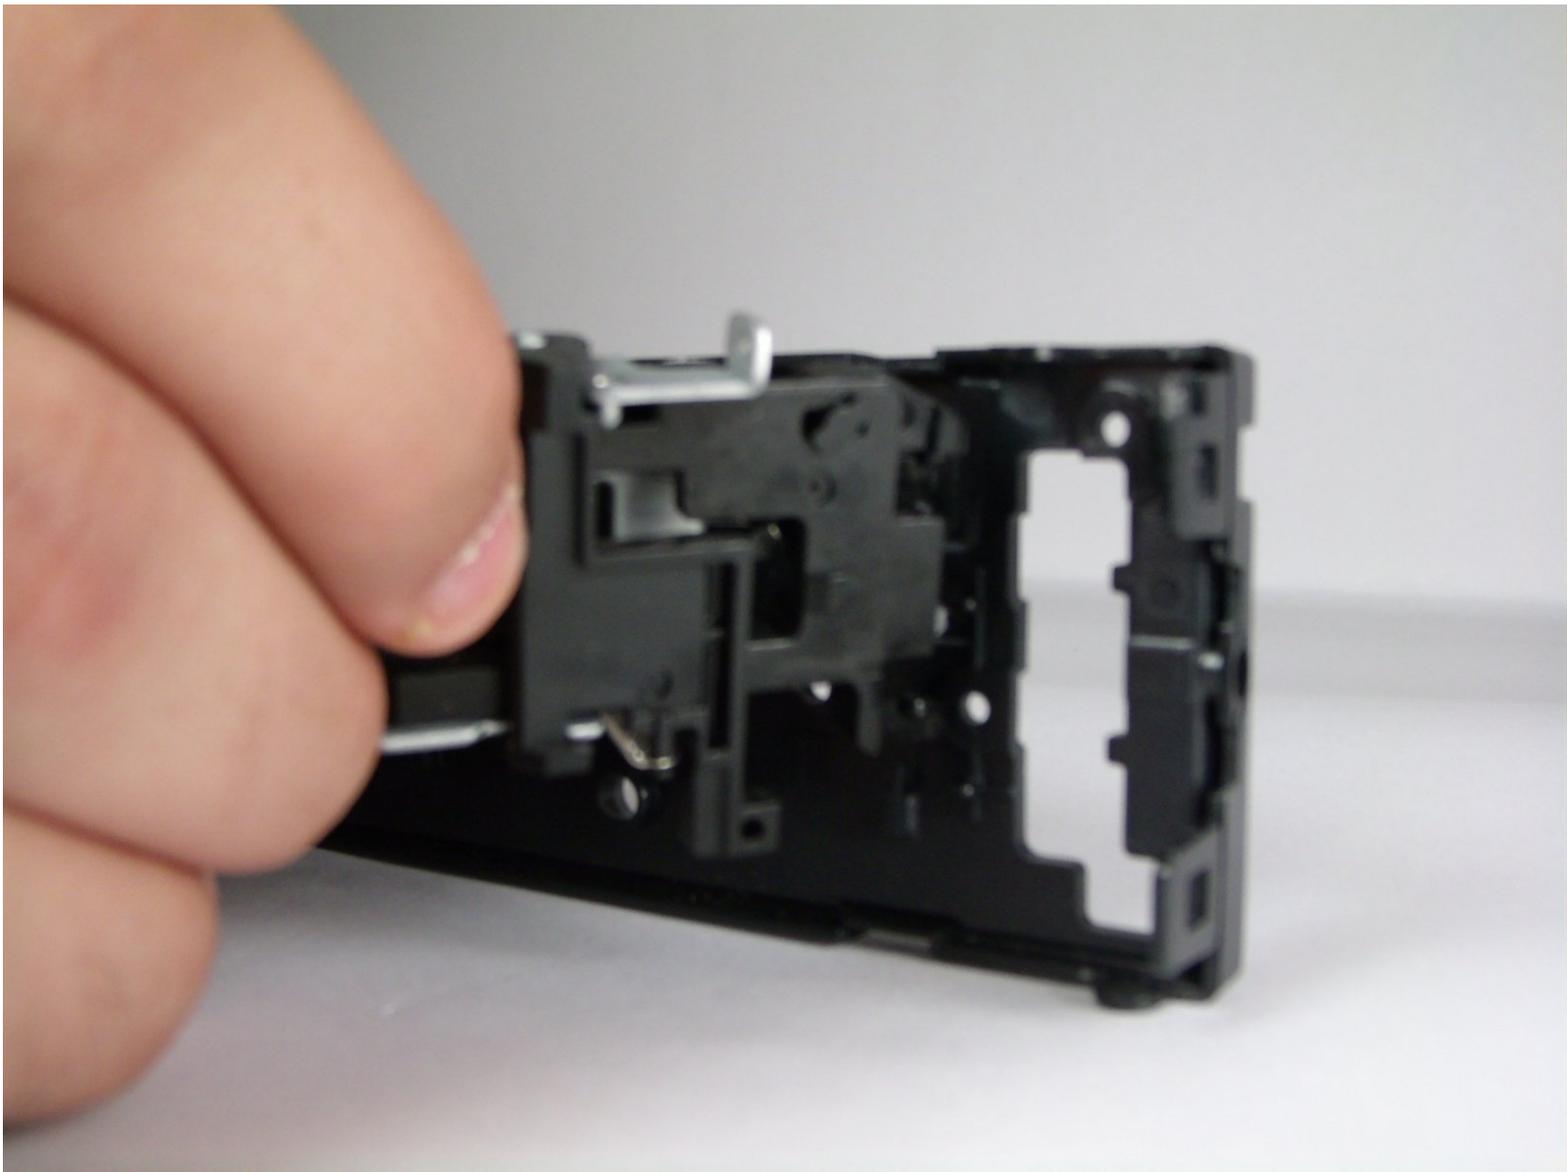

---

## INTRODUCTION

This guide will show how to remove and replace the face-plate eject lever on the device.

Before any repair work can be done one must remove the device for the vehicle. To do so follow this [link](#) to see a general vehicle removal of a stereo system.

---

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Front Panel



- Locate face-plate eject button.

## Step 2

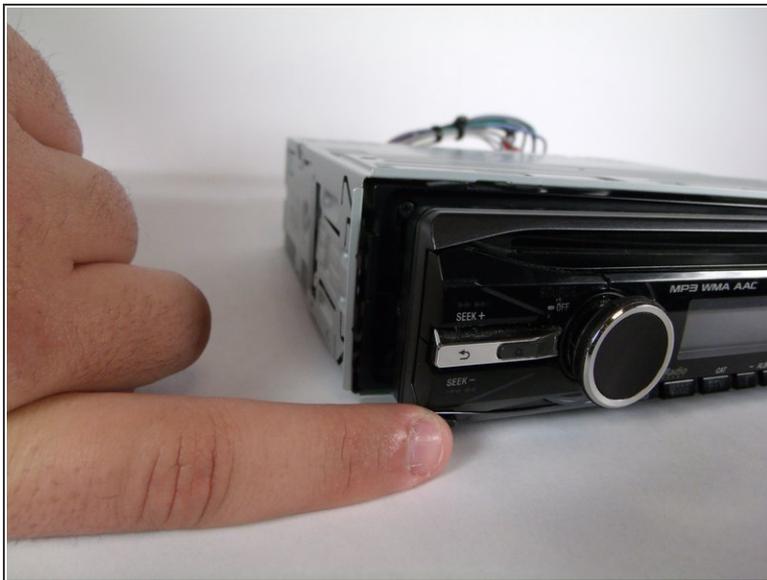


- Press the eject button.
- Remove the face-plate.

### Step 3




- Remove two 4.9mm Phillips #00 screws on the front of the device.
  - Remove two 7.5mm Phillips #00 screws on the front of the device.
- i** When the screws are removed, the eject lever may fall into the device. Make sure the device is held horizontal and level.

### Step 4

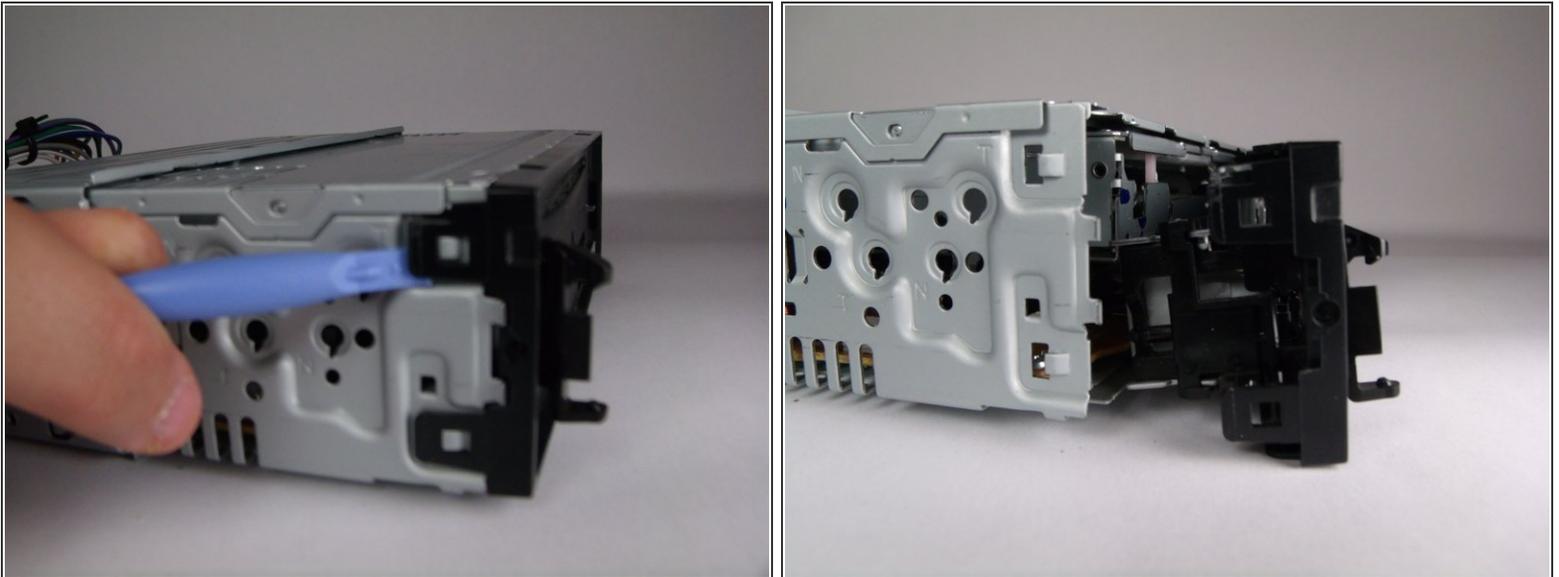


- Rotate device 90 degrees to either side.
- Use the plastic opening tool to pry open the top and bottom tab respectively.
- Repeat on opposite side.

## Step 5

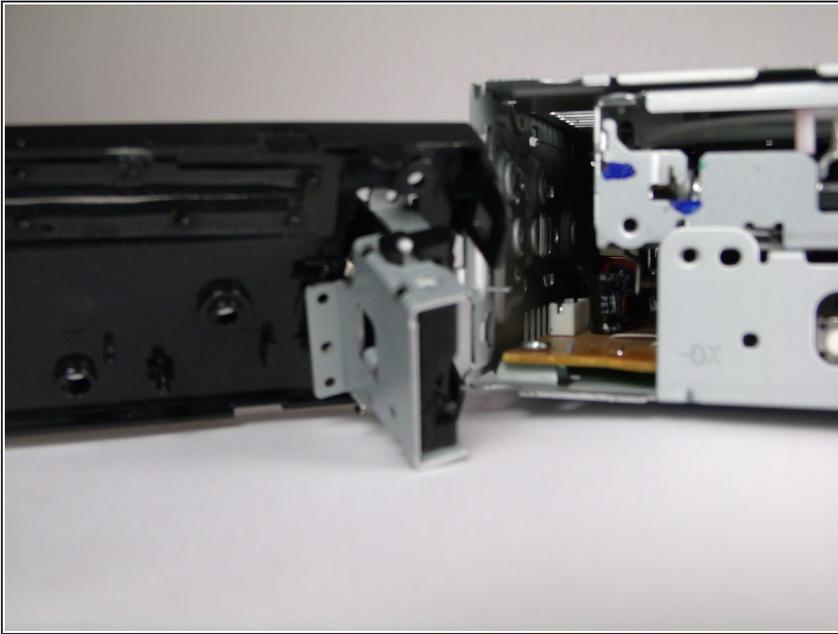

- Remove front panel.

## Step 6 — Face-plate Eject Lever

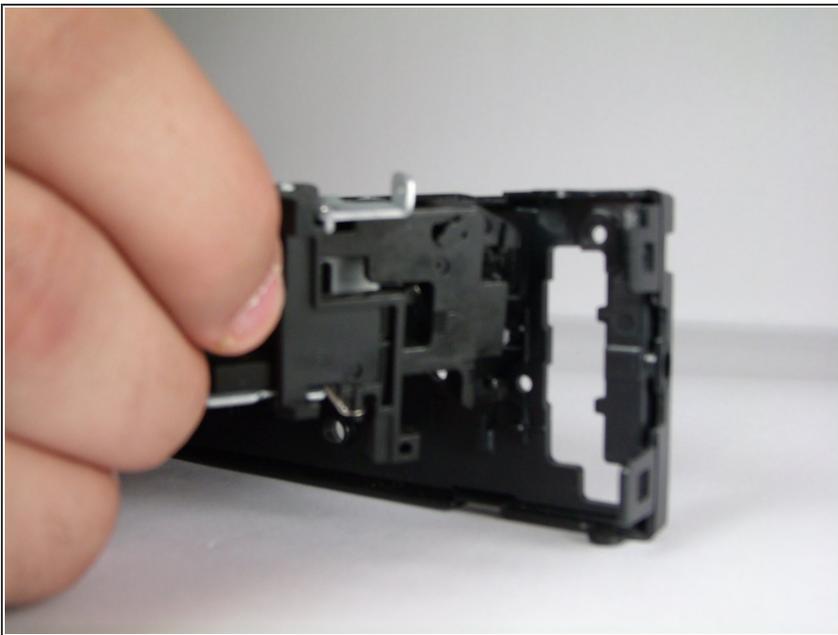

- Remove the eject lever.

To reassemble your device, follow these instructions in reverse order.