



# Disassembling Nerf Dart Tag Furyfire Main Body

In this guide we will disassemble the main body of the Nerf Dart Tag Furyfire.

Written By: Michael Cabossart



---

## INTRODUCTION

You will learn how to remove the front panel of the Nerf gun. The front panel of the Furyfire is the piece that closes onto the other half of the gun to enclose the components and hold them in place. Knowing how to remove the front panel is required for you to be able to perform any other repairs on the Furyfire.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Remove the screws



- Using a 00 Phillips screwdriver, remove all screws from the front panel. The screws have a length of .95 cm.

## Step 2 — Remove Panel



- After the screws have been removed, gently lift the panel from the gun and set it aside.

To reassemble your device, follow these instructions in reverse order.