



Nerf Dart Tag Furyfire Large Spring Replacement

In this guide you will learn how to replace the large spring located at the top of the gun, connected to the pump.

Written By: Bradley Penrow



INTRODUCTION

In this guide you will learn how to replace the large spring located at upper section of the Nerf device. Learning to do so will assist you with trouble shooting problems such as the device not firing darts or a jammed freely moving pump. This problem is usually caused by clogging of foreign objects or darts, within the device, spring malfunction, misaligned pieces.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Remove the screws



- Using a 00 Phillips screwdriver, remove all screws from the front panel. The screws have a length of .95 cm.

Step 2 — Remove Panel



- After the screws have been removed, gently lift the panel from the gun and set it aside.

Step 3 — Remove Black Cylinder



- Locate the black cylinder connected to the large spring near the top of the device.
- Once located, push the black cylinder against the spring and lift it out of the device.

Step 4 — Remove Spring



- Using your hand, lift the large spring and attached plastic stabilizing piece out of the gun and set aside.

⚠ Ensure that the small spring connected to the stabilizing piece remains connected.

To reassemble your device, follow these instructions in reverse order.