


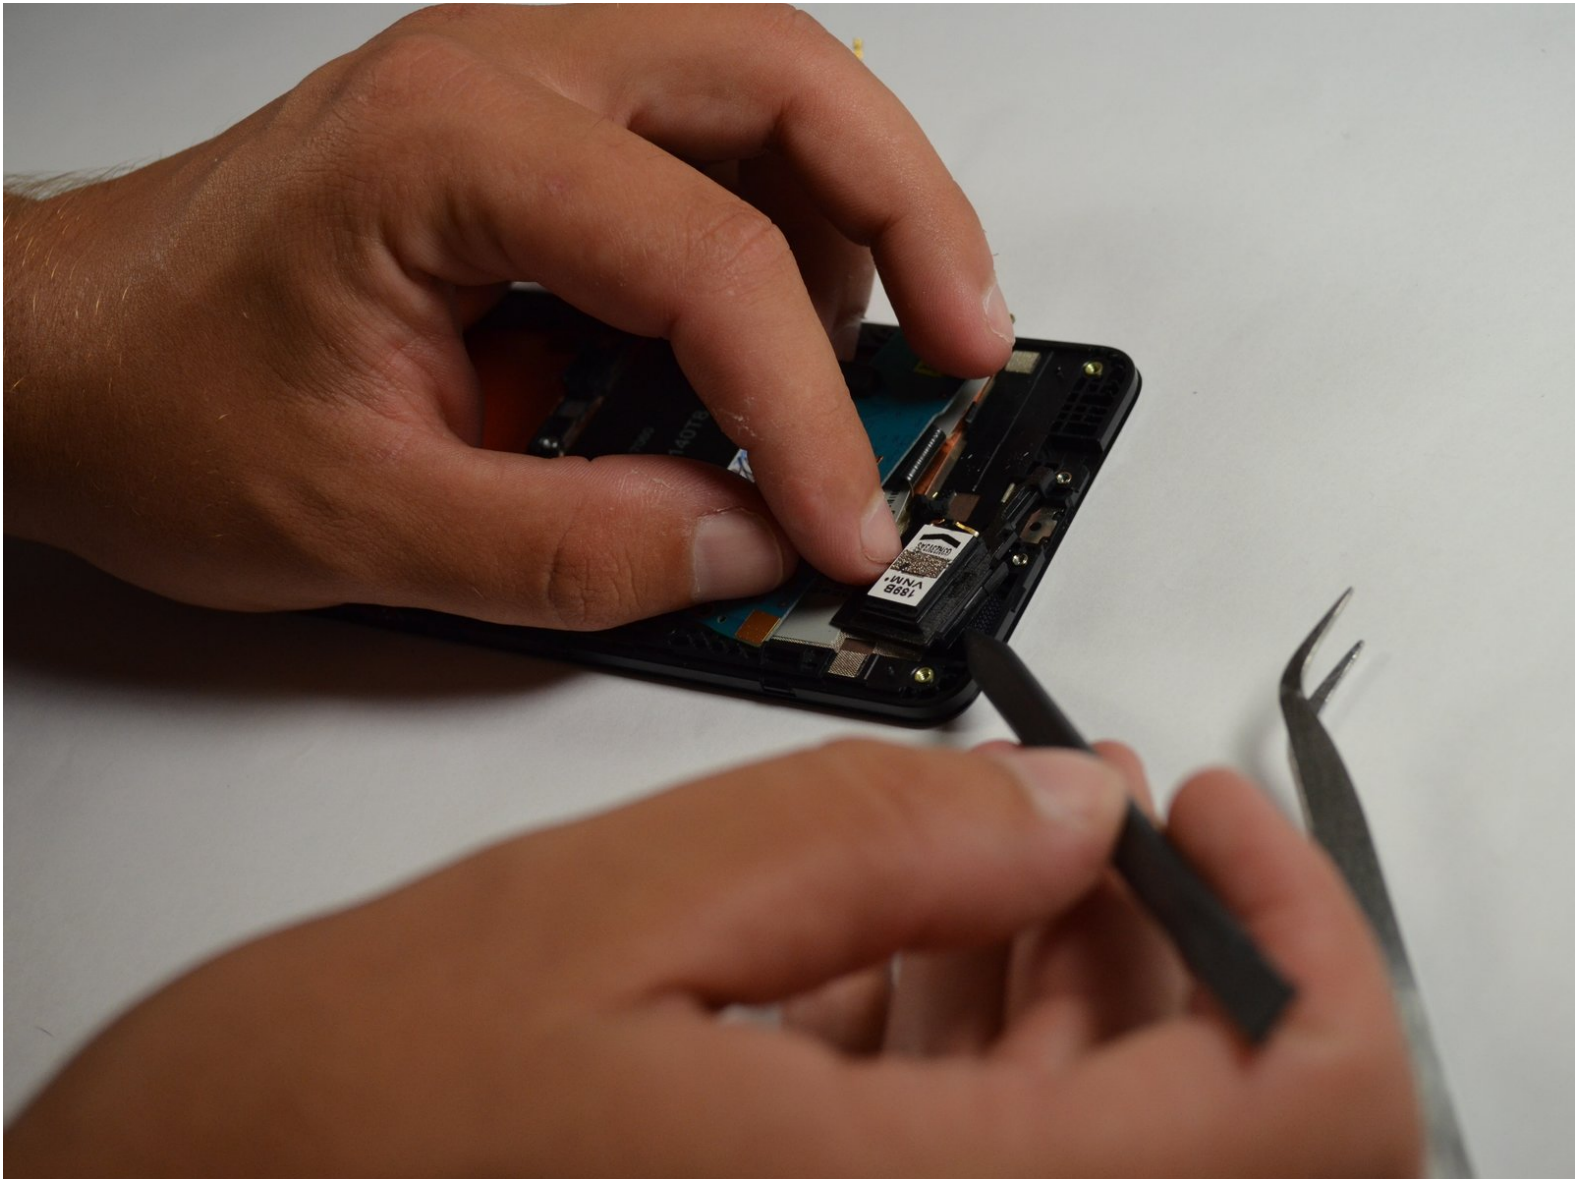

HTC Desire 700 Dual Sim Bottom Speaker Replacement

This guide will show how to remove and replace the bottom speaker of the phone.

Written By: Steven Pate



INTRODUCTION

First, it is necessary to ensure that the bottom speaker is faulty before replacement. Confirm that this is the case by testing it via a phone call followed by testing the microphone recording application on the phone. If the speaker does not work in both of these cases, it is likely damaged and in need of replacement. The procedure will be presented step-wise to ensure that none of the hardware is damaged, as this guide involves the removal of fragile components.



TOOLS:

- [T4 Torx Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Cover




- Use the spudger to pry the back cover off.

Step 2 — Removing Battery



- Use spudger tool to pry under the battery to lift it up and out.

Step 3 — Remove 8 Torx Screws

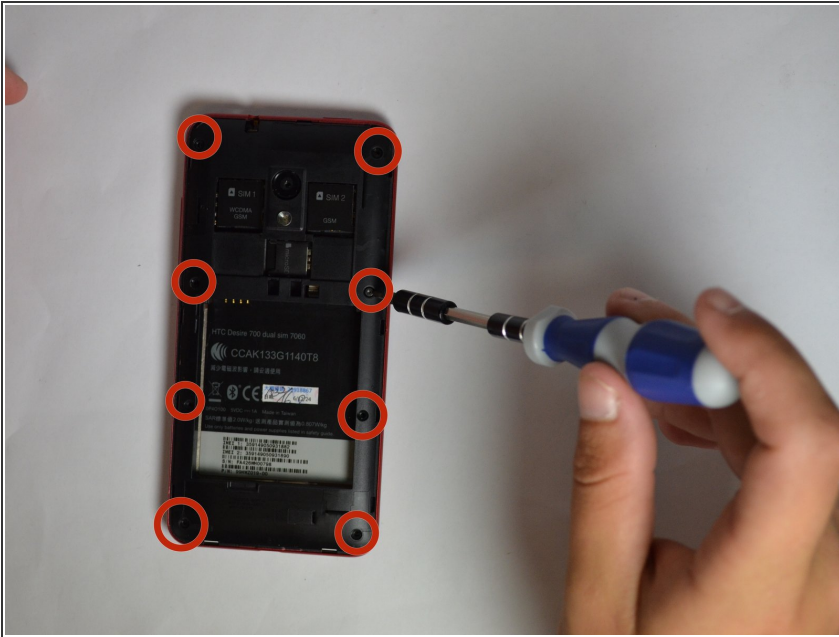


- Remove eight 8.3mm T4 screws with the Torx screwdriver.

Step 4 — Prying Off Rear Panel




- Pry the back panel of the screen using the plastic opener.
 - Work your way gently around the device, using picks as necessary to keep the back panel separated.
- ⚠ Use caution not to damage the device, as it takes force to remove the rear panel.

Step 5 — Printed Circuit Board (PCB)

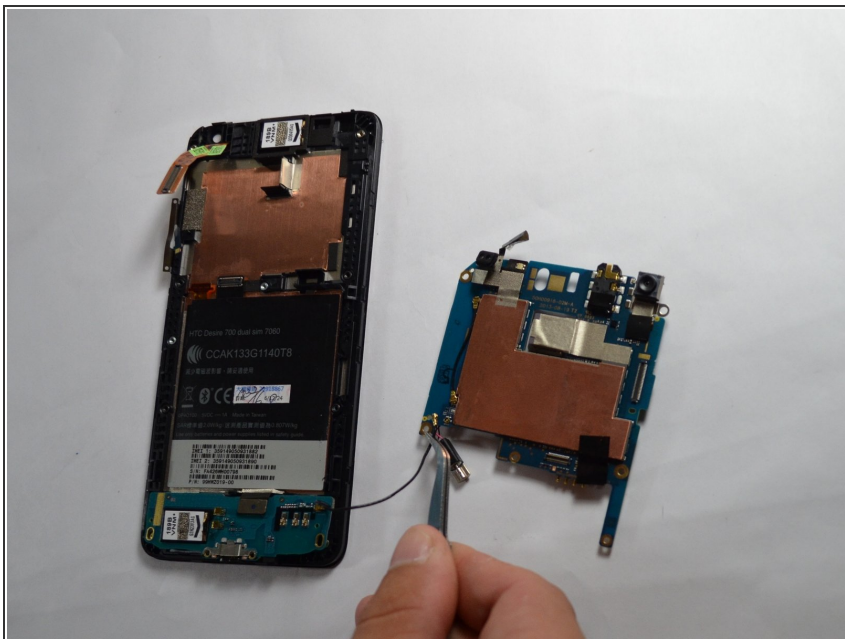


- Disconnect wire going from the printed circuit board to the motherboard using the tweezers.

Step 6

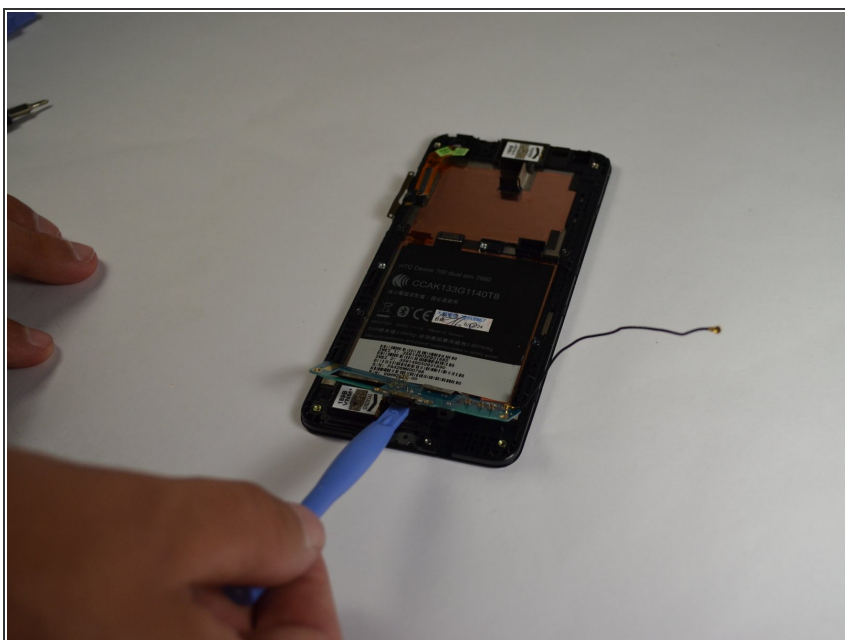

- Using the plastic prying tool, pry the PCB device from the screen of the phone.

Step 7 — Bottom Speaker

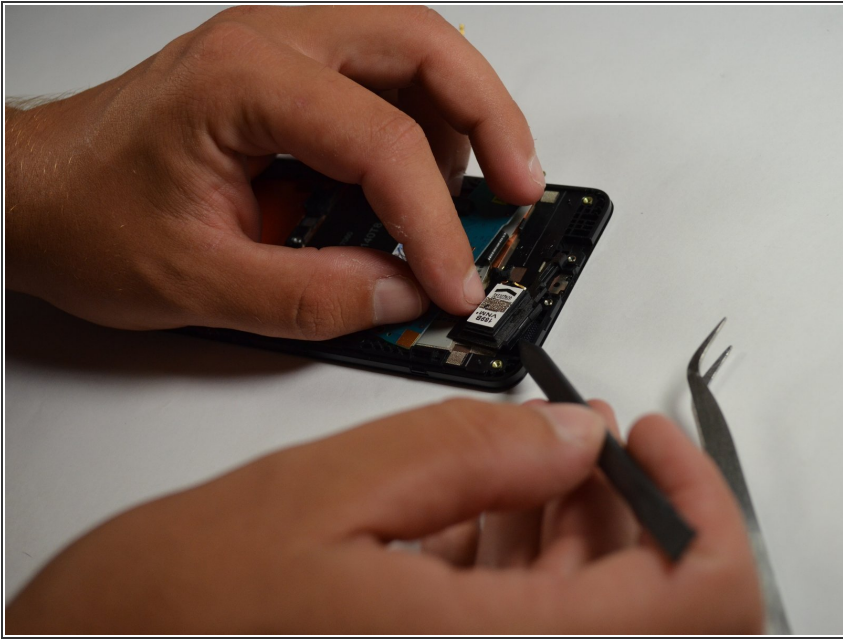

- Using the spudger, pry the speaker away from the screen.

To reassemble your device, follow these instructions in reverse order.