



Sony CFS-204 Radio Cassette-Corder Antenna Replacement

Replacing the antenna will allow the device user to reconcile reception issues and enjoy clear AM/FM channels.

Written By: Brittany Patterson



INTRODUCTION

This guide will demonstrate how to disconnect the antenna from the radio.



TOOLS:


- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Antenna



- Loosen and remove the 8 mm screw using the #2 Phillips screw driver.

Step 2

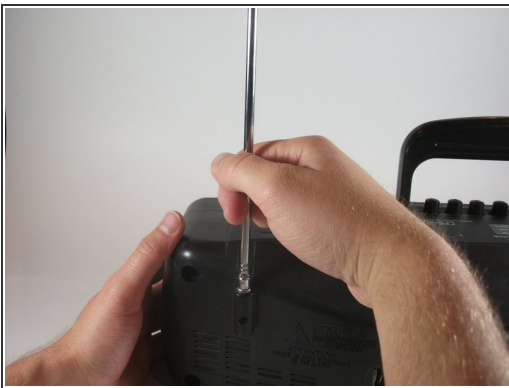

- Straighten the antenna to a vertical position and pull straight up (with a little force!) to remove the antenna.

To reassemble your device, follow these instructions in reverse order.