



# Automatic Tommy 20 Prerequisite Disassembly

Take apart your gun. **\*\*Prerequisite Only\*\***

Written By: Jimmy King



---

## INTRODUCTION

Take apart your gun into two pieces.

**\*\*Prerequisite Only\*\***

---

### TOOLS:



- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Splitting the Gun into Two Halves



- Locate the orange slider on the front side of the gun.
- Pull the orange slider towards the back of the gun while lifting up on the nose of the gun.

## Step 2

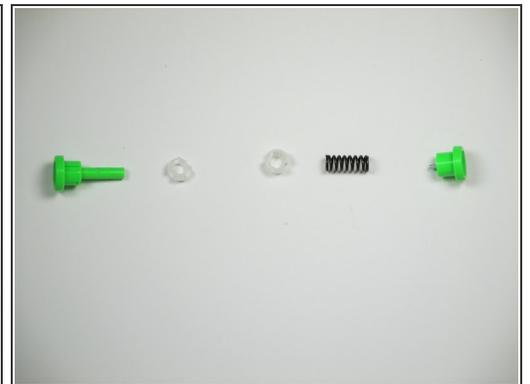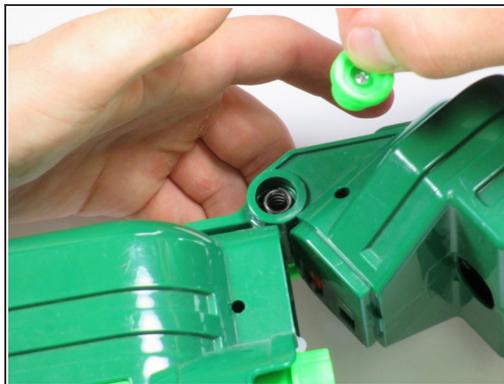

- Remove the single 1/8 in. screw at the junction of the body and the nose using a Philips #00 Screwdriver.
  - Remove all parts within the chamber to be able to completely detach the nose of the gun.
- Be careful to keep track of all the components for reassembly.

To reassemble your device, follow these instructions in reverse order.