

Air Blasters Tek Six Reload Slider Replacement

This guide will show you how to replace your reload slider for the Air Blasters Tek Six

Written By: hani



This document was generated on 2020-11-20 01:23:22 AM (MST).

INTRODUCTION

The reload slider is the mechanism that gets the blaster ready to fire the darts.

TOOLS:

1

• Phillips #00 Screwdriver (1)

This document was generated on 2020-11-20 01:23:22 AM (MST).

Step 1 — Remove screws of the grey slider



• Using a screwdriver, remove the two 11.6 mm phillips 00 screws holding the grey slider together.

Step 2 — Remove the slider



• Remove grey slider from the main body of the blaster.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-20 01:23:22 AM (MST).