




Automatic Tommy 20 Ammo Drum Replacement

Detach the lime green, circular dart holder from body of the gun.

Written By: Moira Foster

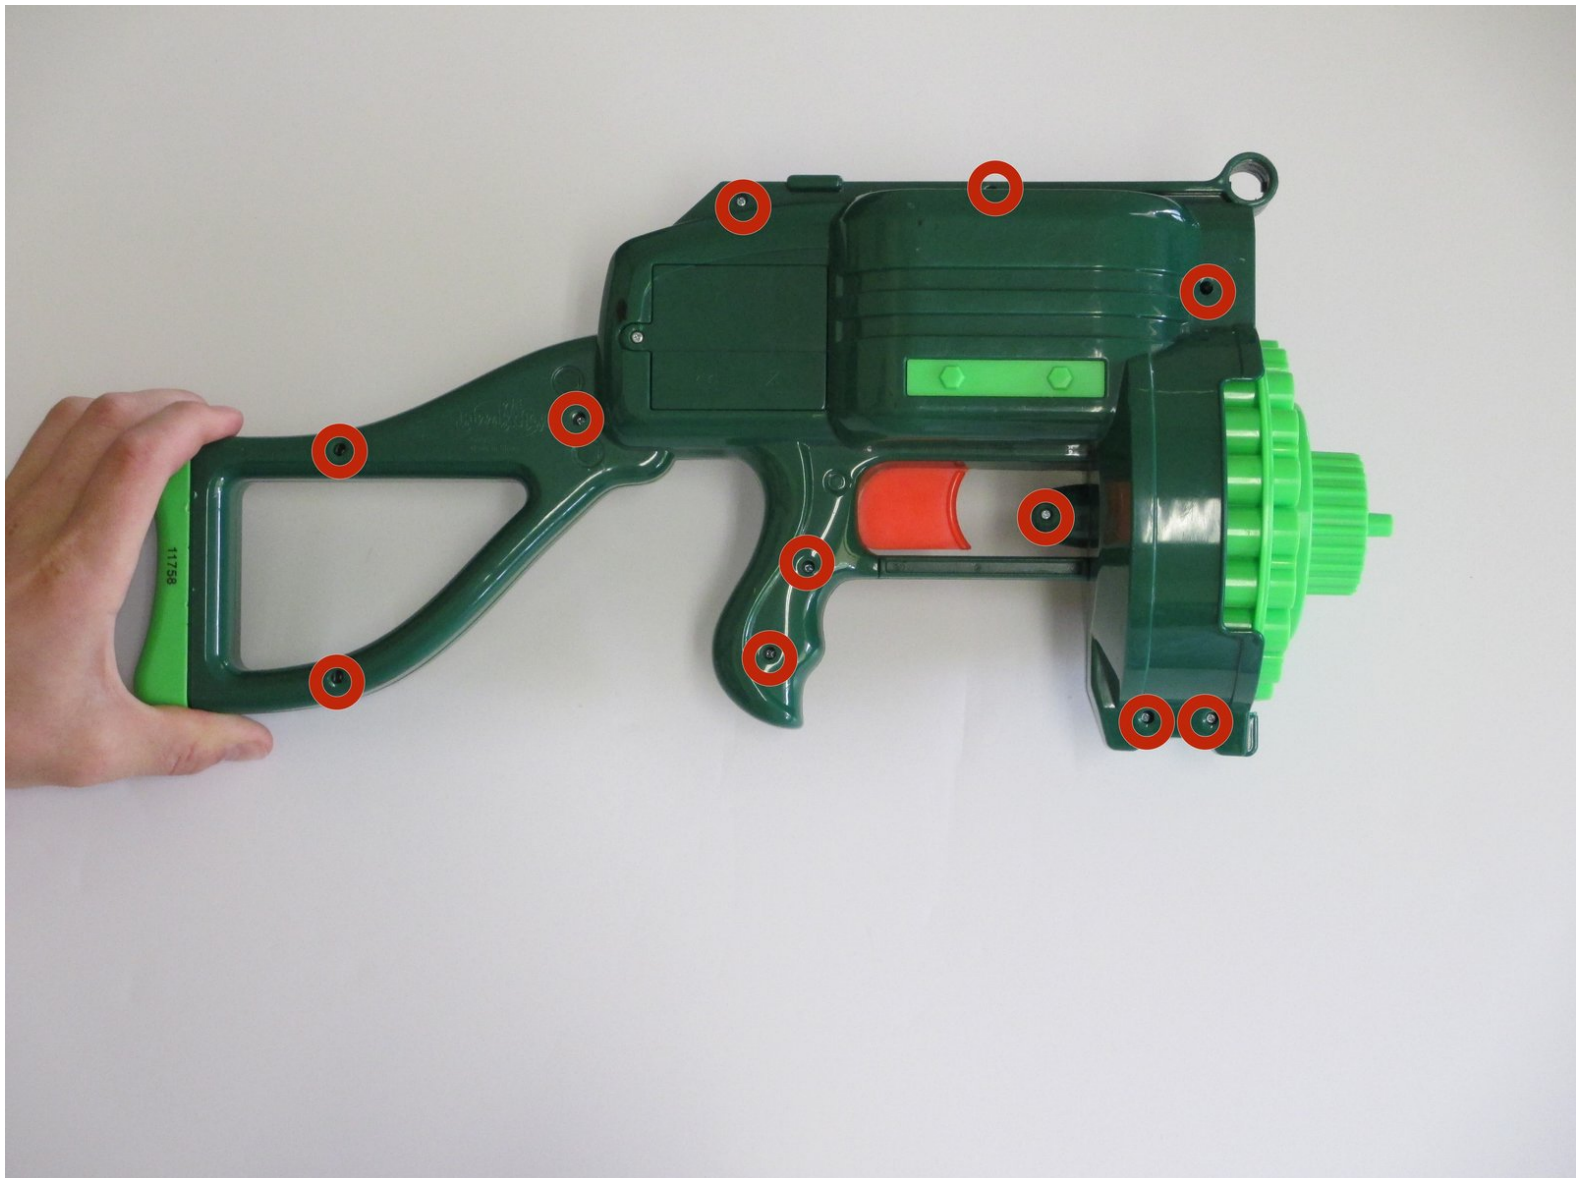

INTRODUCTION


This guide will help teach you how to remove and replace the drum of the gun that holds your darts. This require splitting the gun into two halves and requires a #00 Phillips head screwdriver, but is otherwise fairly simple. Just follow the steps and get your gun back into fighting shape!



TOOLS:




- [Phillips #00 Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Splitting the Gun into Two Halves

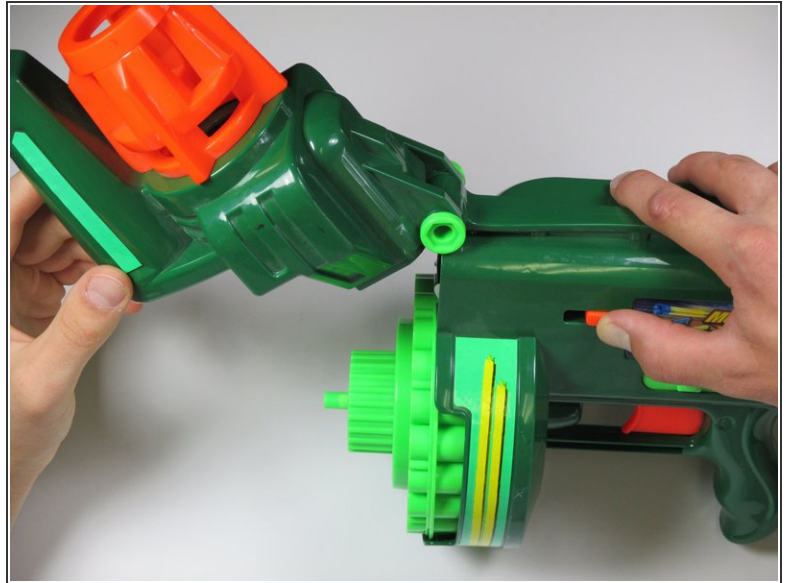

- Locate the orange slider on the front side of the gun.
- Pull the orange slider towards the back of the gun while lifting up on the nose the gun.

Step 2

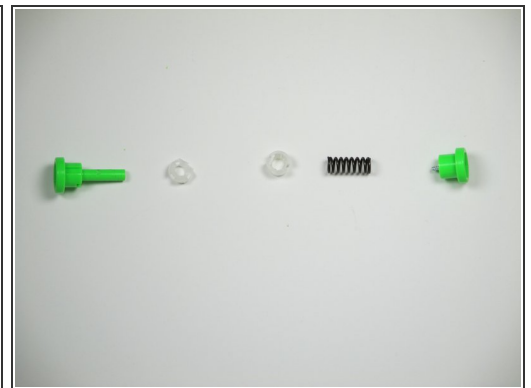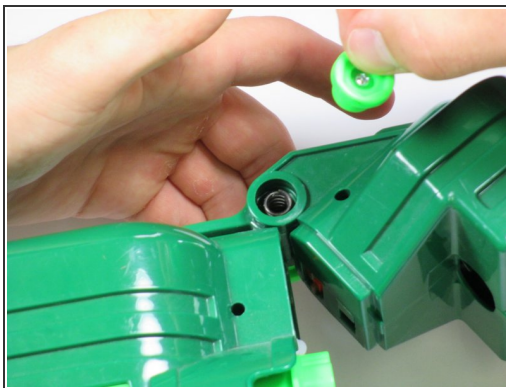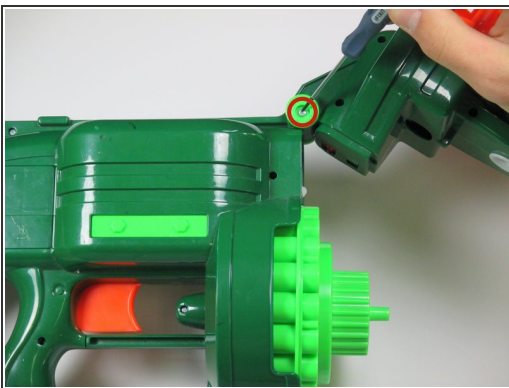

- Remove the single 1/8 in. screw at the junction of the body and the nose using a Philips #00 Screwdriver.
 - Remove all parts within the chamber to be able to completely detach the nose of the gun.
- ☑ Be careful to keep track of all the components for reassembly.

Step 3 — Ammo Drum



- Remove the 1/16 in. screws using a Phillips #00 Screwdriver as indicated in the photo on the left.
- Remove the 1 mm screw on the battery lid using a Philips #1 Screwdriver as indicated in the photo on the left.

Step 4



- Carefully spread apart the two halves of the gun, and lift out the ammo drum.

To reassemble your device, follow these instructions in reverse order.