



Troy-Bilt TB675 EC Air Filter Replacement

The air filter traps dirt from entering the engine of the string trimmer. It must be cleaned/replaced to ensure the engine runs properly.

Written By: Brian Hall



INTRODUCTION

This guide outlines how to properly remove the air filter on a Troy-Bilt TB675 EC. The guide also explains how to clean the air filter.



TOOLS:

- [Compressed Air](#) (1)
-

Step 1 — Air Filter



- Remove the air filter housing by turning the plastic screw counterclockwise with your hand.

Step 2 — Remove the air filter that lays beneath the housing you removed in step 1




- Remove the air filter that lays beneath the housing you removed in step 1.
- ⓘ It is good practice to inspect your air filter for tears or other defects. If defects are found it is best to replace the air filter rather than to clean it.

Step 3



- Clean the air filter thoroughly by spraying compressed air through the filter.

 Be sure to spray the compressed air away from you in order to prevent injury.

Step 4



- Wipe all oil and water residue around the air filter casing with a paper towel or rag.

Step 5



- Place the air filter and air filter casing back in its original position.
- ⓘ Be sure the air filter and housing are lined up correctly.

Step 6



- Complete the maintenance by turning the screw clockwise with your hand until it is fully secured.