



Spy Net Ultra Vision Goggles Micro SD Card Replacement

This guide will illustrate how to replace the micro SD card in the Spy Net Ultra Vision Goggles.

Written By: Andrew Gittens



INTRODUCTION

 
 
You may wish to remove the microSD card in order to view photos and videos on a computer, or to replace the card if it is faulty. For tips on how to recognize a faulty microSD card, please refer to the [Troubleshooting Page](#).



PARTS:


- [Micro SD card](#) (1)
-

Step 1 — Micro SD Card

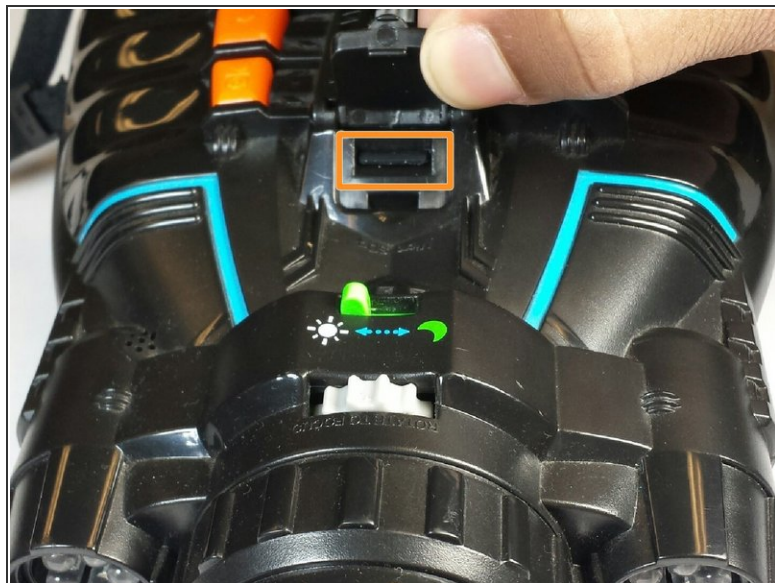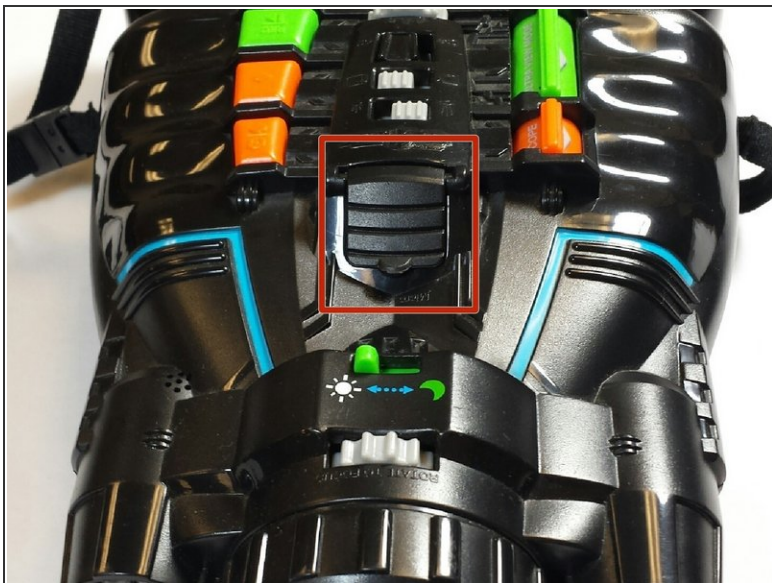

- The micro SD card is located underneath this plastic flap located on top of the device.
- Lift open the flap to reveal the microSD card.

 Step 2 — Remove the microSD Card

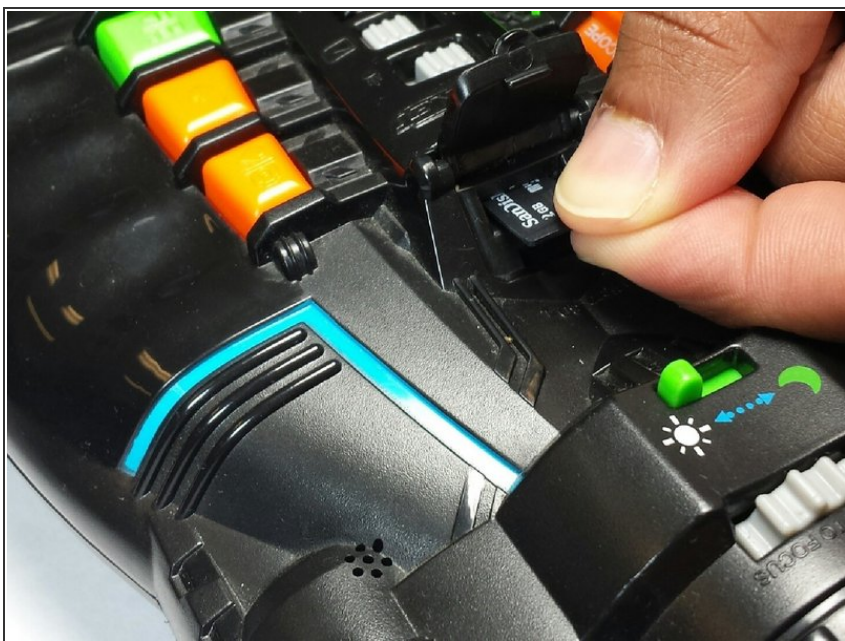

- Press the microSD card in to eject it.
 - Pull the microSD card out of the device.
- i** The micro SD card may be a little difficult to slide out.

To reassemble your device, follow these instructions in reverse order.