



# Daisy Model 10 Carbine Firing Mechanism Replacement

Replacing your firing mechanism so that you can shoot your Carbine.

Written By: Trelawney Bullis



---

## INTRODUCTION

To replace the firing mechanism of Carbine, you need to disassemble most of the Carbine. There will be oil in a few places and a few small parts.

---

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Removing Screws



 Make sure the safety is on!

- Place the carbine with the saddle ring and leather thong facing upwards.
  - Locate the screw head on the cocking lever.
  -  There should be one on either side of the saddle ring and one on the cocking lever assembly.
  - Place a #2 Phillips Screwdriver in the 11/16ths of an inch, matte black screw on the cocking lever assembly. Twist with a counter-clockwise motion.
  - Completely remove the screws.
-  Be wary of the black washers on the other side of the Carbine. Be sure to keep track of them once they fall out after the screws are removed

## Step 2 — Removing the Lever



- Remove the cocking lever by placing your dominant hand's fingers through the cocking lever handle.
- With your fingers in the handle, slide the lever towards the butt of the carbine.
- Finally, pull the cocking lever and carbine in opposite directions to replace the cocking lever.

### Step 3 — Removing Side Screws



- Once the cocking lever is removed, place the carbine with the saddle ring facing upwards.
- Locate the screws on either side of the saddle ring.
- Using a #2 Phillips Screwdriver, twist in a counter-clockwise motion.
- Completely remove the two screws.

**⚠** Be wary of the two washers on the other side of the Carbine. Be sure to keep track of them once they fall out after the screws are removed

## Step 4 — Removing Top Screw



- Now rotate your carbine so the top of the carbine is visible.
- Locate the screw located above the saddle ring where the black metal meets the wooden butt.
- Using the same #2 Phillips Screwdriver, twist in a counter-clockwise motion.
- Completely remove the screw.

 Be wary that this screw is a different length, and that there is no washer attached to it.

## Step 5 — Removing the Butt



- Place your dominant hand on the wooden butt and your other hand on the metal barrel.
- Slide the butt away from the Carbine until it is free of the metal tongs.
- ⓘ The butt will not slide out quickly. The metal tongs grip the butt so that it is a tight fit.

## Step 6 — Remove the Firing Mechanism



- Wiggling the firing mechanism and pull it out of the back opening of the carbine.
- ⚠ There is oil on the firing mechanism and it may be slippery.
- ⓘ The firing mechanism may take some maneuvering and time to get out of the gun.

To reassemble your device, follow these instructions in reverse order.