




HP Chromebook 14 LCD Screen Replacement

Replacing the LCD Screen on a HP Chromebook 14-SMB.

Written By: Mario

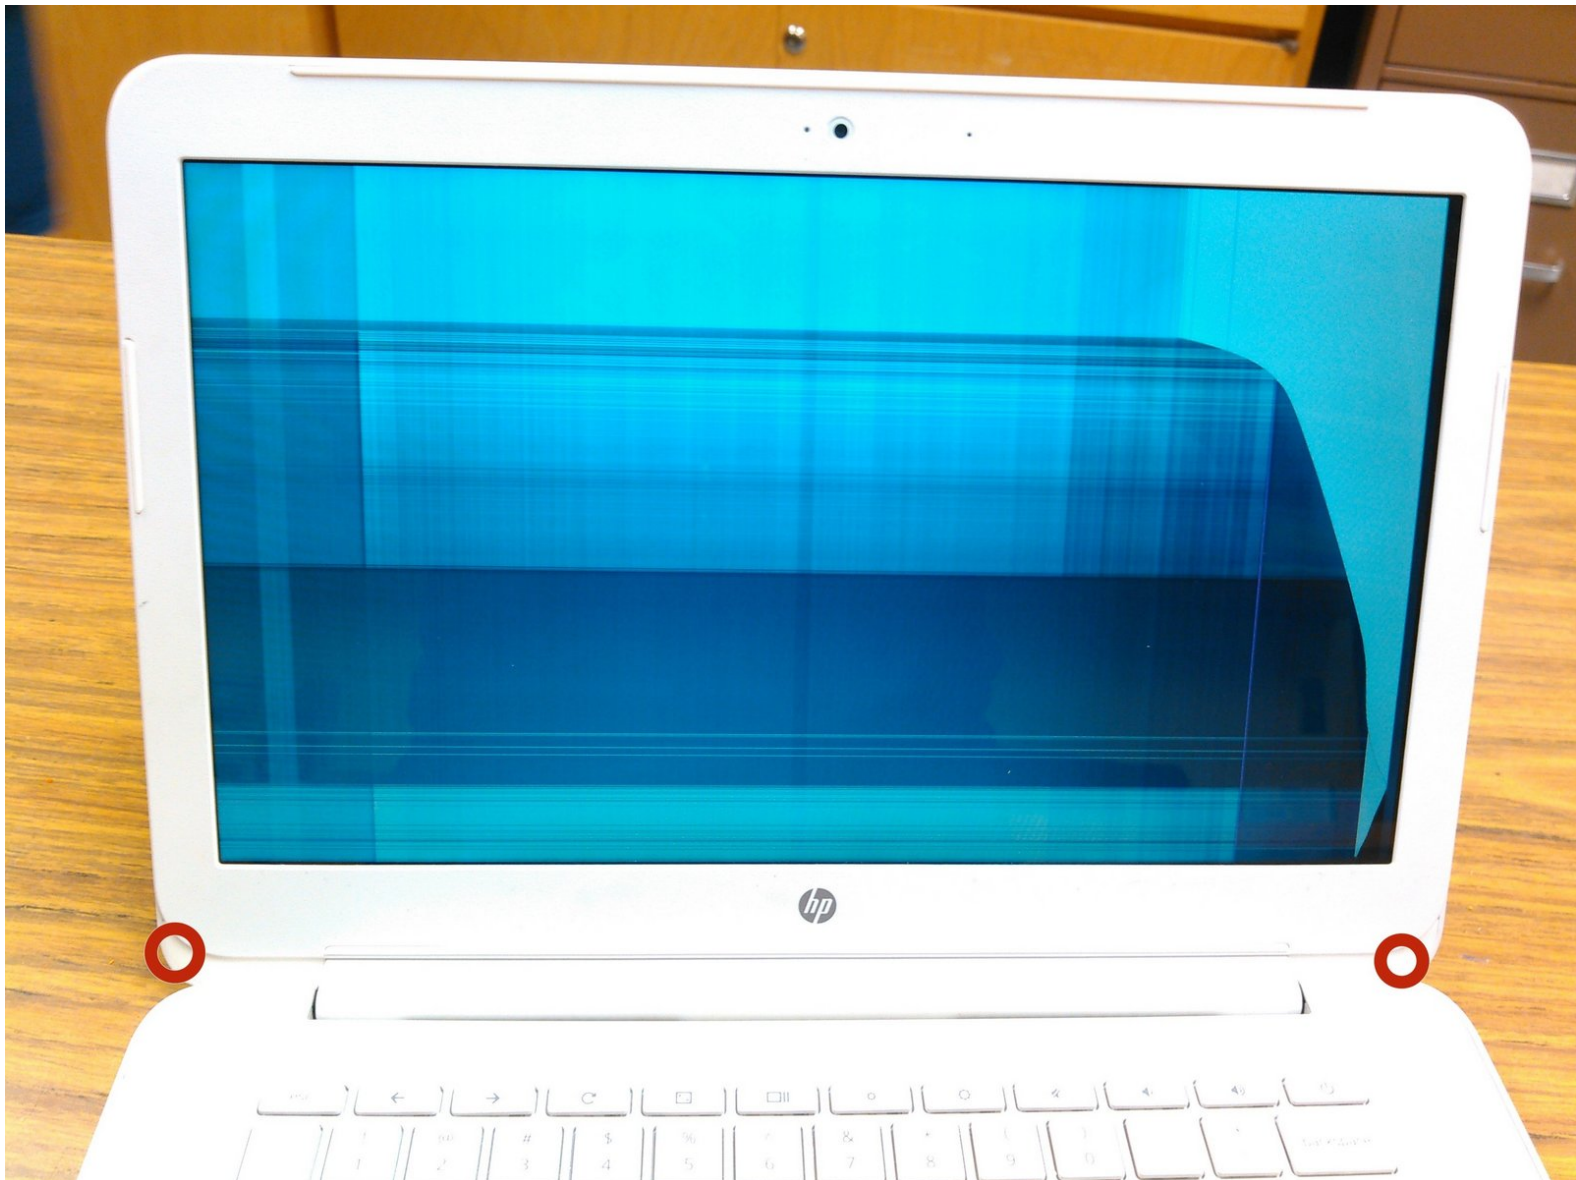

INTRODUCTION

Replace a cracked or faulty display on your HP Chromebook 14.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)



PARTS:


- [HP Chromebook 14" LCD Screen](#) (1)

Step 1 — Nylon Covers

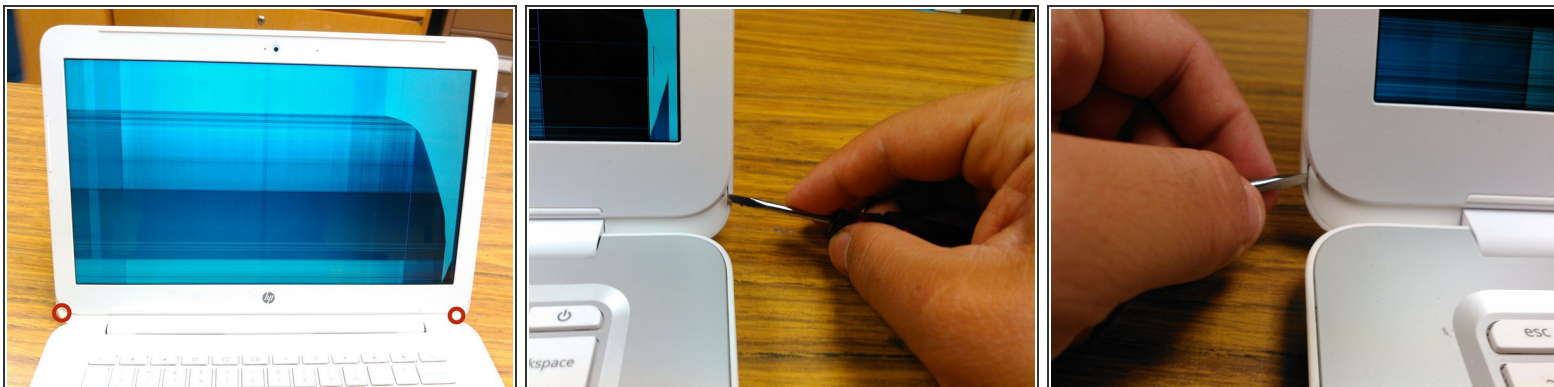


- Pry up the nylon covers at the lower left and right of the display to reveal two Phillips head screws.

Step 2 — Remove The Screws. That we Just Exposed.

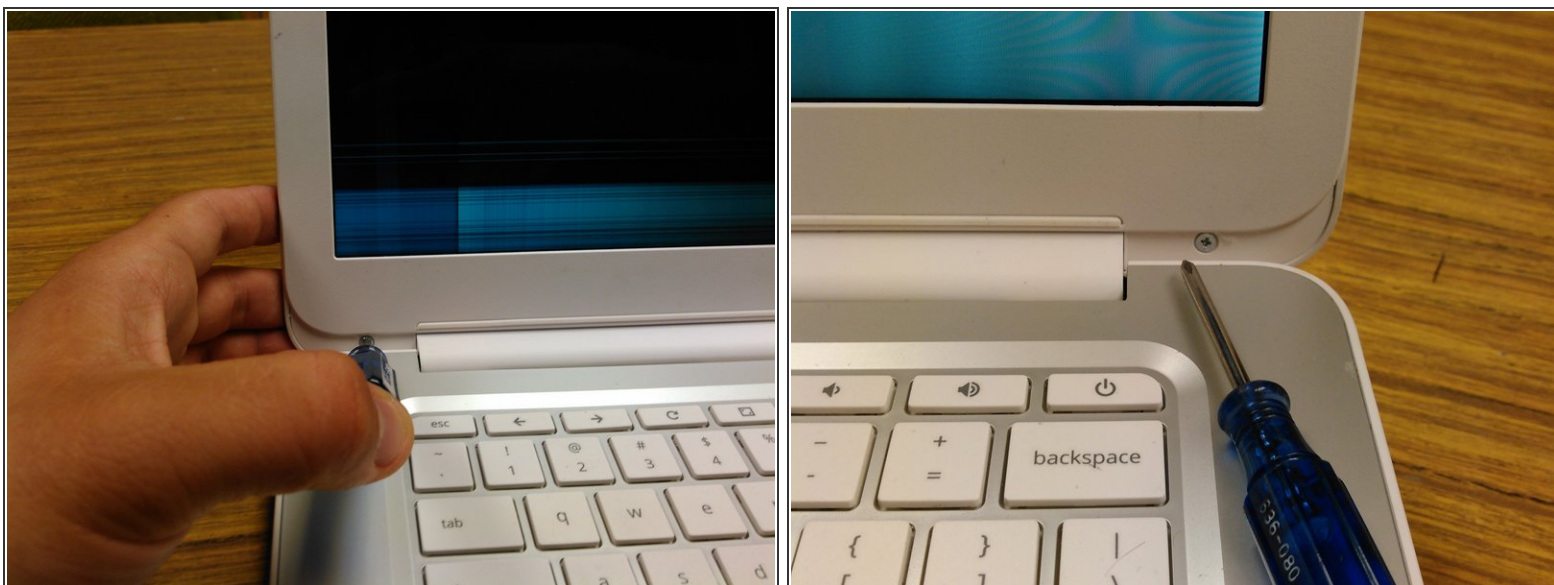

- Remove the two screws.

Step 3 — Pry & Remove Sceen

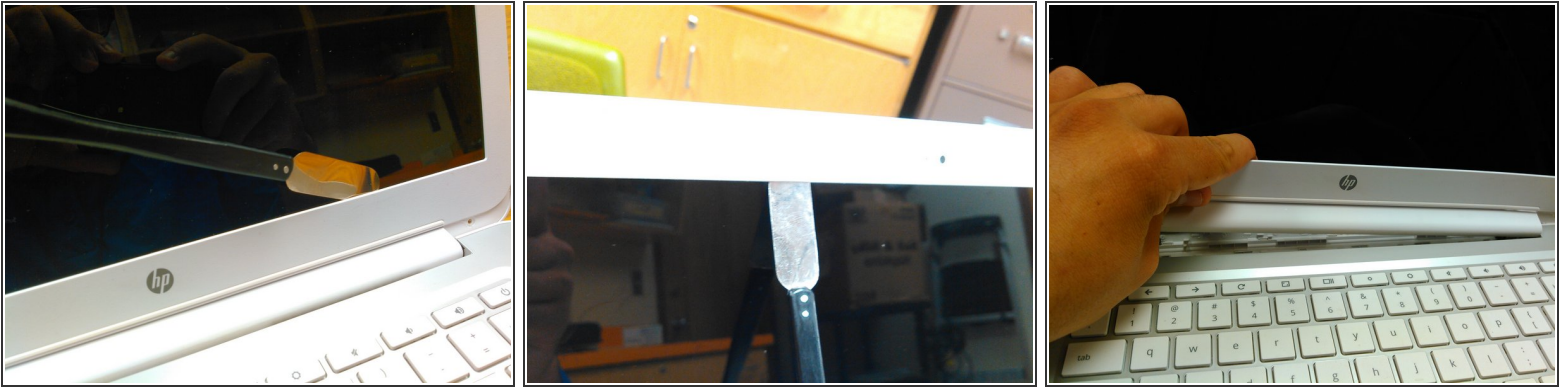

⚠ Be careful when prying not to damage the bezel.

- Use a spudger or other pry tool to pry up the bezel from all sides.
- Once all the clips are free, pull the bezel from the bottom.

Step 4 — Remove Four Phillips Screws Holding LCD Panel



- Remove the four screws securing the display panel.

Step 5 — Disconnect Connector/Ribbon From LCD Panel



- Let the display panel rest on the keyboard.
 - The highlighted area is taped to the back of the display panel. Pry up to free it.
- ⚠ Be careful not to damage the connector—pull it back gently to disconnect.

To reassemble your device, follow these instructions in reverse order.