



# Connect Four Electronic Handheld Battery Replacement

If your Connect Four fails to turn on, it is...

Written By: Kamaryn



## INTRODUCTION

If your Connect Four fails to turn on, it is likely that the battery has died, which will need to be replaced. Replacing the battery will make the device work properly. The Connect Four Electronic Handheld requires 1 AA battery. To access the battery compartment on the back of the device, you will need a Phillips head screwdriver.



### TOOLS:

Mako Driver Kit - 64 Precision Bits (1)



### PARTS:

1 AA Battery (1)

### Step 1 — Ensure the device is off.



- Make sure the Connect Four Electronic Handheld is off by allowing it to shut off automatically.

## Step 2 — Removing the battery casing.



- Using a Phillips head screwdriver, remove the (9.1mm length) #2 screw in the middle of the battery casing.
- Slide the cover off and remove the battery.

## Step 3 — Replacing the battery.



- Put in the new AA battery, ensuring that the negative end slides into the spring.

---

To reassemble your device, follow these instructions in reverse order.