



# Disassembling Nerf Recon CS-6 Shell

Disassembly of the gun by splitting the outer shell in half to reach the inner parts.

Written By: Asad Qureshi



---

## INTRODUCTION

This is a prerequisite to replacing any other piece. This guide involves removing most of the screws in the shell and splitting the gun along the middle seam.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Remove Magazine



- ⓘ Skip this step if magazine is already removed.
- Pull slide back.
- Pull backwards on release buttons and slide magazine out.
- Push slide back forward and pull trigger.

## Step 2 — Remove Visible Screws



- Use the Phillips #0 Screwdriver to remove these 9 screws.
- All screws marked in red are 9.6 mm Phillips #0 screws.
- Note that left most screw is longer than the rest and is a 18.6 mm Phillips #0 screw.

### Step 3 — Remove Hidden Screws



- Pull slide back to reveal more screws.
  - Remove these 2 screws.
  - Push slide forward.
  - Pull trigger to release compression of the main spring.
  - Screws are 9.6 mm Phillips #0.
- i** Pulling the trigger will keep spring from launching out of the gun when the two halves are separated.

## Step 4 — Remove Plunger Cap




- Remove the screws on the plunger cap.
- Tug the plunger cap off.
- Screws are 9.6 mm Phillips #0.

## Step 5 — Remove Slide Screws



- Remove the 2 screws on the slide.
- Screws are 9.6 mm Phillips #0.
- Hold the two halves of the gun together to prevent any springs from launching out.

## Step 6 — Split the Gun in Half

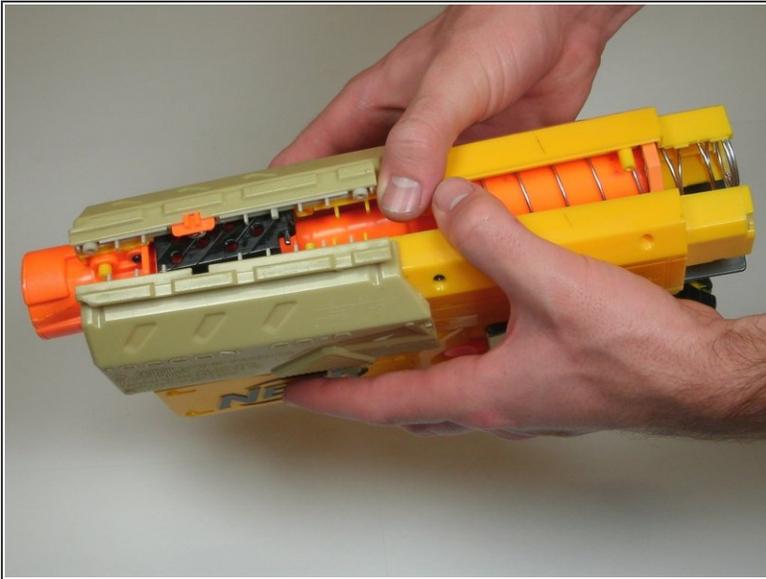

- Pull the gun apart at the middle seam.

⚠ Watch for any springs that might launch out.

To reassemble your device, follow these instructions in reverse order.