




# Sony Reader Touch Edition PRS-600 Stylus Tip Replacement

This guide will show you how to replace the tip of a stylus if it is damaged.

Written By: Terrika Ngobili


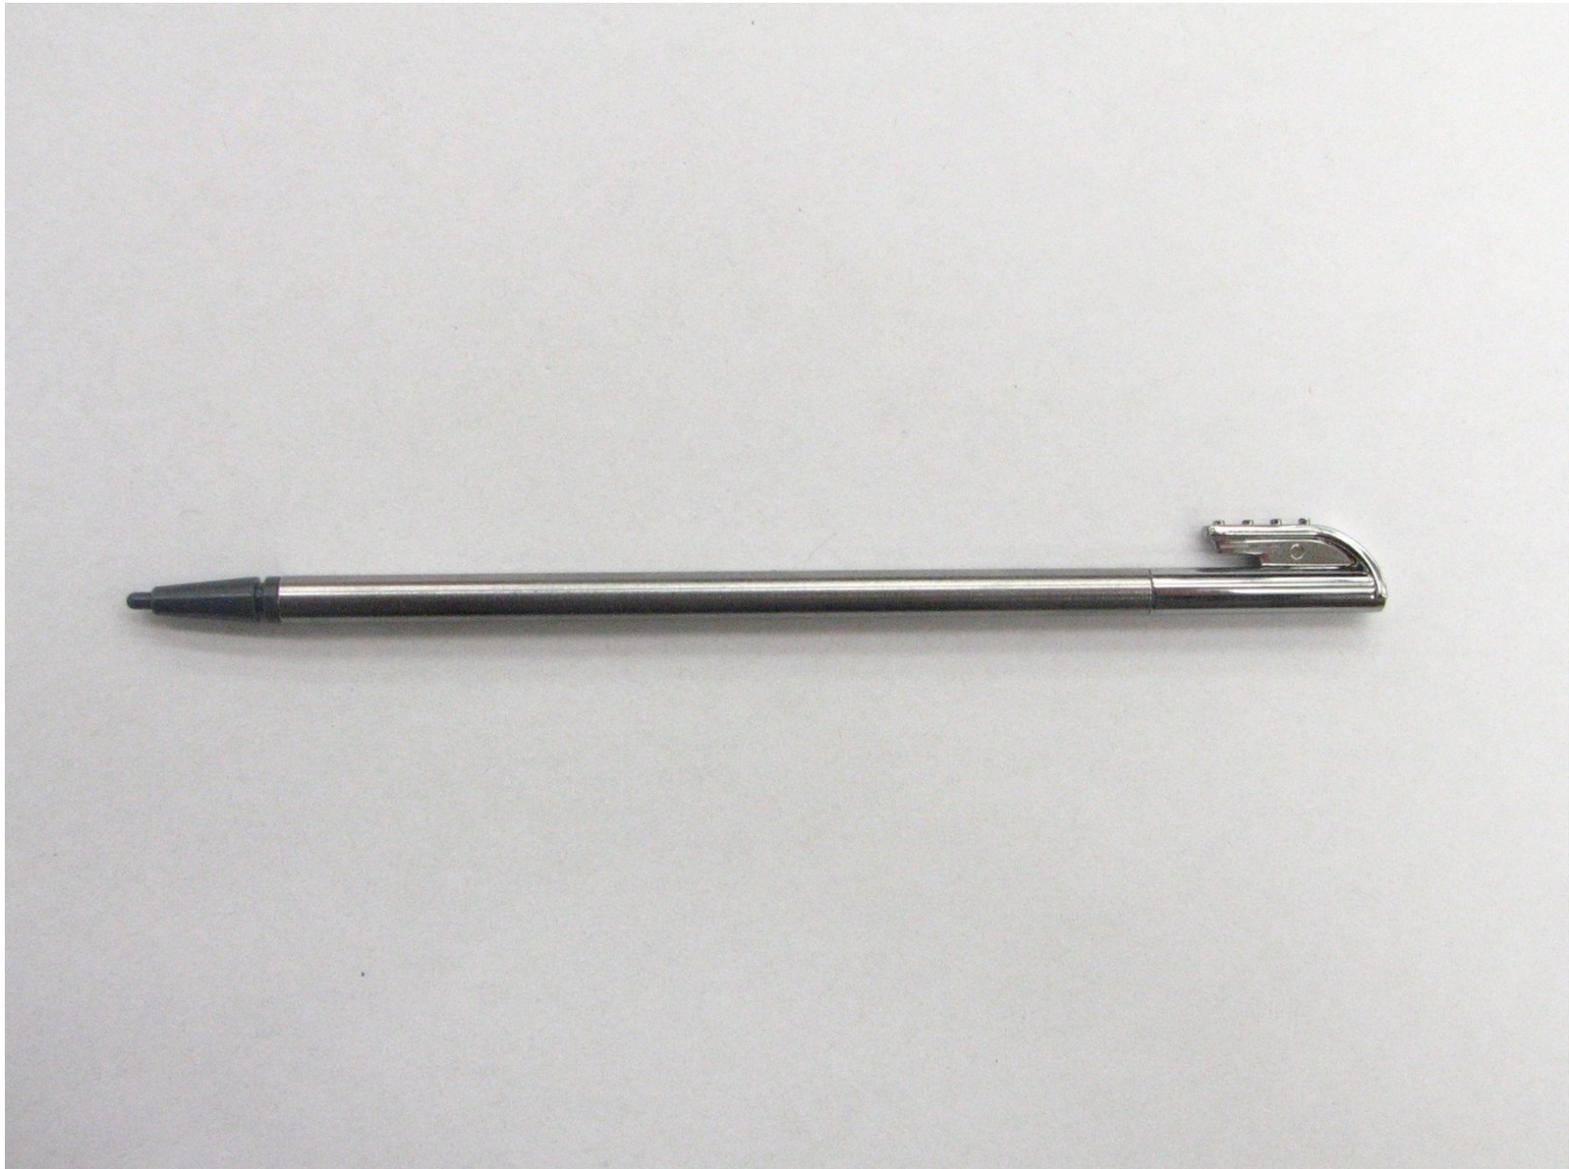


## Step 1 — Stylus Tip



- Remove the stylus from its side pocket in the device.

## Step 2

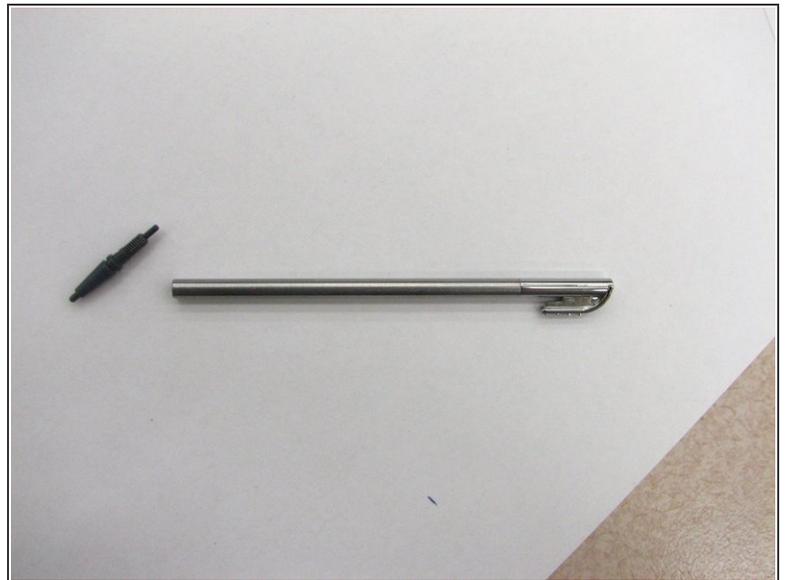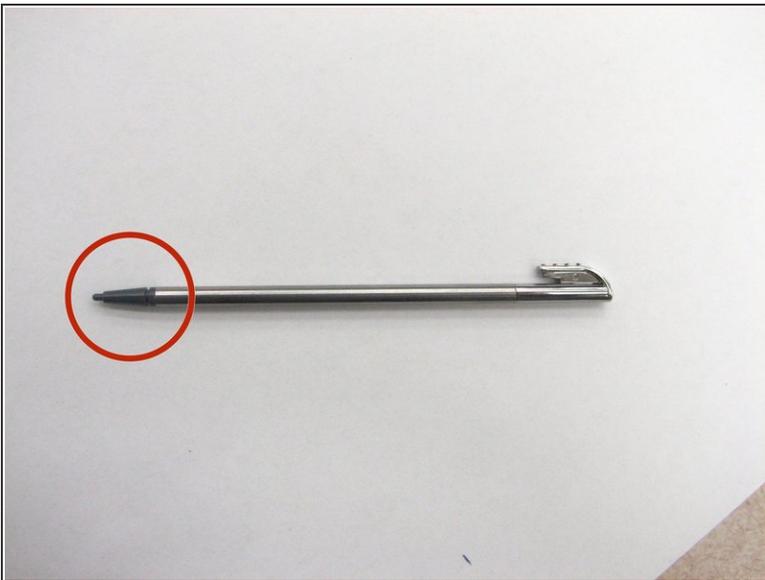

- Turn the grey tip of the stylus counter-clockwise until it is completely removed.

To reassemble your device, follow these instructions in reverse order.