



# BLU Dash Music 4.0 Speaker Replacement

This guide will teach you how to replace your speakers.

Written By: Lioma Terrero Soto





## TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Soldering Iron](#) (1)
- [Solder](#) (1)



## PARTS:

- [Blu Dash 4.0 Speaker](#) (1)

## Step 1 — Remove the Back Cover





- Use the plastic opening tool or your fingernail to pry off the back cover.

## Step 2 — Remove the Battery




- Use the plastic opening tool or your fingernail to pry off the battery from the top right corner.

### Step 3 — Remove the Screws

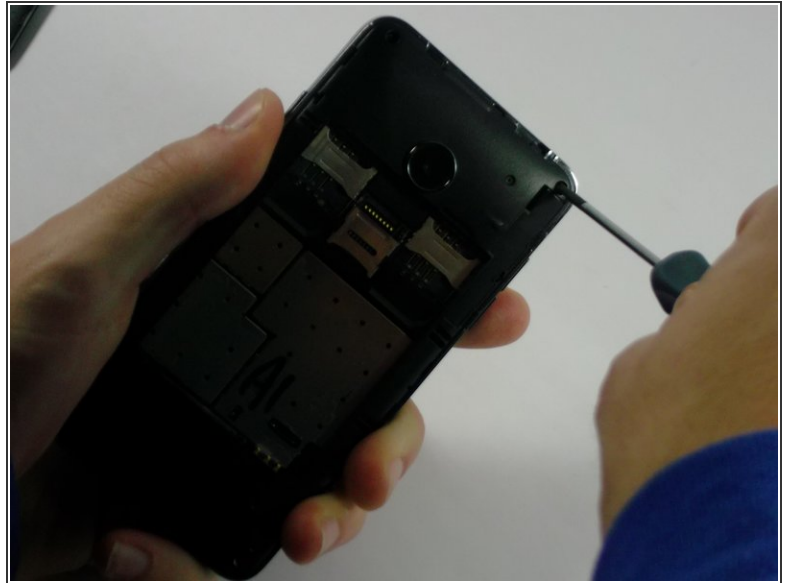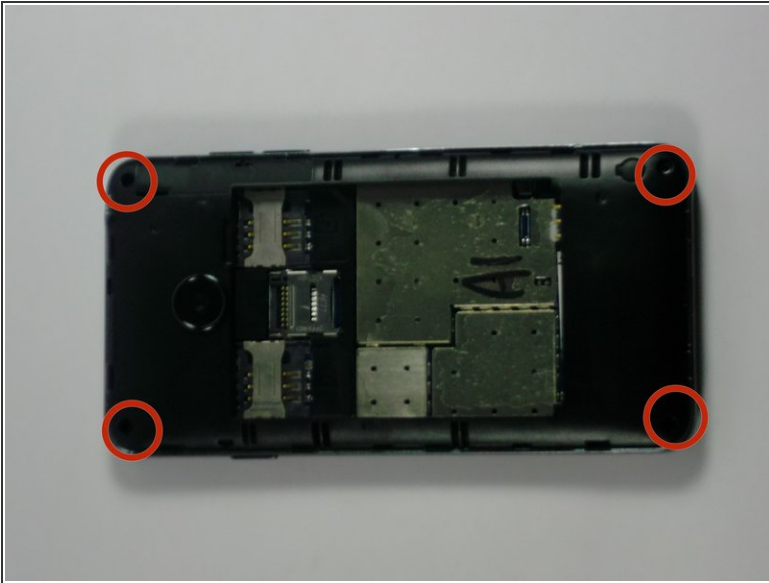

- Use a screwdriver to remove each of the four screws.




### Step 4 — Remove the Inner Cover

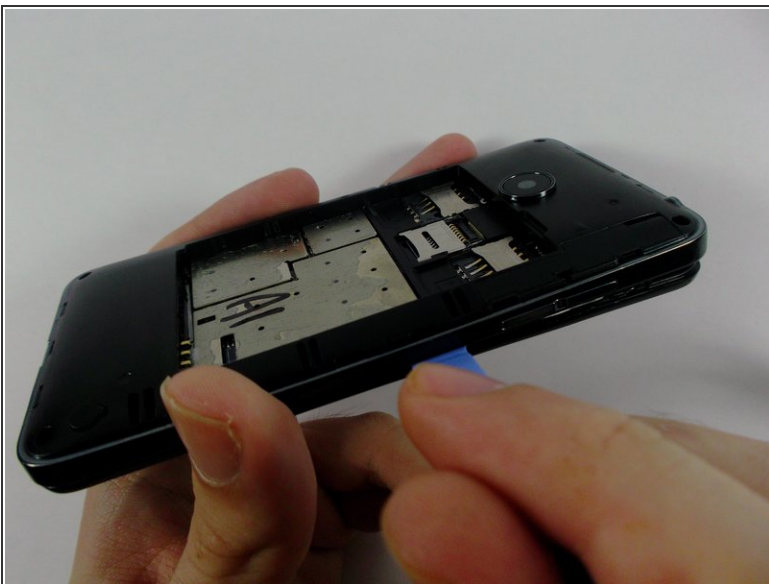

- Take the plastic opening tool and insert it in the crease between the front screen and the inner back cover.
- Slide the plastic opening tool along the edge of the phone to pry the covers apart.




## Step 5 — Remove the Speaker

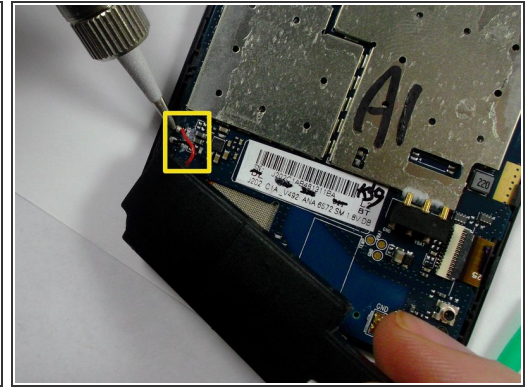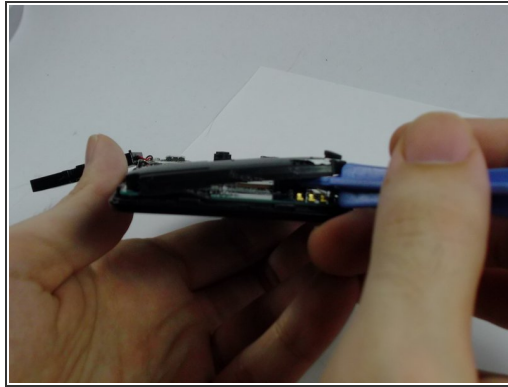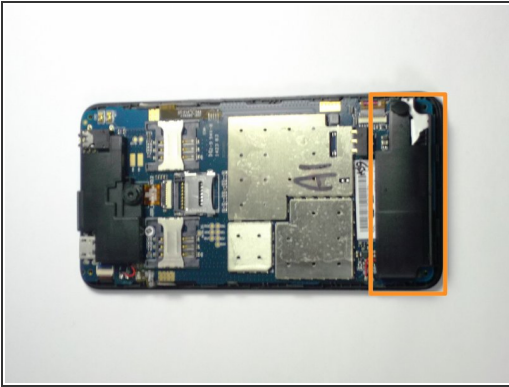

- Locate the speaker
- Wedge the plastic opening tool between the speaker and the circuit board. Gently pry the speaker off the circuit board.
- Use a soldering iron to remove the two wires that connect the speaker to the circuit board.

## Step 6 — Place the New Speaker

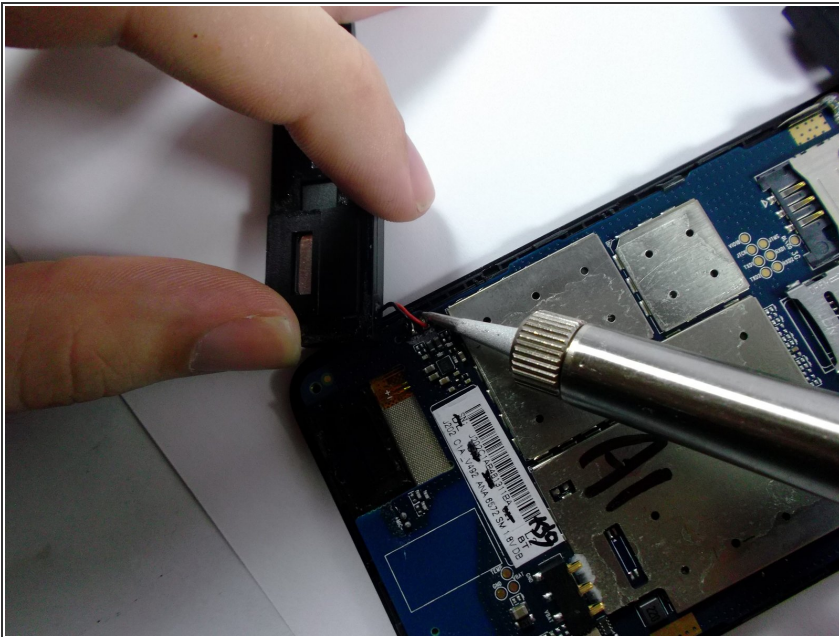

- Use the soldering iron to connect the two wires, that are attached to the speaker, to the circuit board.
- Place the new speaker onto the circuit board.

To reassemble your device, follow these instructions in reverse order.