



iPhone 6 Plus Speaker Replacement

Prereq only, battery and logic board removed.

Written By: Walter Galan



INTRODUCTION



Prereq only, battery and logic board removed.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Speaker

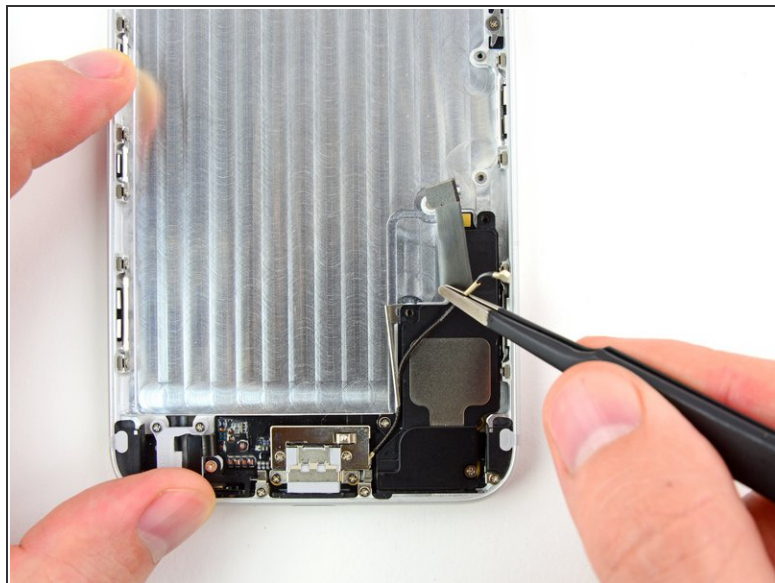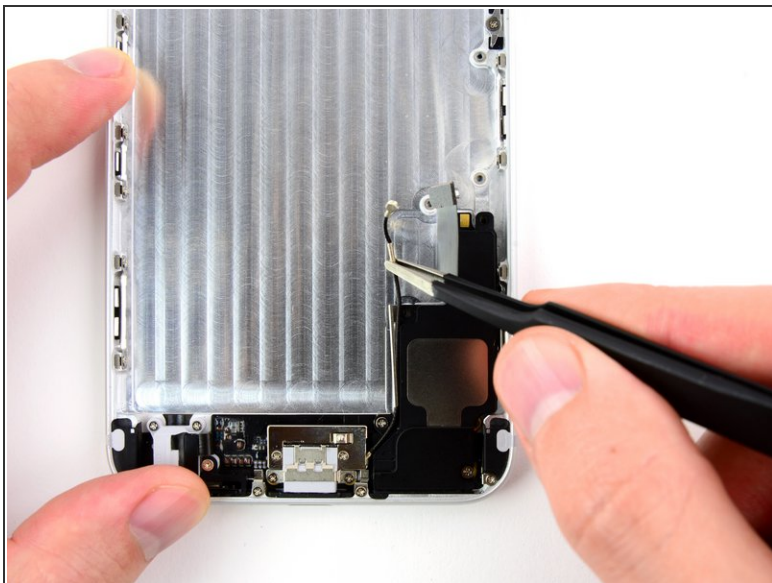


- Grasp the antenna connector with a pair of tweezers and carefully begin de-routing it from its channel on the speaker.

Step 2




- ⓘ To fully de-route the antenna connector, you may need to gently pull back the metal clip securing it to the speaker assembly.

Step 3

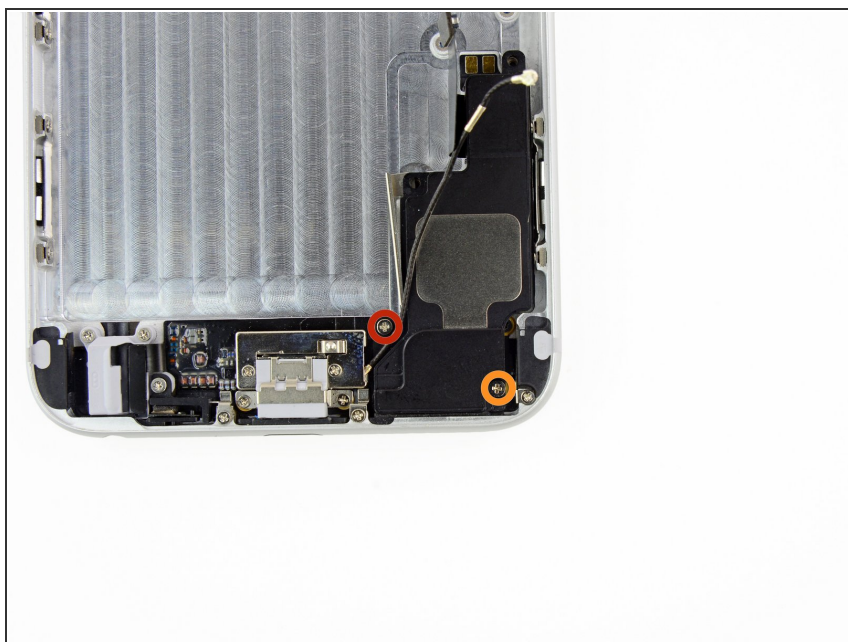

- Remove the following screws securing the speaker to the rear case:
 - One 2.3 mm Phillips #00 screw
 - One 2.8 mm Phillips #00 screw

Step 4

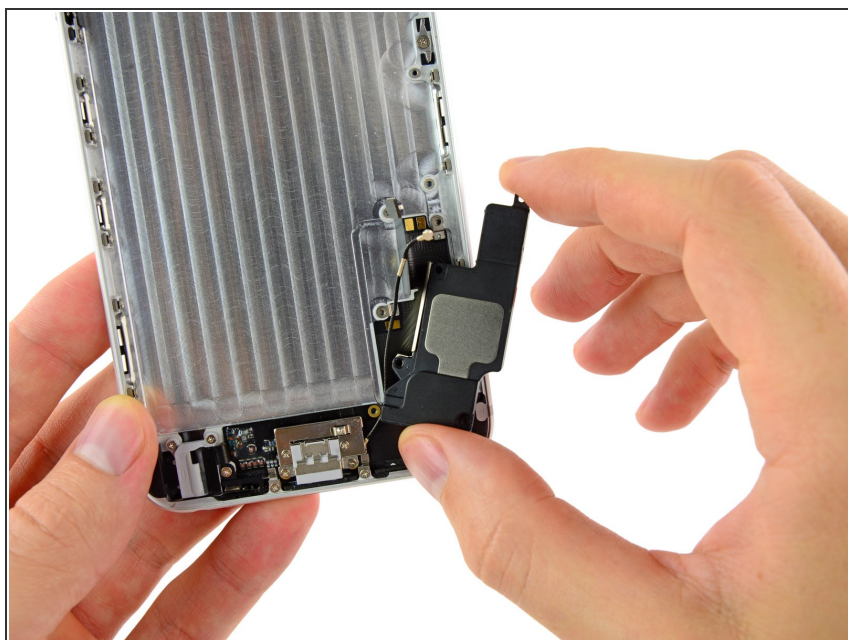

- Lift and remove the speaker out of the iPhone.

To reassemble your device, follow these instructions in reverse order.