


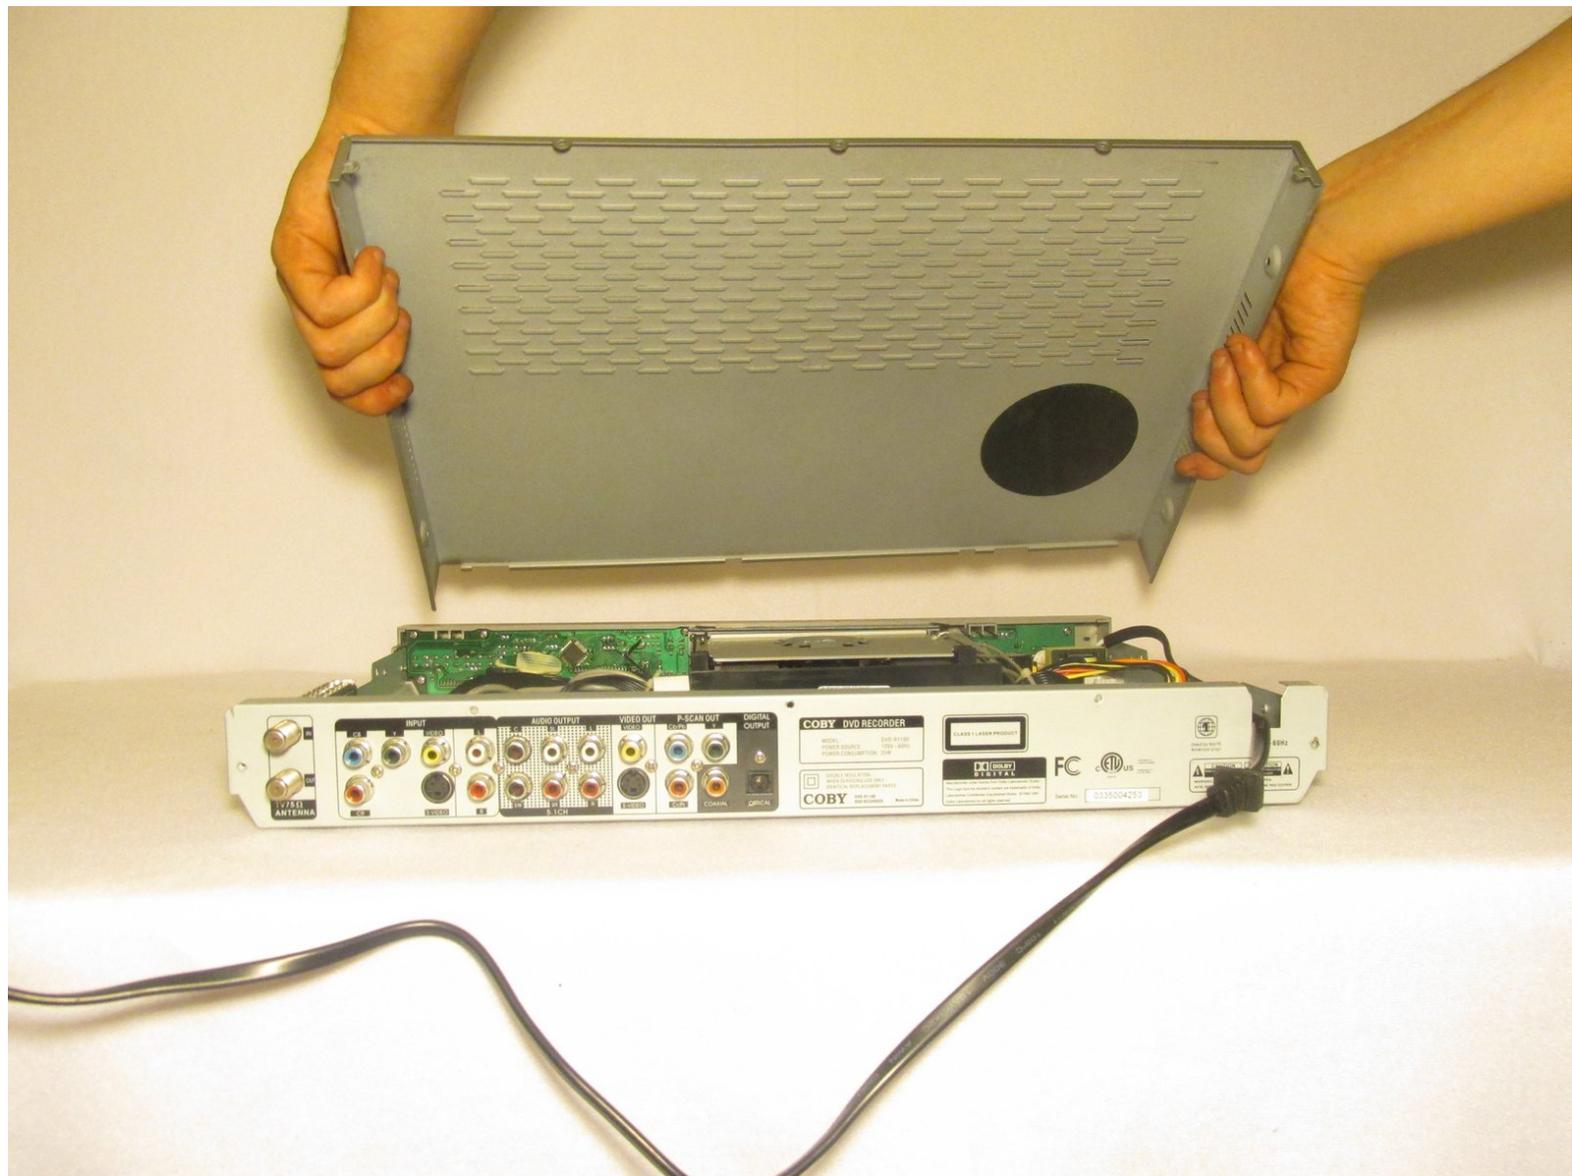

# Coby DVD-R11000 Outer Casing Replacement

A step-by-step guide how to remove the top portion of the Coby DVD-R1000 player, allowing access to the interior components.

Written By: Andrew



 **TOOLS:**


- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Outer Casing



- Remove the four 1cm screws, two on each side, of the DVD player with the Phillips #1 screwdriver.
- Remove the five 1cm screws on the back of the DVD player with the Phillips #1 screwdriver.
- ⓘ It is not required to remove the other seven screws in the middle between the I/O ports.

## Step 2

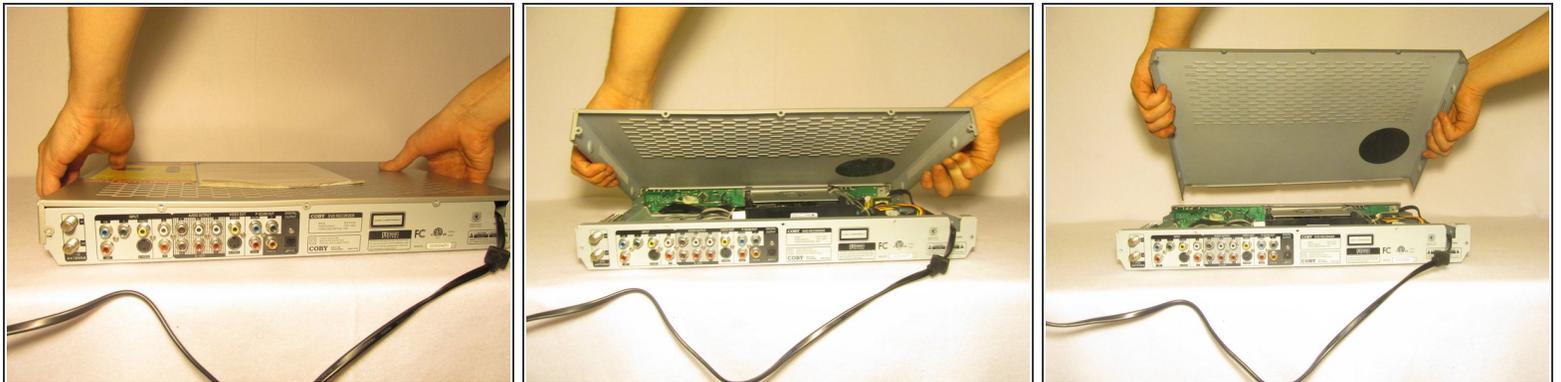

- Position the DVD player so that the back is facing you
- Grab underneath the sides of the DVD player and lift the front of it upwards.
- Carefully pull the top of the casing off

To reassemble your device, follow these instructions in reverse order.