



HTC Rhyme MicroSD Card Replacement

This guide will show you how to locate and replace your phone's SD Card.

Written By: Elizabeth Steiner





PARTS:

- [16 GB SD Card](#) (1)
-

Step 1 — Take the back off



- Slide the bottom back casing off the phone.

Step 2 — Replace the SD Card



- Slide the SD card out of its casing.
- Put your new SD card in the casing, making sure that it is facing the correct way, as shown in the photos.

To reassemble your device, follow these instructions in reverse order.