



HTC Rhyme Battery Replacement

This guide will show you how to replace the battery in your HTC Rhyme.

Written By: Elizabeth Steiner



INTRODUCTION

You will disassemble the phone in order to take the battery out and replace it.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [Metal Spudger](#) (1)



PARTS:

- [HTC Rhyme Battery](#) (1)

Step 1 — Removing Back Cover

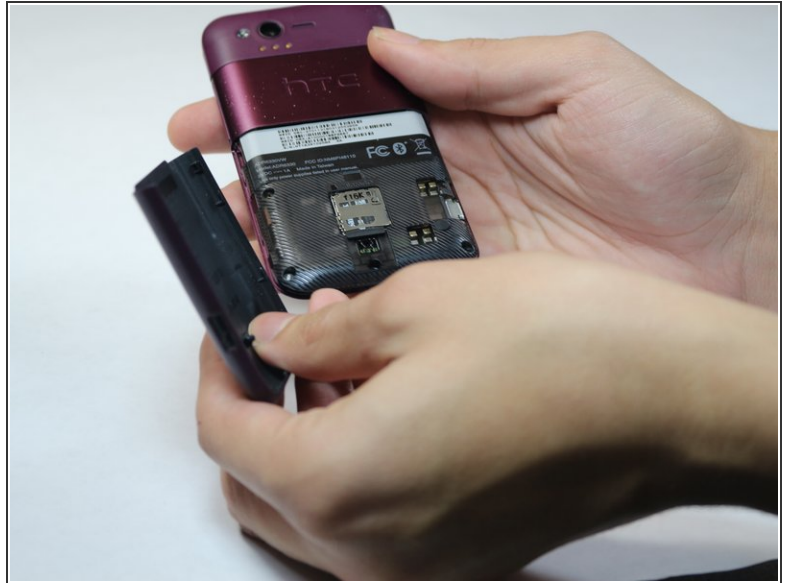


- Slide the bottom back cover off of the phone.

Step 2




- Locate the four screws on the plastic cover and unscrew them.

Step 3

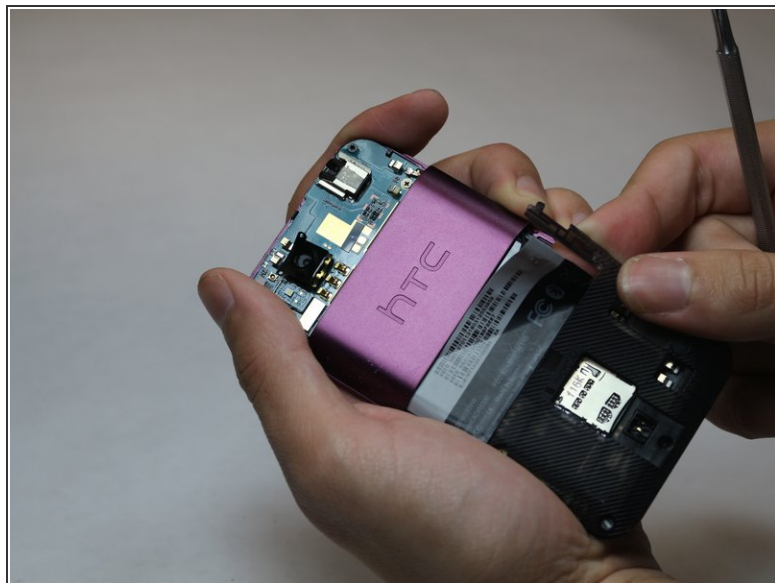


- Pry the sticker off from the sides.
- ⓘ You can use a metal spudger to do this.
- Peel the sticker off with your hands.

Step 4 — Remove the plastic cover

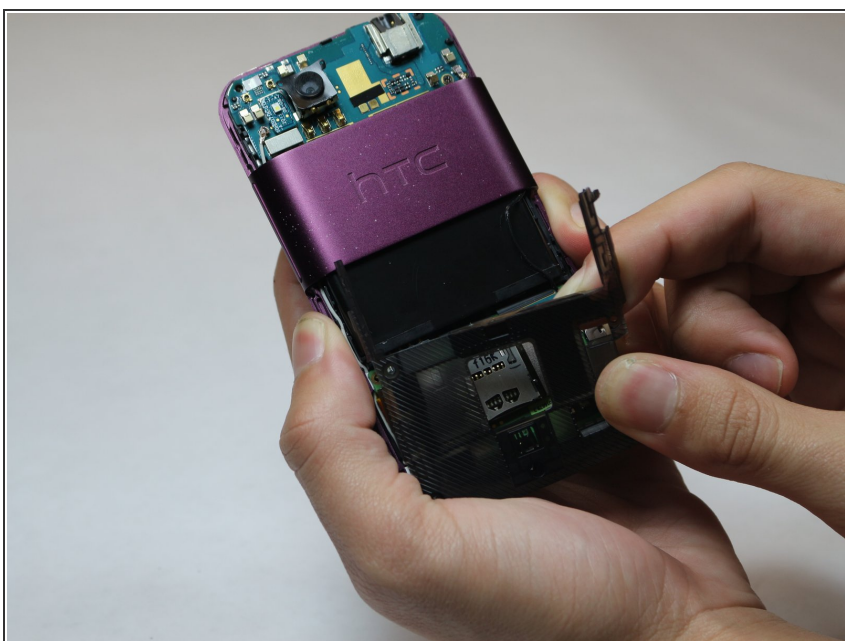



- Remove the plastic cover using your hands.

Step 5

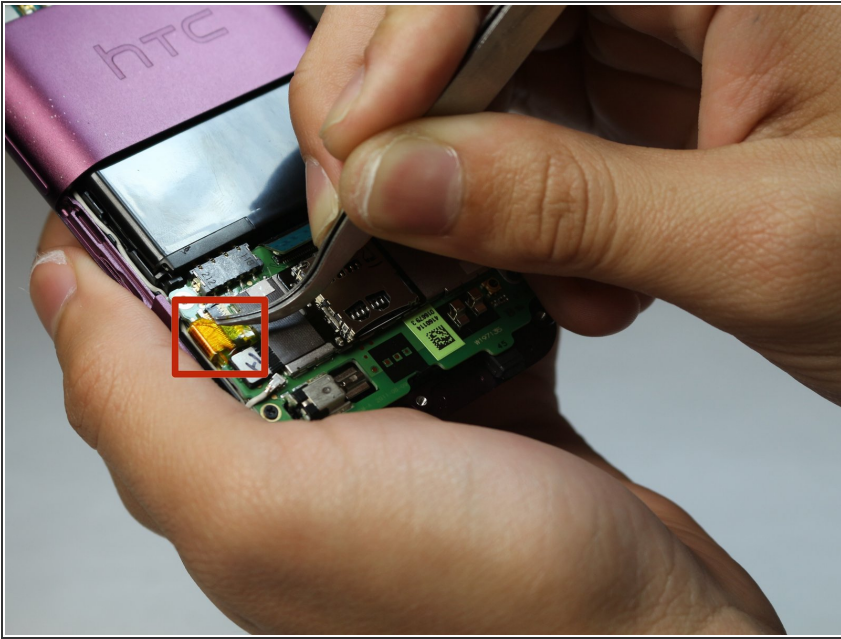


- Remove the yellow ribbon.

Step 6

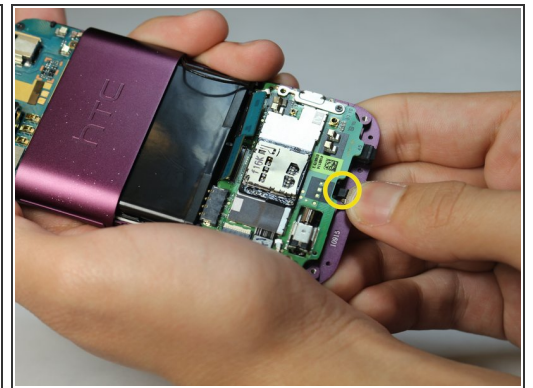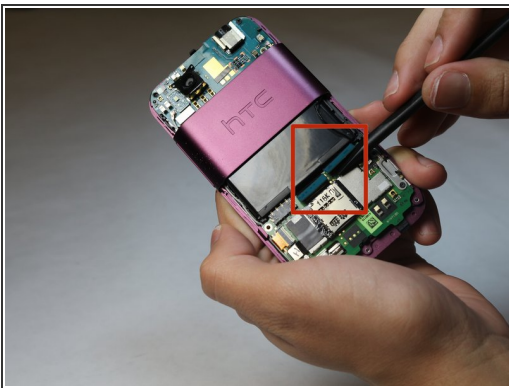



- Lift up the blue flaps underneath the battery.
- Lift up the black flap at the top of the phone.
- Lift up the black flap at the bottom of the phone.

Step 7 — Remove the Motherboard

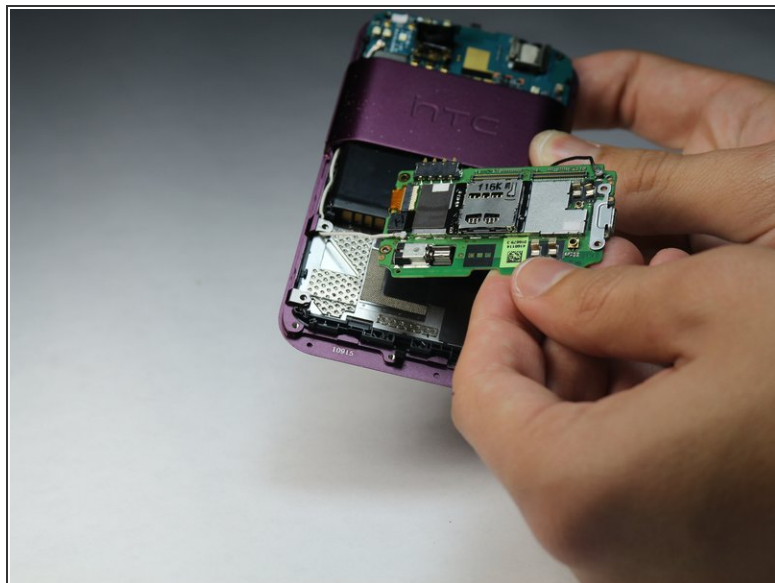




- Remove all 4 screws.
- Carefully remove the motherboard with your hands.

Step 8 — Removing the Back Plastic Casing

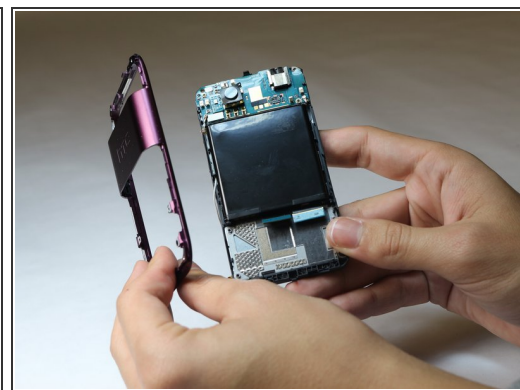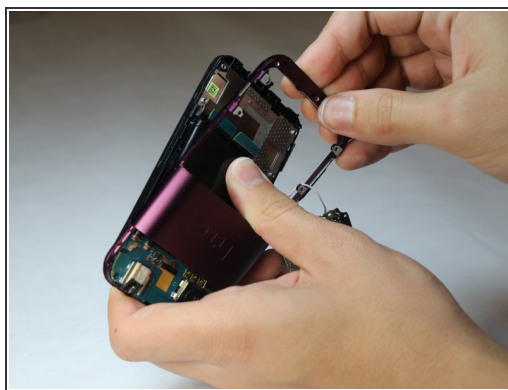

- Pry the back plastic casing off with your hands.

Step 9 — Removing the Battery

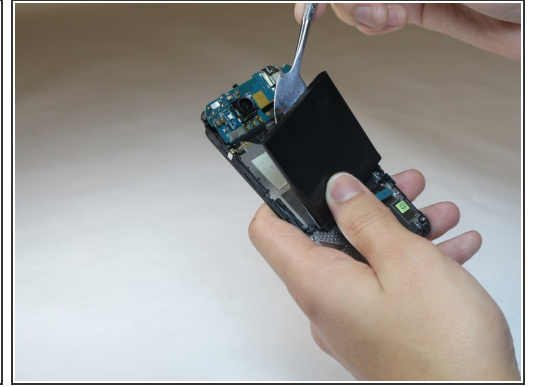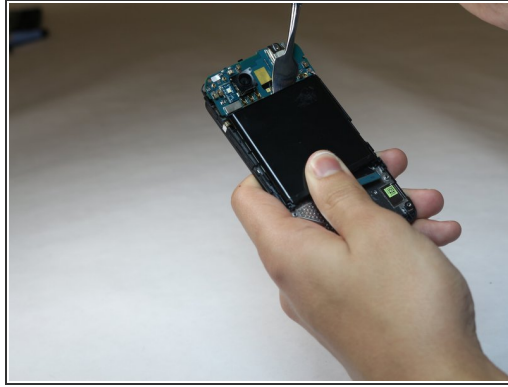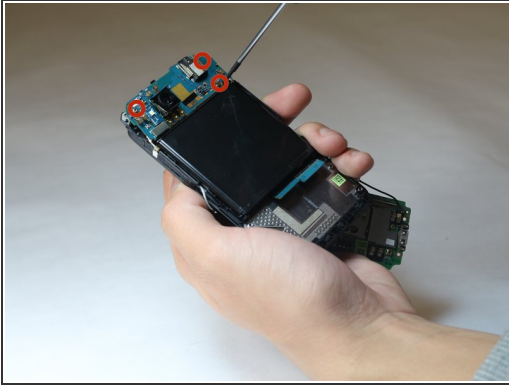

- Remove the screws.
- Use a metal spudger to remove the battery.

To reassemble your device, follow these instructions in reverse order.