




Nerf Recon CS-6 Trigger Replacement

With this guide, you can replace the trigger or the trigger spring.

Written By: Pam Ruffner

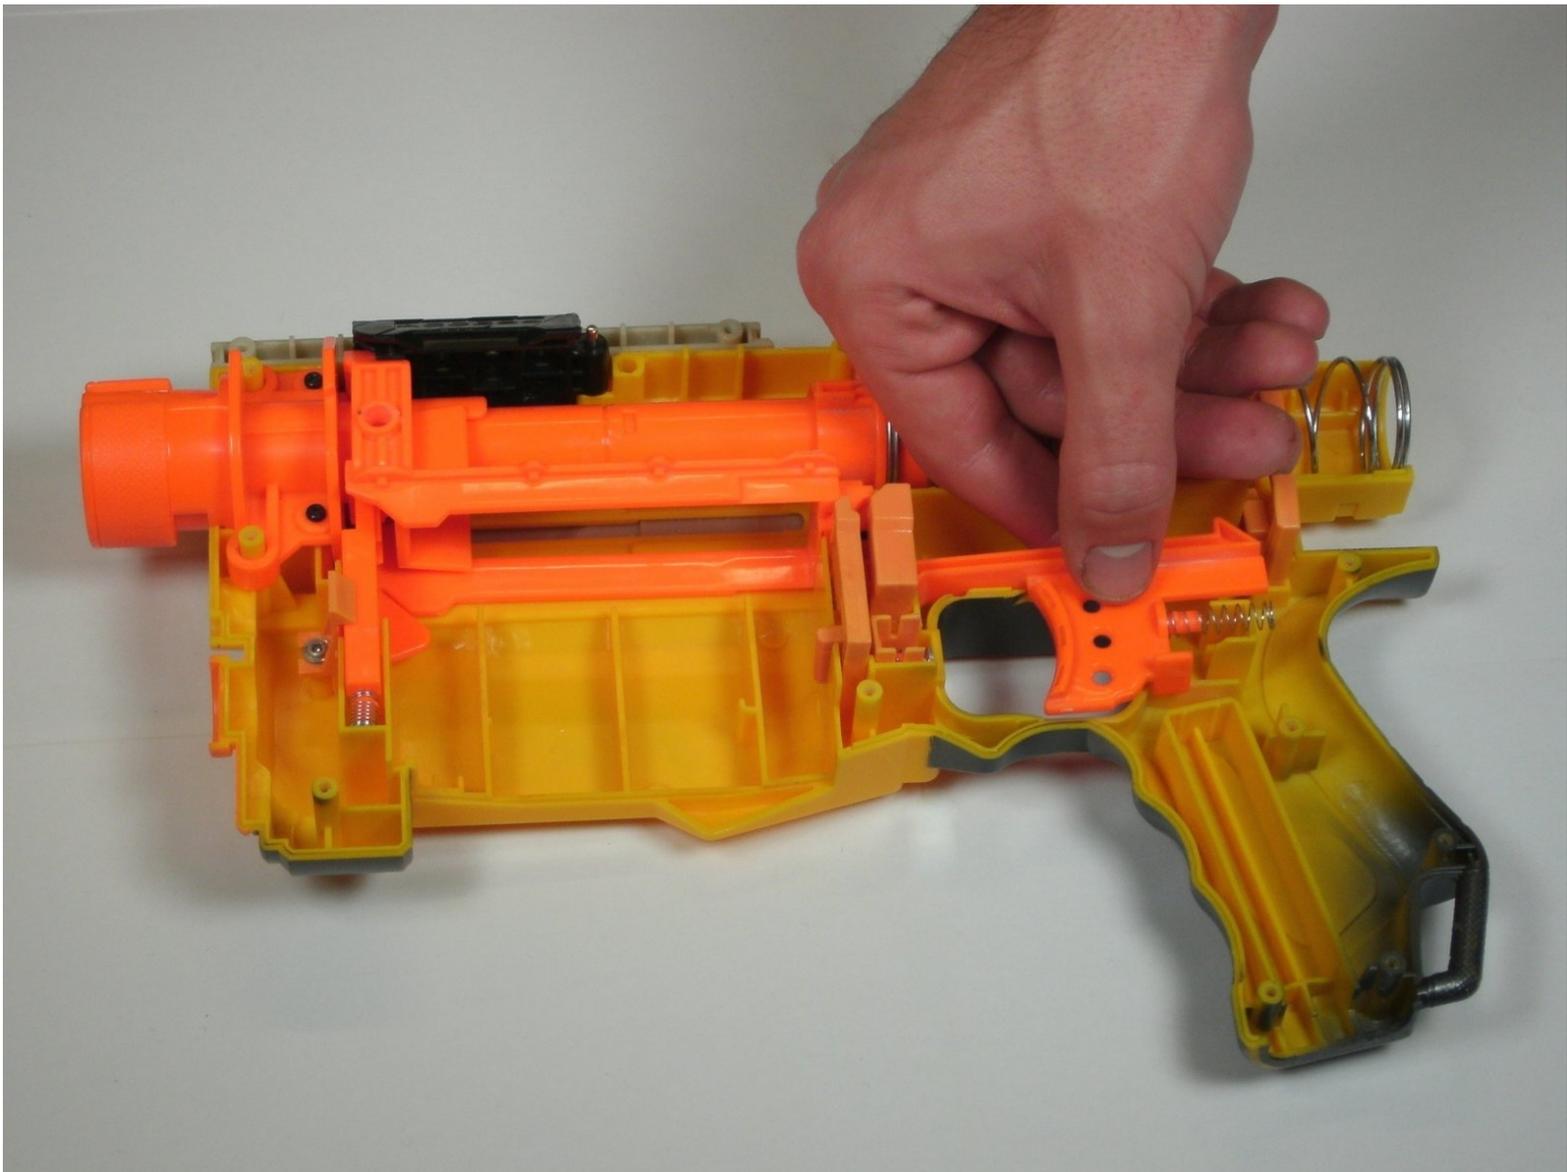

 **TOOLS:**

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Remove Magazine



- ⓘ Skip this step if magazine is already removed.
- Pull slide back.
- Pull backwards on release buttons and slide magazine out.
- Push slide back forward and pull trigger.

Step 2 — Remove Visible Screws



- Use the Phillips #0 Screwdriver to remove these 9 screws.
- All screws marked in red are 9.6 mm Phillips #0 screws.
- Note that left most screw is longer than the rest and is a 18.6 mm Phillips #0 screw.

Step 3 — Remove Hidden Screws



- Pull slide back to reveal more screws.
 - Remove these 2 screws.
 - Push slide forward.
 - Pull trigger to release compression of the main spring.
 - Screws are 9.6 mm Phillips #0.
- i** Pulling the trigger will keep spring from launching out of the gun when the two halves are separated.

Step 4 — Remove Plunger Cap




- Remove the screws on the plunger cap.
- Tug the plunger cap off.
- Screws are 9.6 mm Phillips #0.

Step 5 — Remove Slide Screws



- Remove the 2 screws on the slide.
- Screws are 9.6 mm Phillips #0.
- Hold the two halves of the gun together to prevent any springs from launching out.

Step 6 — Split the Gun in Half

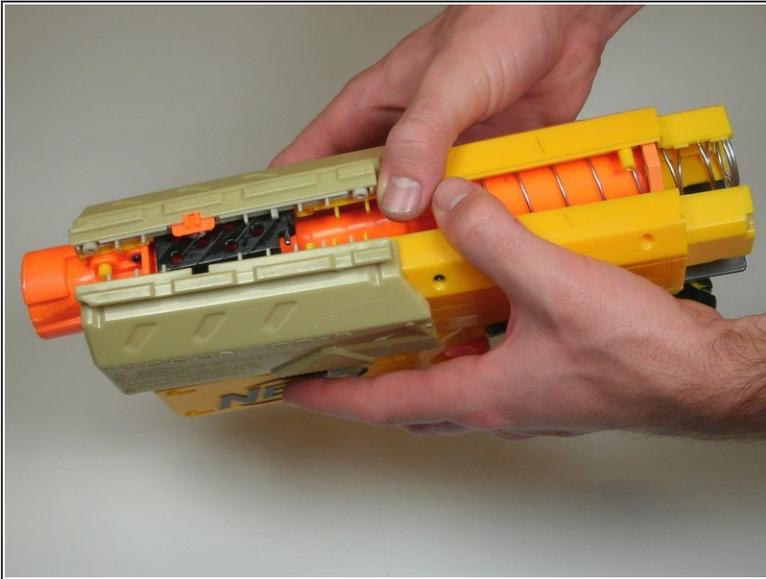

- Pull the gun apart at the middle seam.
- ⚠ Watch for any springs that might launch out.

Step 7 — Remove Trigger



- Lift trigger up out of the gun.
- From here, the trigger or the trigger spring can be replaced.

To reassemble your device, follow these instructions in reverse order.