



Samsung DVD-HD850 Player Cover Replacement

This guide will teach you how to disassemble the cover of the DVD player

Written By: Devon Clements



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Cover




- with the front of the device facing you, turn the device 180 degrees so the back panel of the device is facing you

Step 2 — Locate and remove screws



- locate the three (3) screws on the back panel of the device that are implanted in the device
- to remove the screws, use the tool(s) listed above (right underneath the introduction) and twist the screws counter-clockwise to remove them from the device

Step 3 — Remove Cover

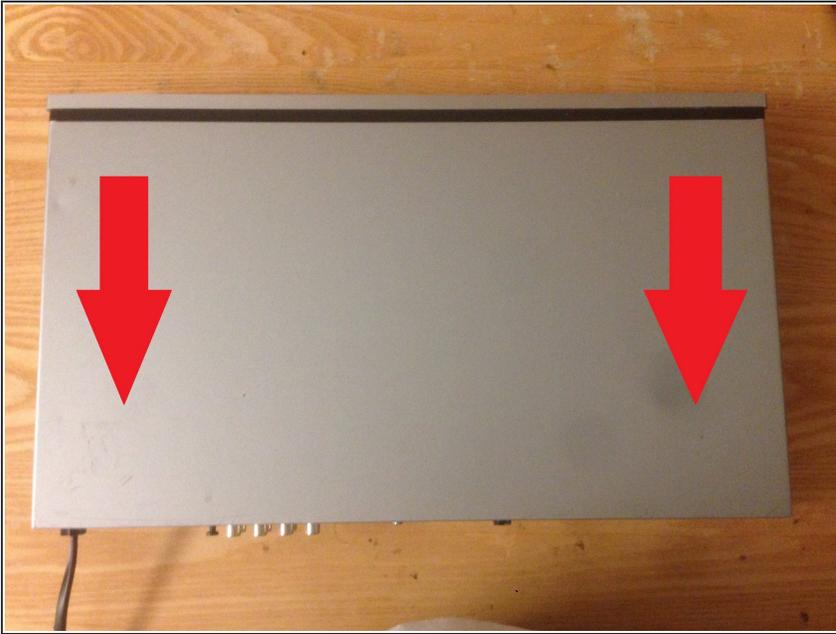

- to remove the cover of the device, pull the cover towards the back of the device until it is completely removed so you can see the insides of the device

To reassemble your device, follow these instructions in reverse order.