

Huawei Ascend W1 Antenna Replacement

This guide will show you the steps to removing the antenna.

Written By: Jaie Hillery



INTRODUCTION

It is a fairly simple and straightforward guide. Just be gentle when you're removing the parts. They can break easily.

TOOLS:

- T6 Torx Screwdriver (1)
- Spudger (1)
- Small Needle Nose Pliers (1)

Step 1 — The phone's orientation.



• Flip the device over so that the back of the phone is facing you and the screen is against your palm.

Step 2 — Removing the back cover.



- Locate the slit at the bottom of the back cover.
- Using your fingernail, lift up on the back cover to expose the battery.

Step 3



- Lift the back cover off the phone.
- (i) The back cover is snapped onto the phone so you will feel it unsnapping as you remove it.

Step 4 — Removing the battery.



- Find the indented notch at the base of the battery.
- Lift the battery out of the phone with your fingers by pressing forward and lifting upward.

Step 5 — Remove all the screws.



- After removing the battery, remove the screws using a T6 screwdriver.
- There are eleven screws that hold the middle cover to the rest of the phone.
- The screw that is marked by the orange circle is covered by a white dot.

Step 6 — Removing lower section of the middle cover.




- After all the screws are removed, use your fingers to remove the lower section of the middle cover.
- Pull the lower section of the middle cover outward towards you, exposing the circuit board underneath.

Step 7 — Removing the rest of the middle cover.



- Begin working your way around the sides of the cover plate, unsnapping it gently.
- The middle cover is a thin piece of plastic with the external speaker inside of it.
- Re gentle as you remove circuit cover. The parts might break if you are too forceful.


Step 8 — Locating the antenna.

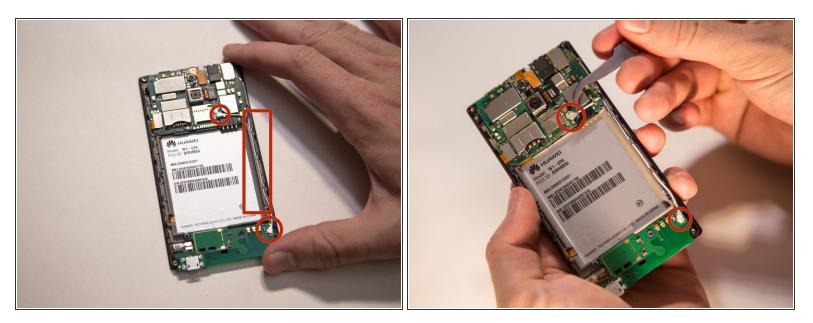

(i) The middle covers are removed.

• The antenna is a thin white wire that connects to the circuit board in two locations.

Step 9 — Removing the antenna

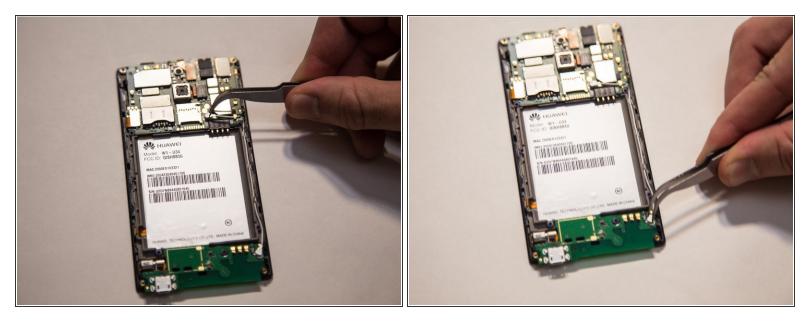

• Lift gently at each connector of the white wire to disconnect the antenna from the port.

To reassemble your device, follow these instructions in reverse order.