



Acer Iconia B1-711 Battery Replacement

Acer Iconia B1-711 Battery Replacement

Written By: ZFix



INTRODUCTION

In this manual we will show you how to open the tablet's back cover and change the Battery.

[Please SUBSCRIBE to my channel ツ](#)

[video: <http://youtu.be/8-djJ2aXa60>]

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Cover



- Switch-off the tablet.
 - Remove any SIM and/or Memory Card.
 - Start opening near to the Volume Up/Down buttons. It's more well to use a plastic opening tool to avoid damaging the cover.
- ⚠ When lifting the cover, be careful not to tear the Loudspeaker cable at the bottom right side.
- Disconnect the Loudspeaker cable from the Logic board.

Step 2



- Before doing anything, disconnect the battery.

Step 3 — Battery



- With a long plastic tool like a spudger, unstick the battery from the metal LCD shield.
- Lithium Ion Battery Pack - 3.8V, 2710mAh

To reassemble your device, follow these instructions in reverse order.