



Equity Alarm Clock 13014 Clock Bell Hammer Replacement

In this guide, I will provide instructions on how to replace the Equity Alarm Clock 13014's Bell Hammer.

Written By: Michael Johnson




INTRODUCTION

For this repair guide, I will instruct the user on replacing the clock's Bell Hammer. Some people use the alarm clock for reasons other than telling time. They use the clock's alarm to remind them of something or to wake them up at a certain time in the morning or evening. The Bell Hammer is located on top of the clock between the two bells. When the alarm goes off, it strikes the two bells in a rapid motion. To replace the Bell Hammer, the user must remove the back of the clock in order to get inside the clock's inner apparatus. From there, the user can remove the bell hammer.

TOOLS:

- [Pro Tech Toolkit](#) (1)
-

Step 1 — Back Cover of Clock

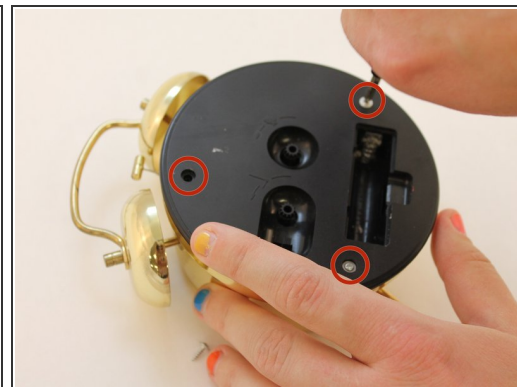



- Using a Phillip's Screwdriver, remove the three screws on the back cover of the clock.

Step 2 — Back Cover of Clock (2)





- Using your hands, remove the back cover of the clock by grasping it and pulling it upwards.

Step 3 — Cellinoid Cover

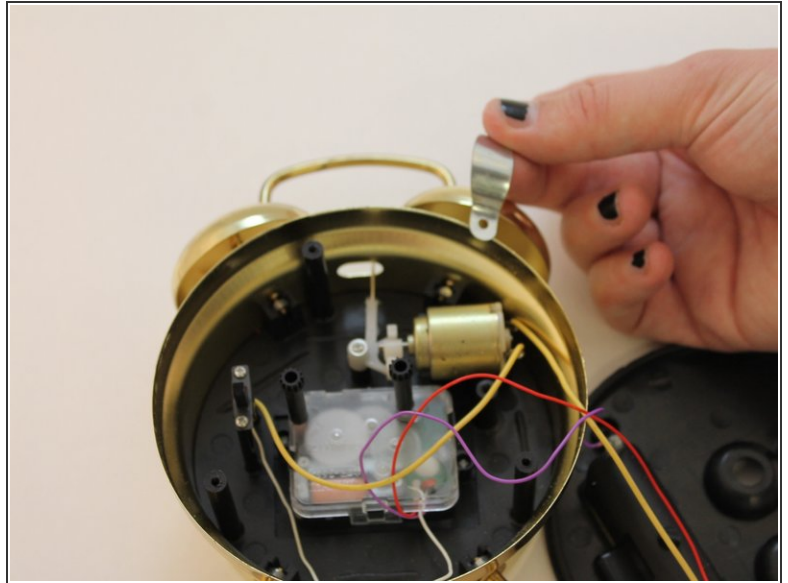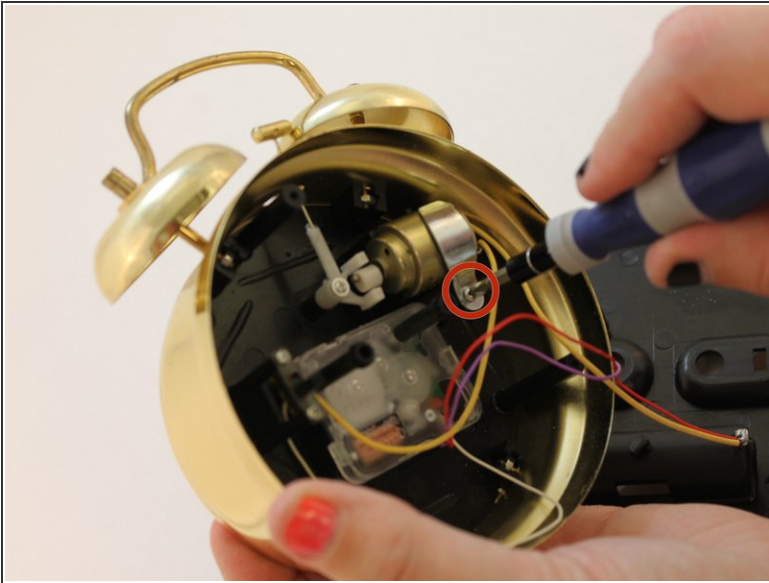


- Using a Phillips Screwdriver, remove the Cellinoid Cover from inner clock apparatus.

Step 4 — Bell Hammer

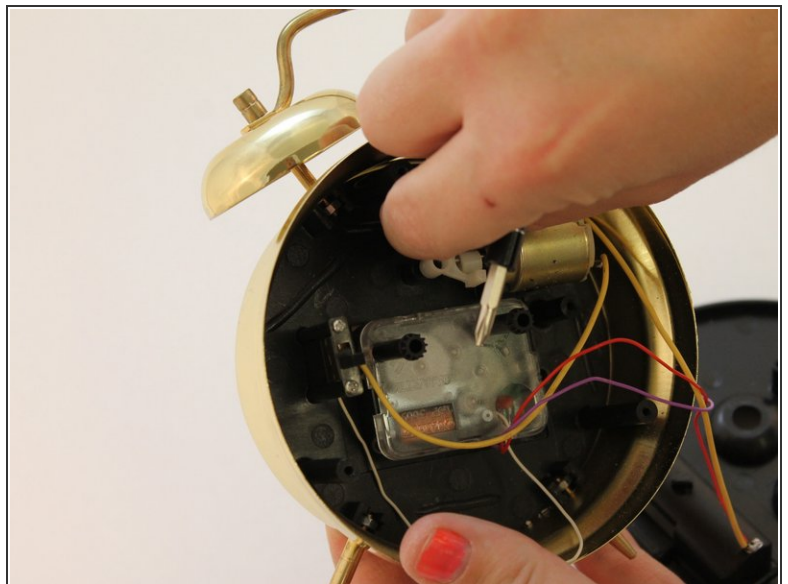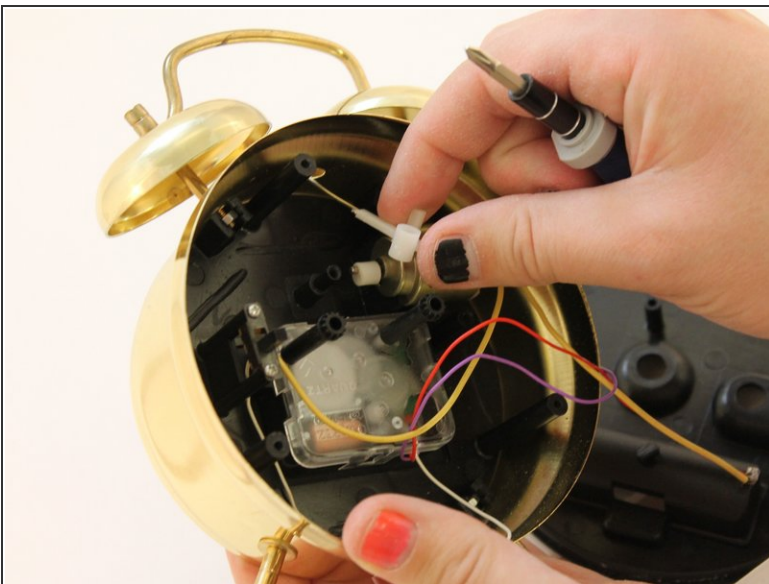

- Using your fingers, remove the bell hammer from the inner apparatus of clock.

Step 5 — You are Finished

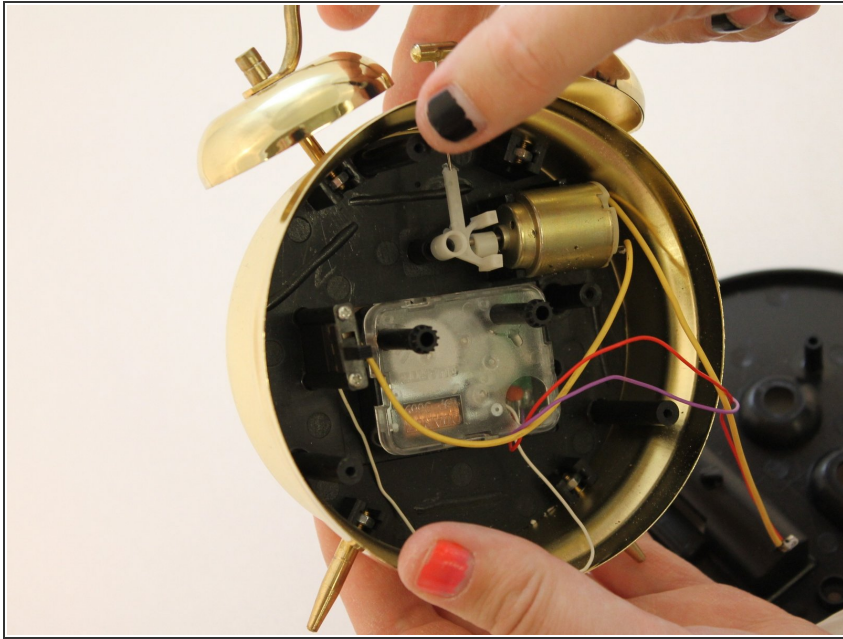

- Remove the clock's bell hammers and you are finished. Be sure to replace the old bell hammers with new ones.
- Starting from Step 5, repeat each previous step to reassemble the clock.

To reassemble your device, follow these instructions in reverse order.