




# Acer Iconia B1-711 Audio Jack Connector Replacement

Acer Iconia B1-711 Audio Jack Connector Replacement

Written By: ZFix

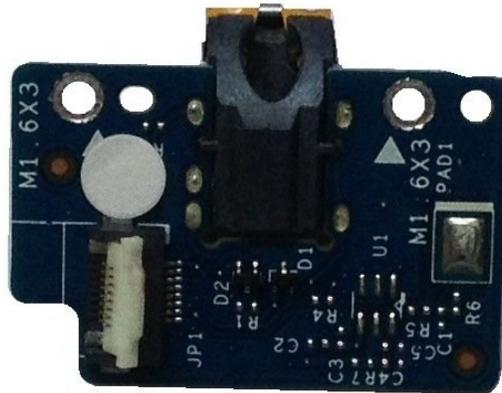

## INTRODUCTION

If you have a problem with the Audio Jack Connector, in this manual we will show you how to change it.

[video: <https://www.youtube.com/watch?v=8-djJ2aXa60>]

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Back Cover




- Switch-off the tablet.
  - Remove any SIM and/or Memory Card.
  - Start opening near to the Volume Up/Down buttons. It's more well to use a plastic opening tool to avoid damaging the cover.
- ⚠ When lifting the cover, be careful not to tear the Loudspeaker cable at the bottom right side.
- Disconnect the Loudspeaker cable from the Logic board.

## Step 2



- Before doing anything, disconnect the battery.

### Step 3 — Audio Jack Connector

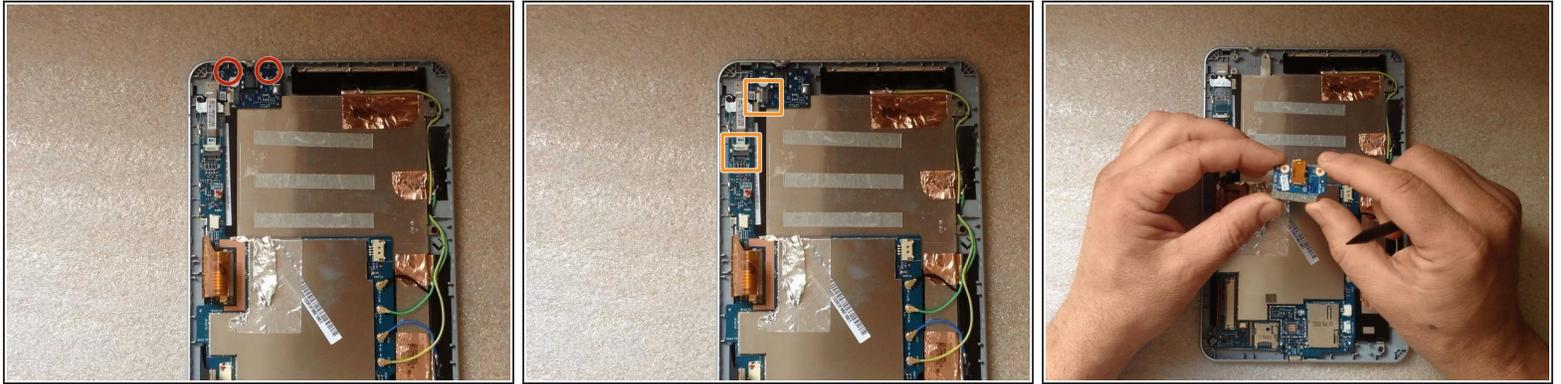

- Unscrew 2x Philips screws
- Disconnect and remove the Audio Jack Board flex cable.
- Remove the board with the Audio Jack Connector.

To reassemble your device, follow these instructions in reverse order.