



Disassembling Polaroid a520 Buttons

How to take out the buttons and replace them.

Written By: Dani



INTRODUCTION

How to take out the buttons and replace them.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Place your thumb on the battery cover and push left towards the arrow.

i The cover will release and pop open.

Step 2



- Remove the batteries from the camera.

Step 3 — Casing



- Remove four 3 mm screws on the right side of the camera using a Phillips #1 screwdriver.
- ⓘ This will release the front and back casings.

Step 4



- Use your nail or a flat object to pry up the edge of the front casing. Push the casing up and back.
- ⓘ Repeat this step for the back casing.

Step 5 — Buttons



- Pop the necessary buttons out of the plastic housing.

To reassemble your device, follow these instructions in reverse order.