




Sun King Solo Solar Lantern Device Seals Replacement

A guide to help you through replacing the seals protecting your Sun King Solo Solar Lantern

Written By: Josef Simek

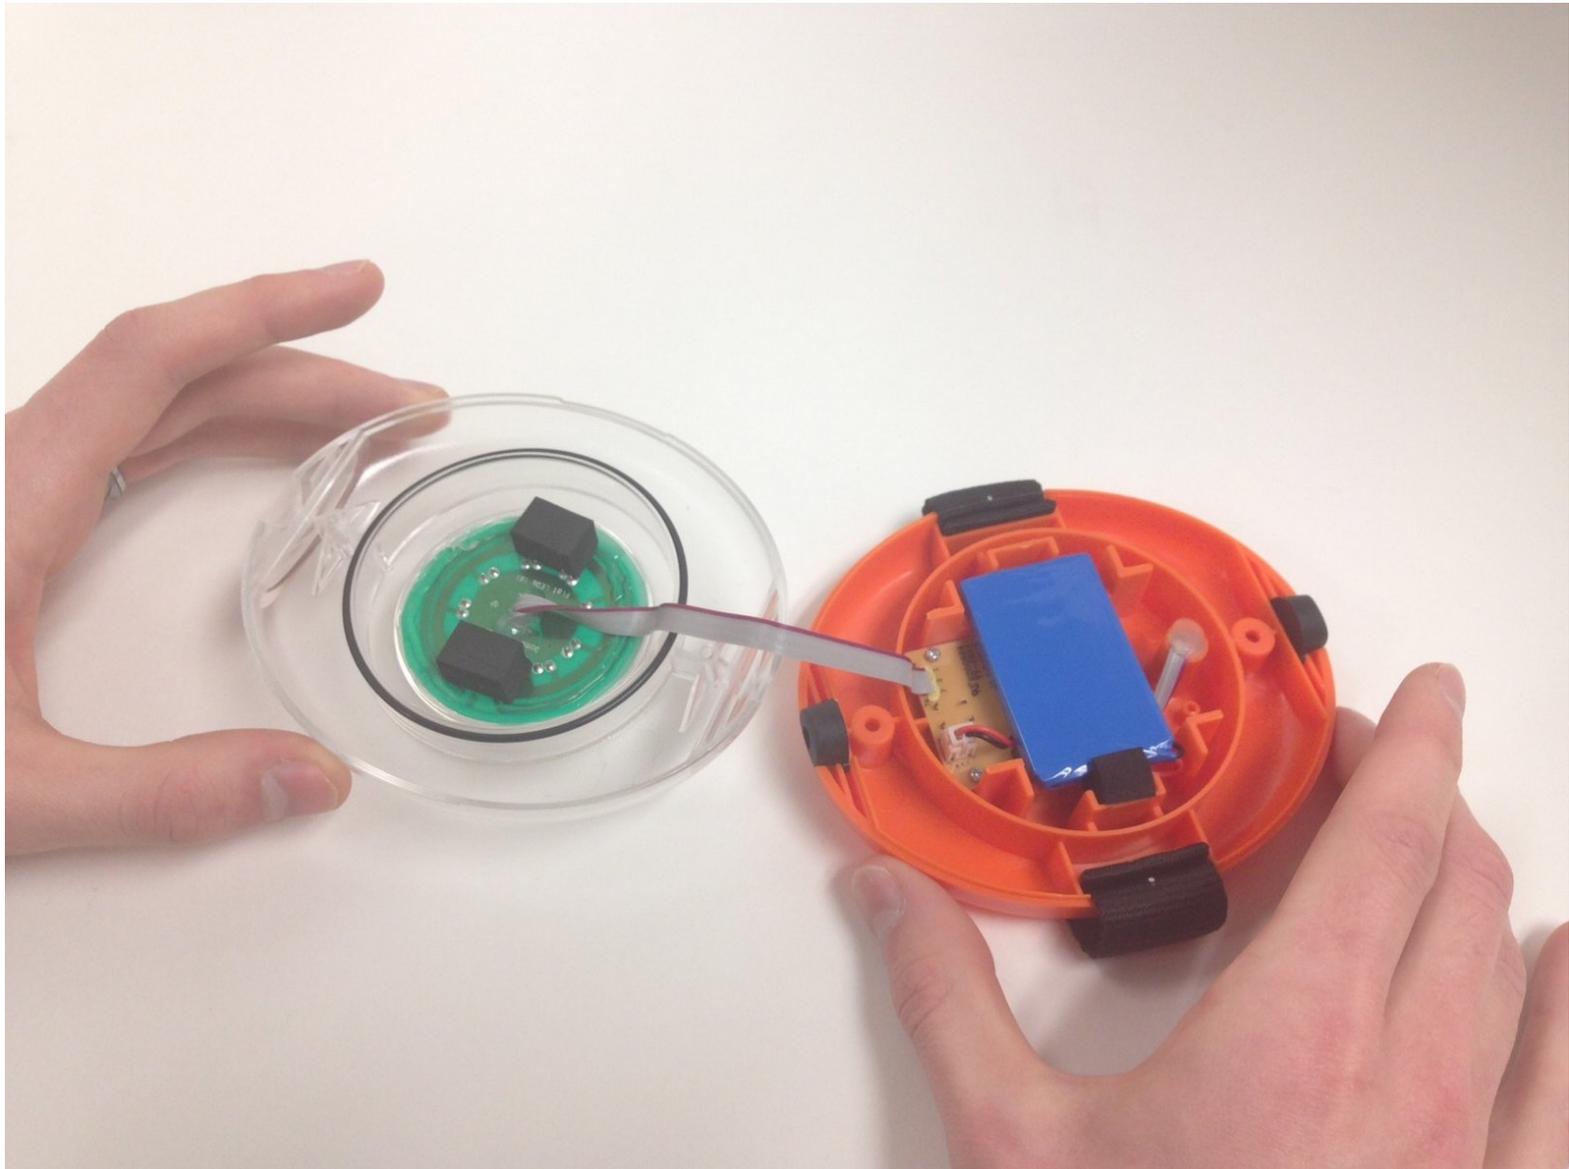

INTRODUCTION

Use this guide to replace the seals on your device to prevent damages to the internal components.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Locate and Remove the Screws




- Place the lamp *LED side down* on a clean workspace.
- Remove the screws holding the casing together using a Phillips #1 Screwdriver.

Step 2 — Separate the Device

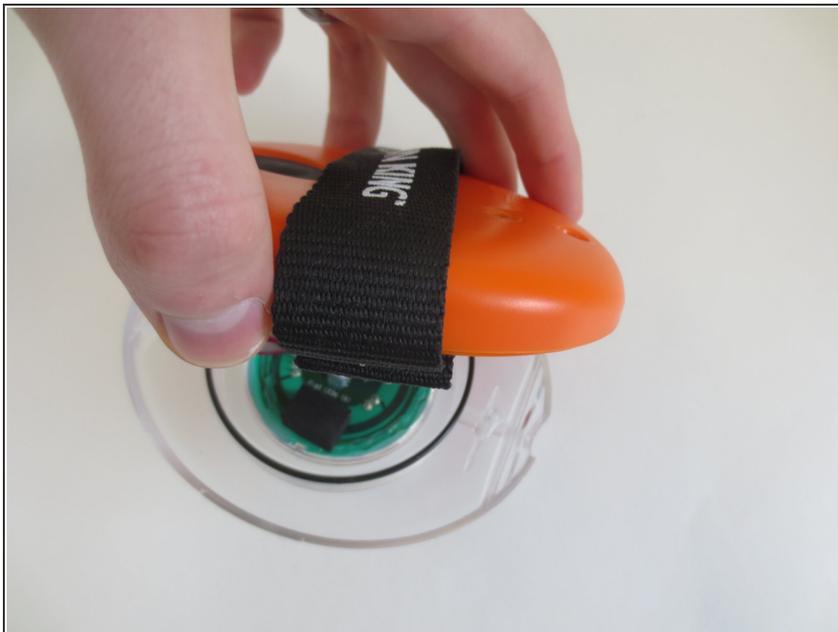


- Gently pull the two halves of the lamp apart.

Step 3 — O-ring Replacement

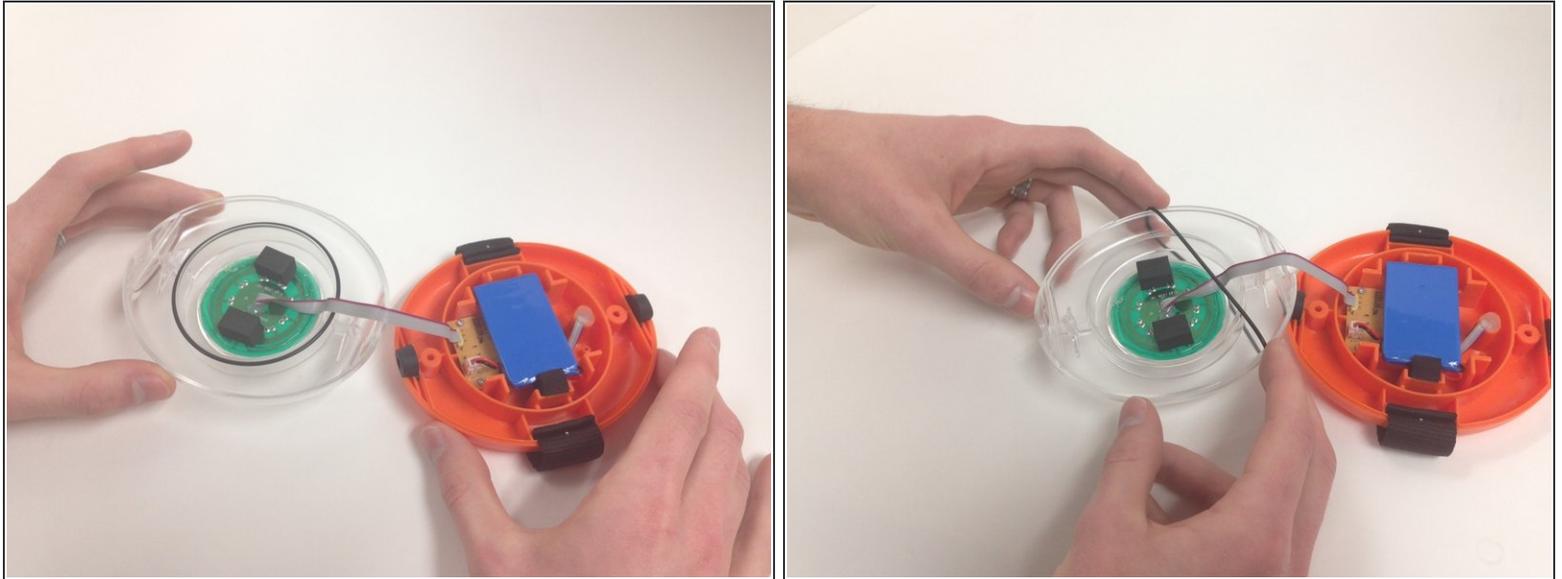

- On the clear upper half, remove the black O-ring
- Place the new O-ring, making sure it is smooth all the way around

Step 4 — Stand Holder Replacements

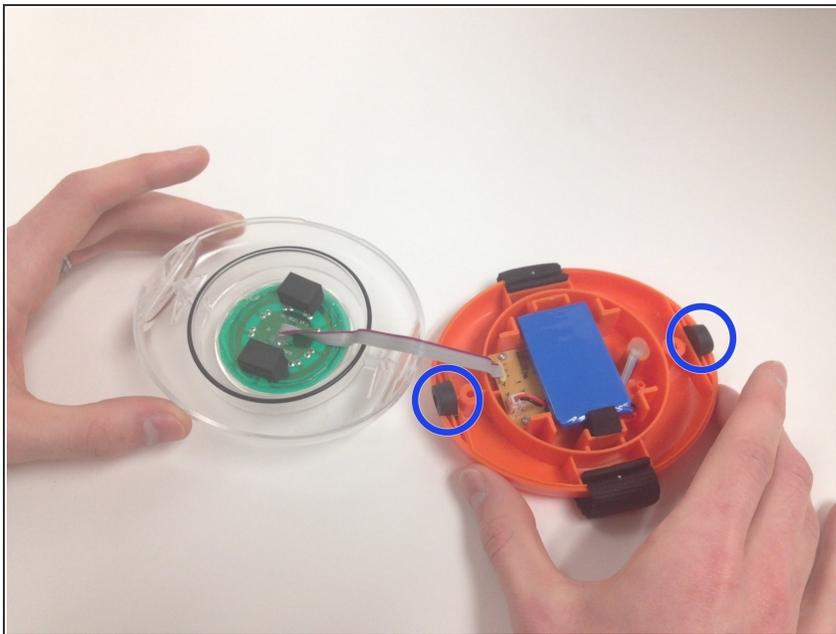

- Remove the rubber stand holders.
- Place the new stand holders, making sure the wings of the holder are in the second opening

To reassemble your device, follow these instructions in reverse order.