


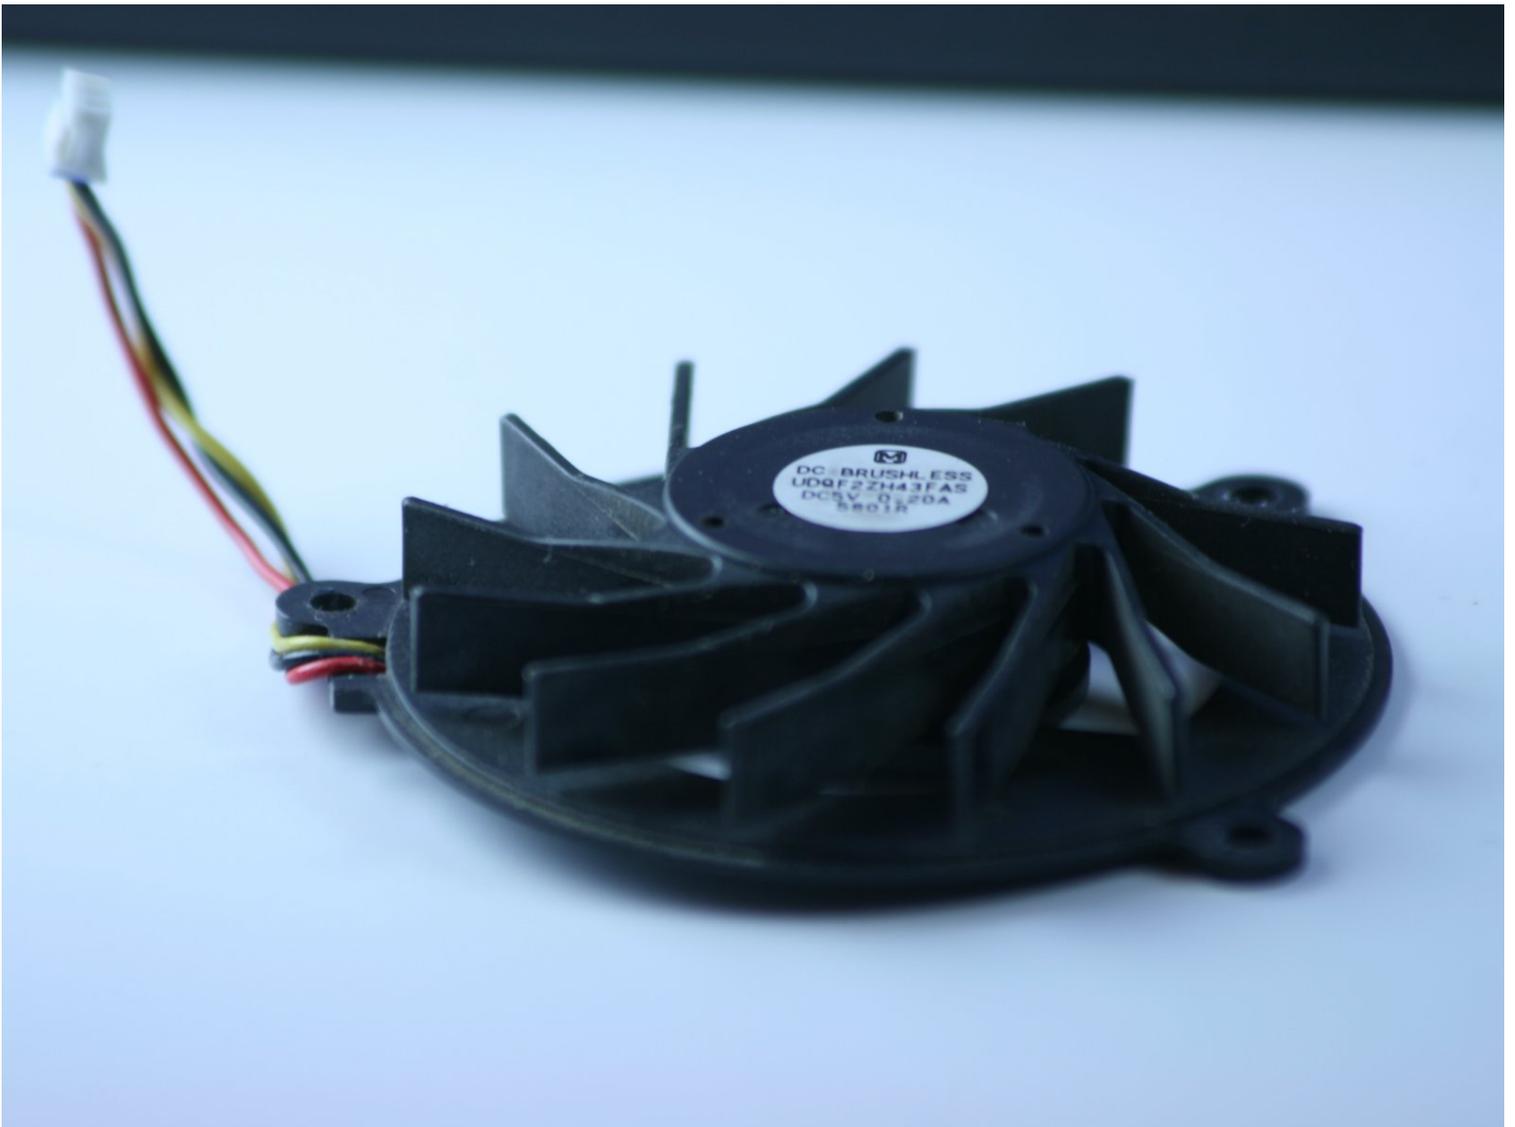

Asus V6800V Fan Replacement

Fan is a very essential part of a laptop which...

Written By: Jong Park



INTRODUCTION

Fan is a very essential part of a laptop which prevents it from overheating. Your Asus V6800V Fan needs to be changed when your laptop is running slow due to overheating or the fan is making a usual noisy sound or in some cases the fan stops immediately after starting. Before changing your Asus V6800V Fan use [this page](#) to confirm that the problem is actually in the fan but not any other parts.


The replacement guide will help you change your Asus V6800V Fan in the following simple steps. It won't take more than 30 minutes.

TOOLS:

[Phillips #0 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)


Step 1 — Battery

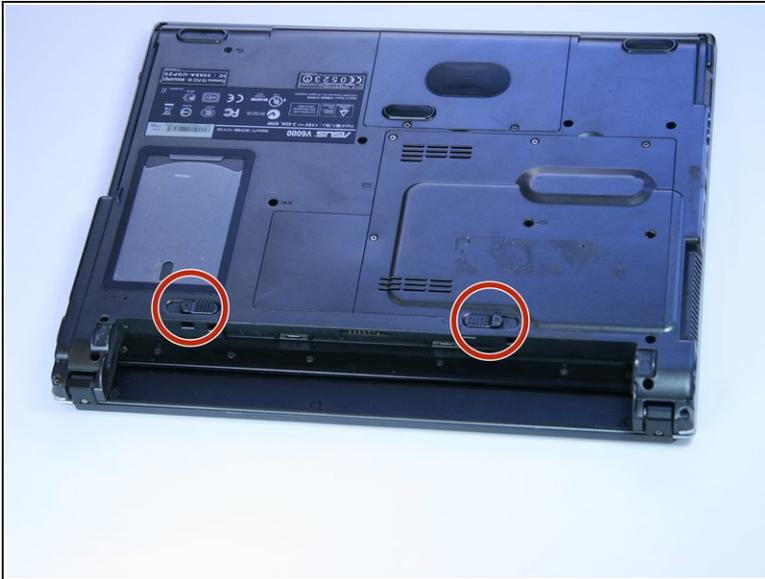

- Place the computer upside down.
- Using your thumbs, slide both latches away from each other (towards the outside).
- Push the battery out with your fingers.



 The actual battery is not pictured.

Step 2 — Fan

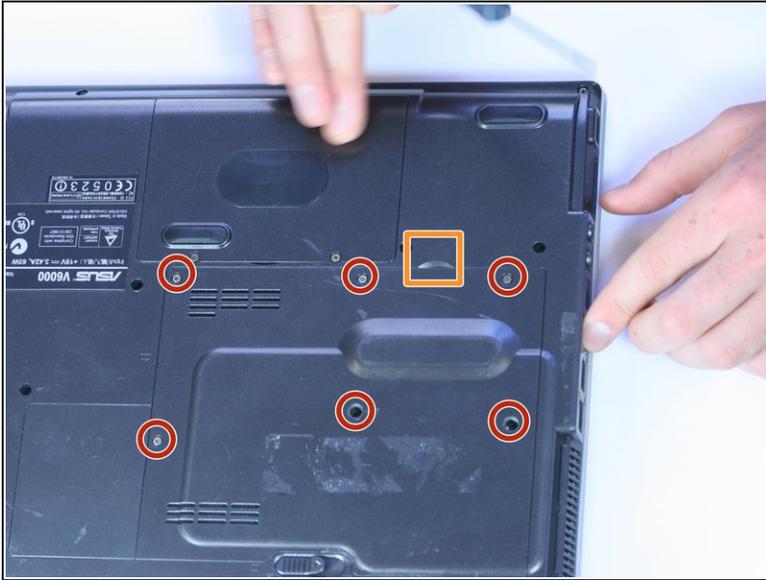


- Use the Phillips #0 to remove the six screws on the back of the device.
- Gently open the cover using the tab located by the highlighted box.

Step 3

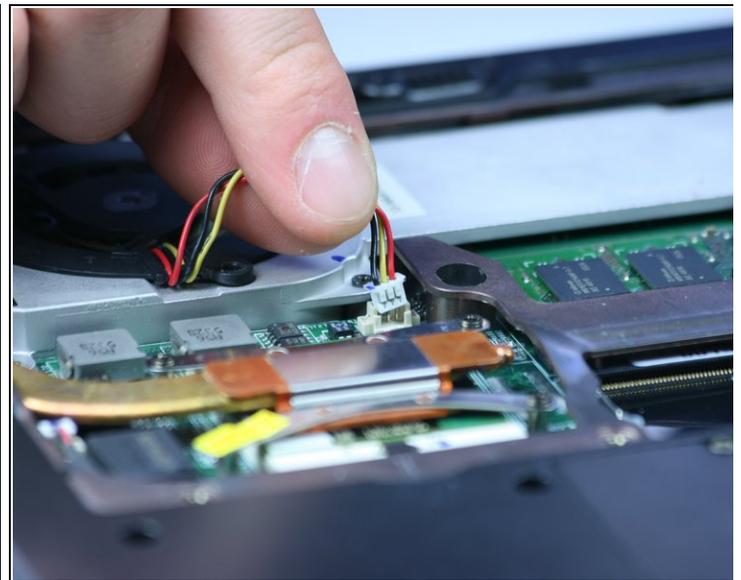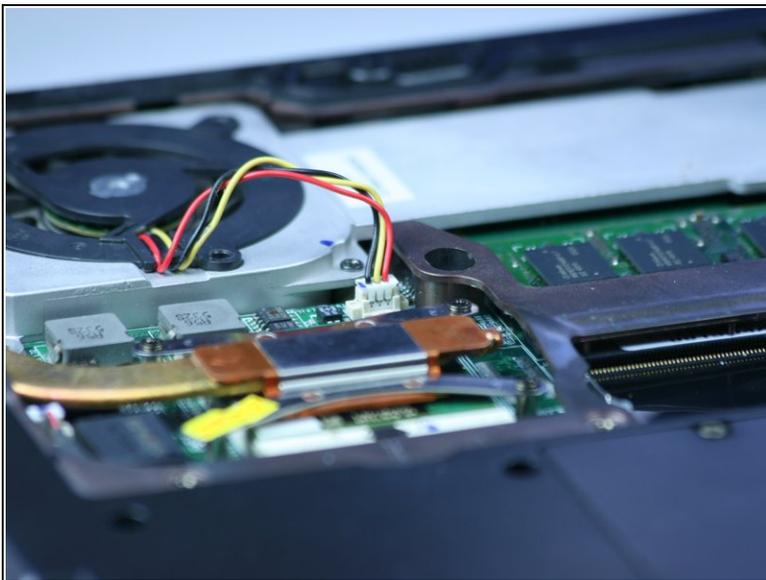


- Unplug the wires by pulling straight up on the white connector and away from the computer.
- ⚠ Make sure not to pull on the wires (as shown in the second picture). The white connector should pop off with very little force.

Step 4

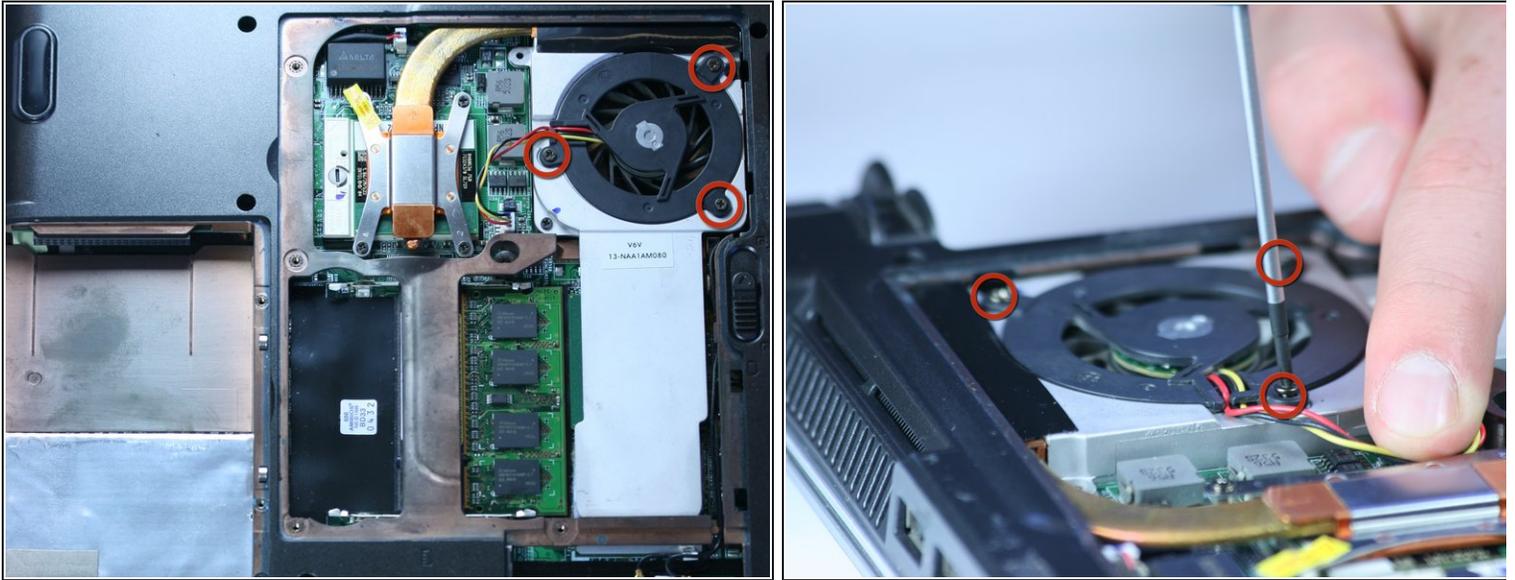

- Use a Phillips #0 to remove the three screws holding the fan in place.



Step 5

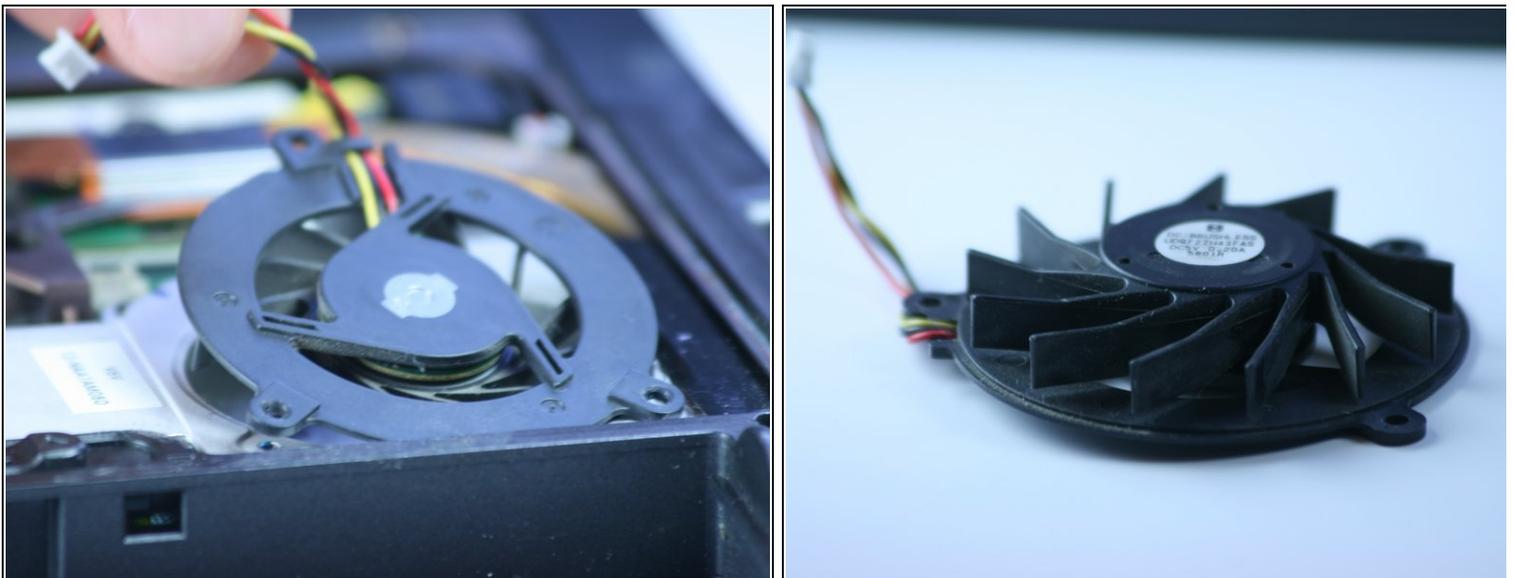

- Remove the fan from the device.

ⓘ The fan should remove easily.

Step 6

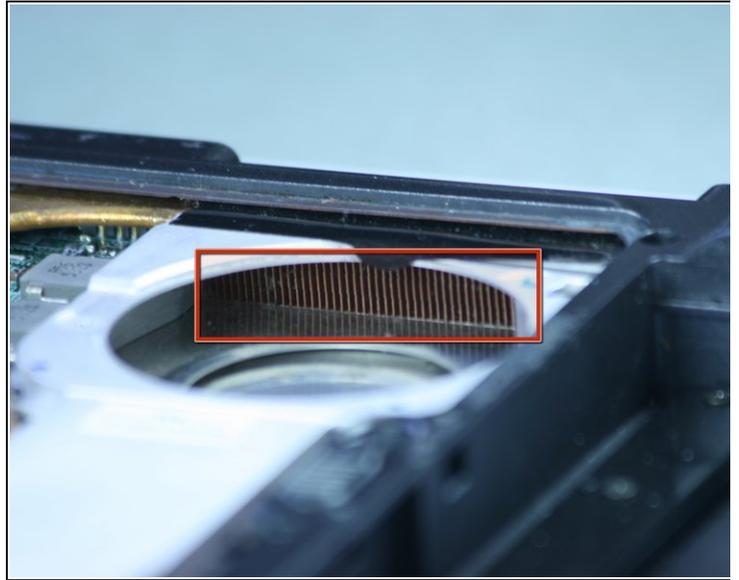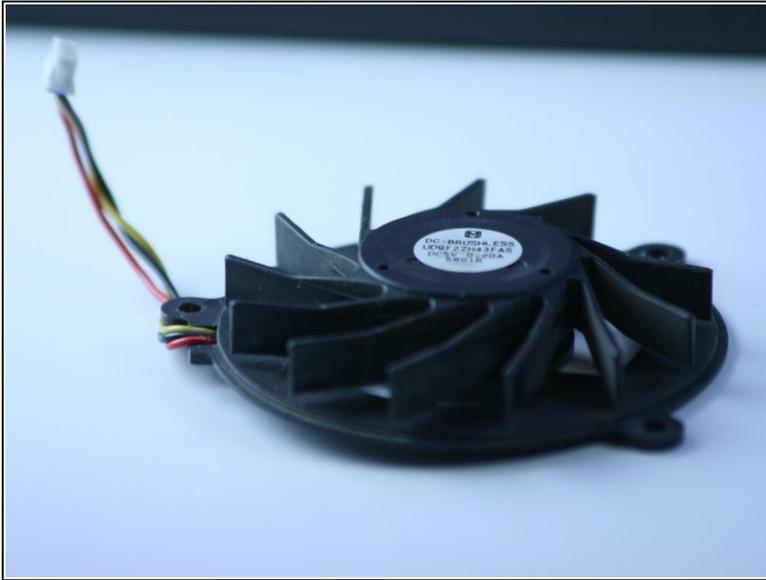

- Use a cotton swab or compressed air to blow air from the inside, out to clear dust from the vent or heat sink.

To reassemble your device, follow these instructions in reverse order.