



Asus V6800V Keyboard Replacement

Written By: Steven






TOOLS:

Phillips #0 Screwdriver (1)


iFixit Opening Tool (1)

Step 1 — Battery

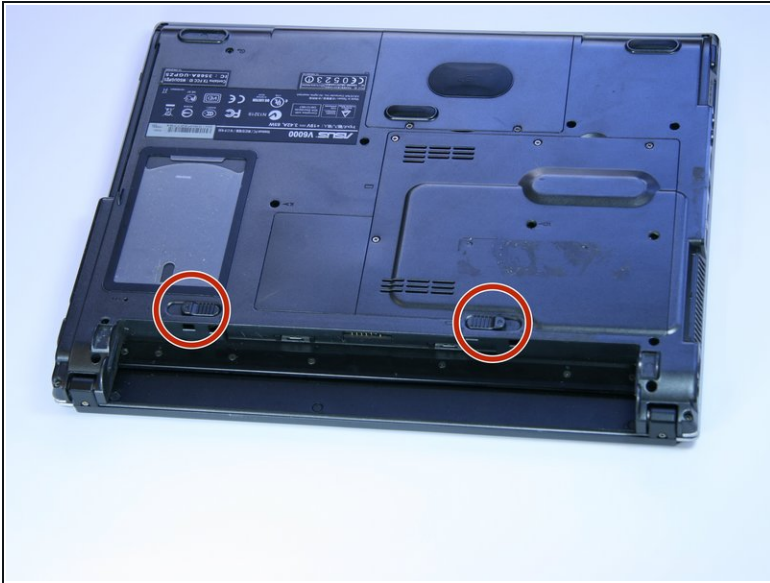


- Place the computer upside down.
 - Using your thumbs, slide both latches away from each other (towards the outside).
 - Push the battery out with your fingers.
- i** The actual battery is not pictured.

Step 2 — Keyboard

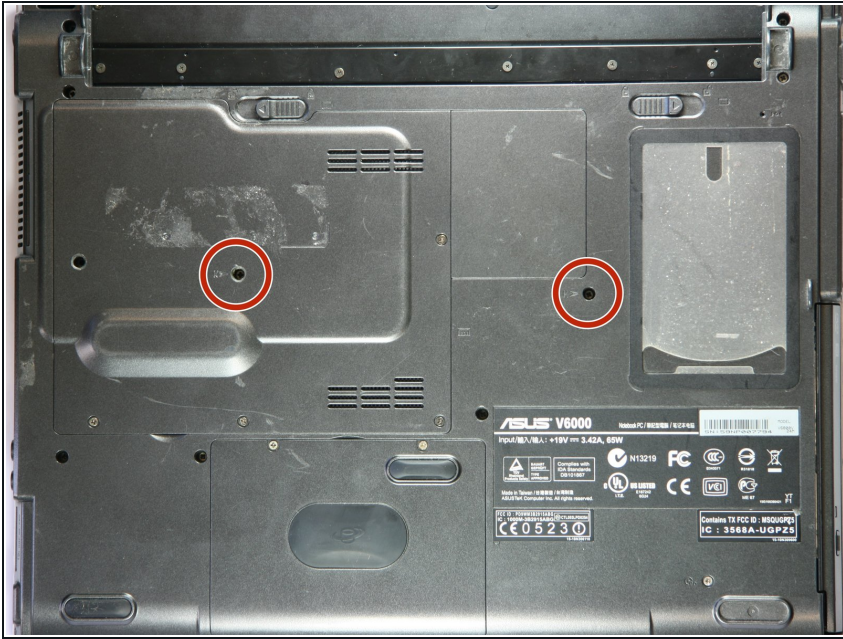


- Using a Phillips #0 screwdriver, remove the two screws from the case.
- ⓘ These screws should have a "K" symbol next to them.

Step 3

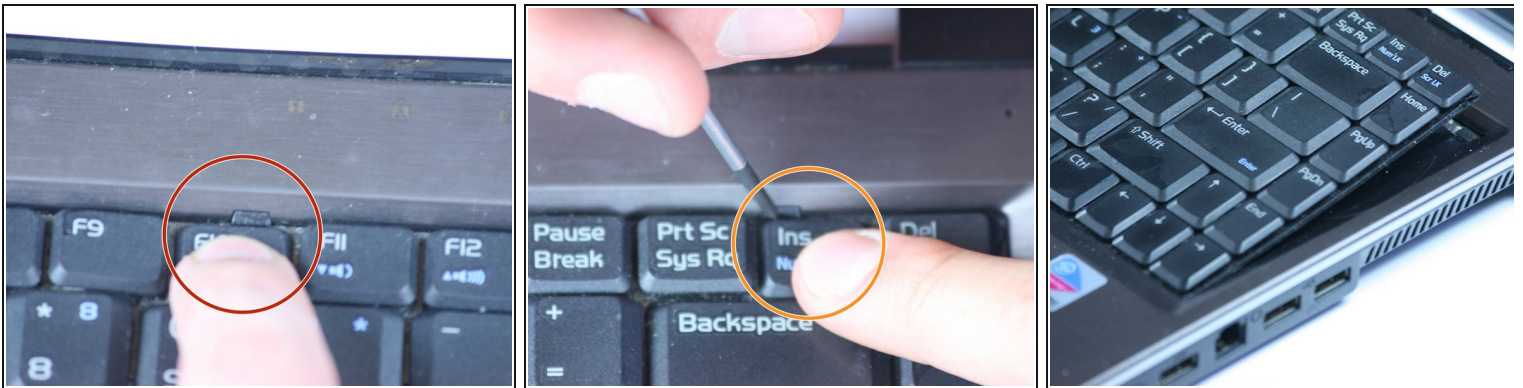

- Locate the four tabs above the F1, F10, INSERT, and between the F5 and F6 keys.
- Starting with the tab above the F1 key, press the tabs inward using your fingernail or spudger. Continue this process for the rest of the tabs.
- ⓘ Once all four tabs have been released, the top half of the keyboard should be free.

Step 4

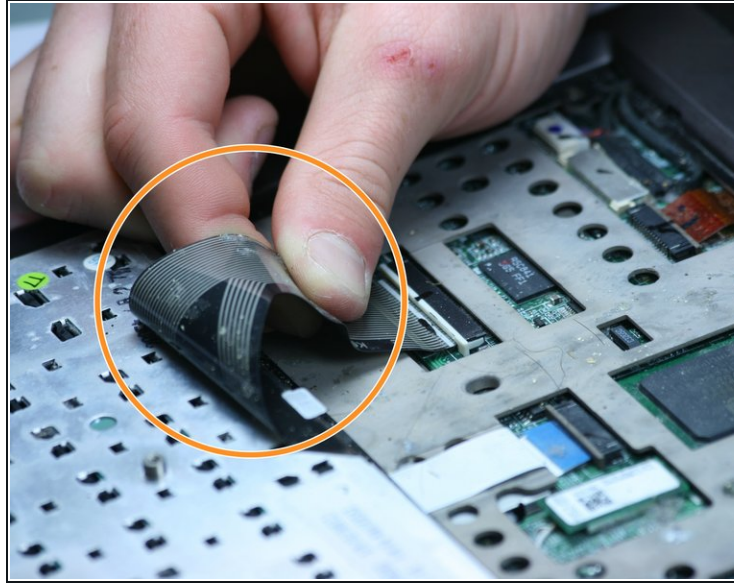

- Pull the keyboard up from the top at a 45 degree angle. Place it upside down on the touchpad.
- Pull the wide ribbon cable laterally from its socket on the motherboard to free the keyboard.

To reassemble your device, follow these instructions in reverse order.