




# Polaroid i533 LCD Screen Replacement

This guide shows how to replace the LCD screen on the Polaroid i533 camera.

Written By: ashley

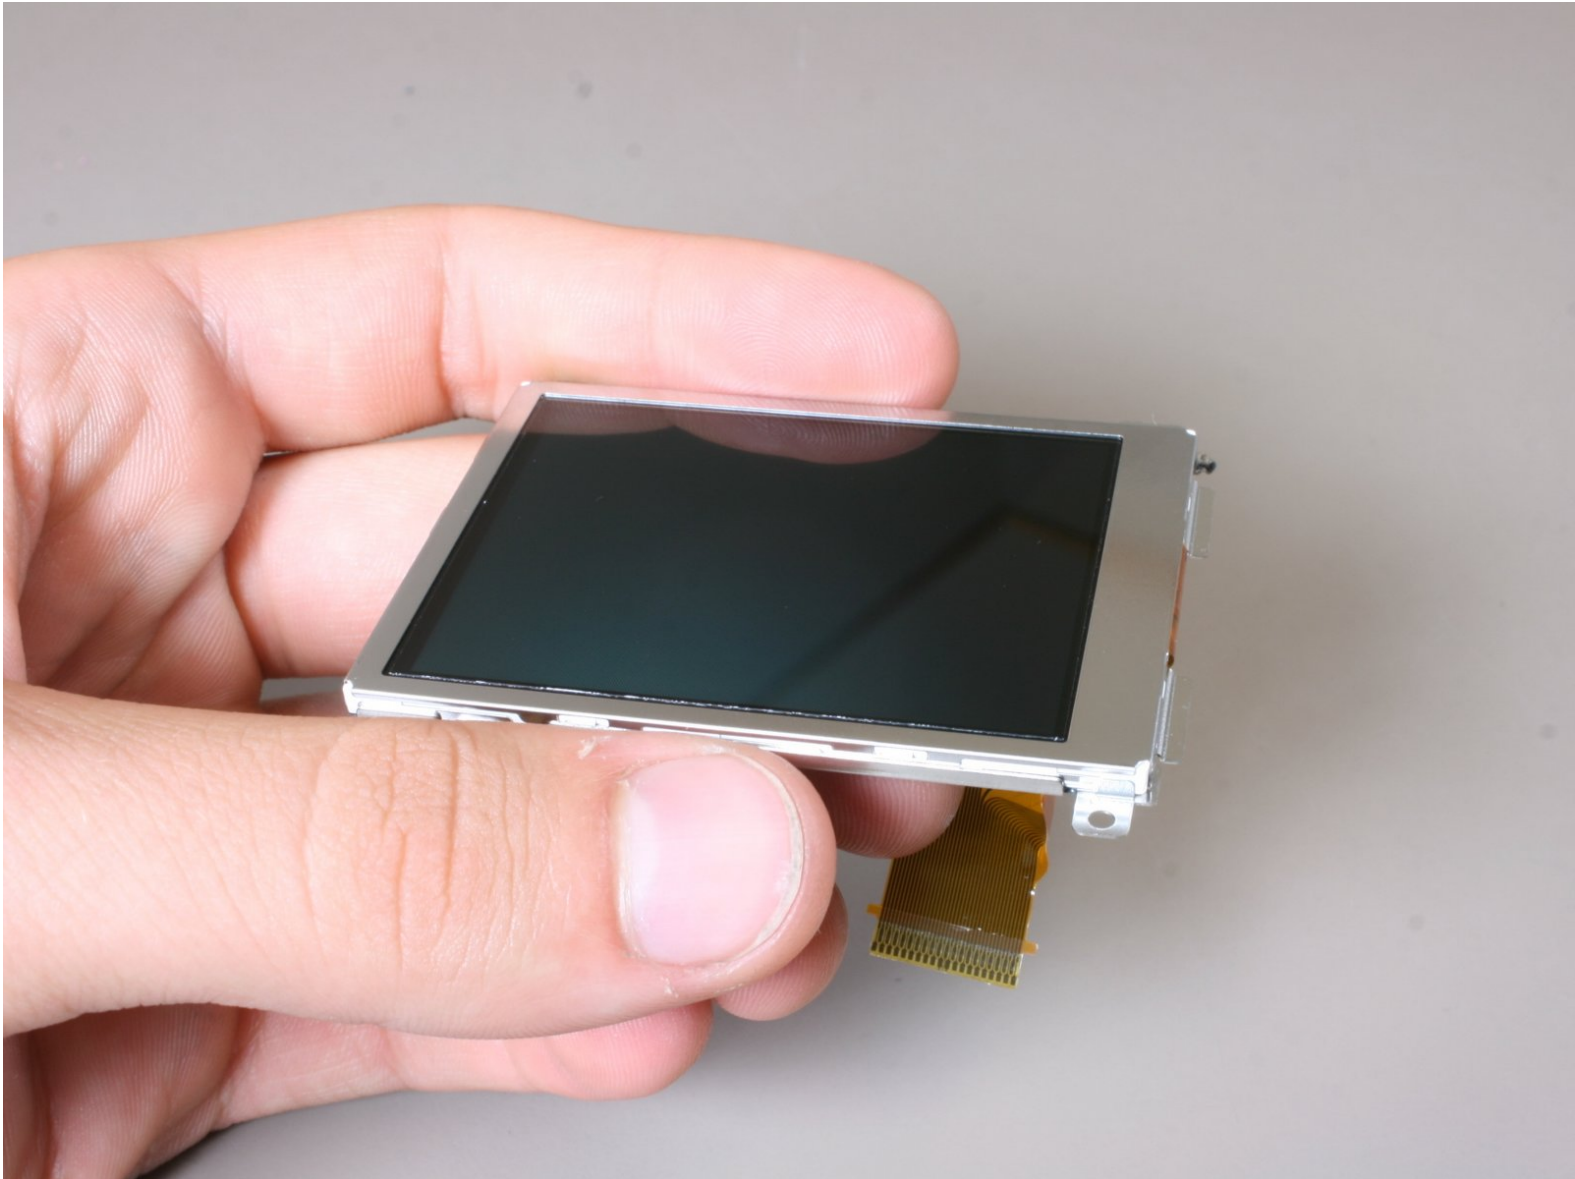

# INTRODUCTION

When the screen on your camera breaks, it becomes almost completely unusable. This guide will show you how to replace the LCD screen on a Polaroid i533 camera.



## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [64 Bit Driver Kit](#) (1)
-

## Step 1 — LCD Screen



- Remove the four 3mm screws from the left-hand side of the camera screen.
- On the right-hand side of the camera screen, unscrew and remove the two 3mm screws.
- On the bottom of the camera, unscrew and remove the three 3mm screws.

## Step 2




- Slide the battery door open and slightly open the side of the case with a plastic opening tool.

### Step 3



- ⚠ Be careful not to pull the cover off completely, as it should remain attached to the motherboard.
- Gently pull the cover away from the rest of the camera. Do not separate the pieces completely.

### Step 4

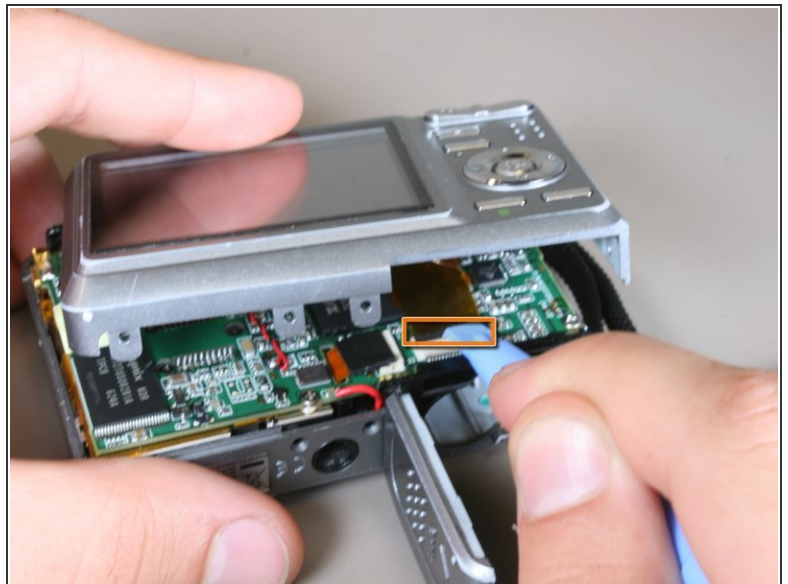

- Locate where the LCD screen ribbon is attached to the logic board.
- Using the iFixit plastic opening tool, flip up the black tab that connects the LCD screen ribbon to the motherboard.




## Step 5




- Gently pull the ribbon away from the motherboard. This will allow the cover to separate from the rest of the camera.

## Step 6

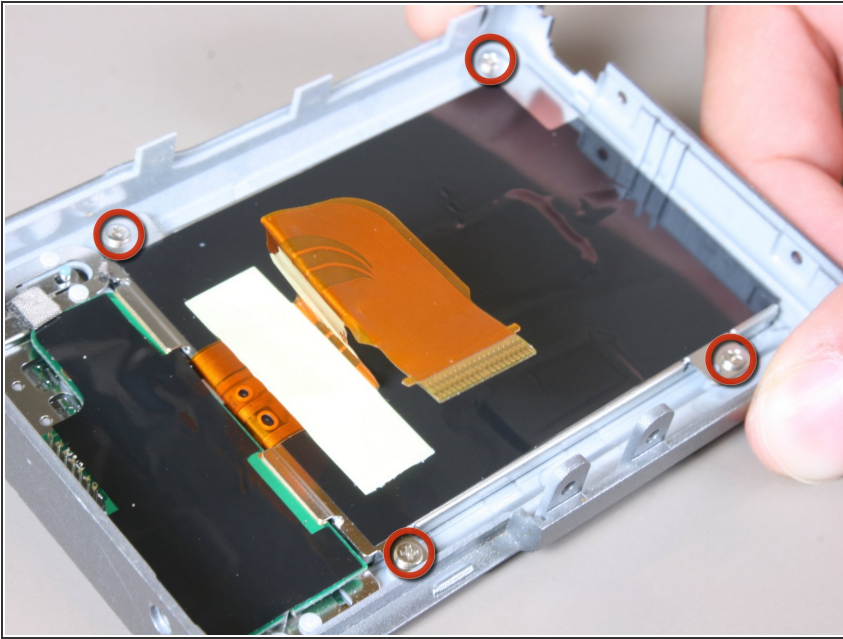

- Locate the four screws in each corner of the LCD screen and carefully remove them. After they have been removed, ensure the screws stay separate from the 3mm case screws.

## Step 7

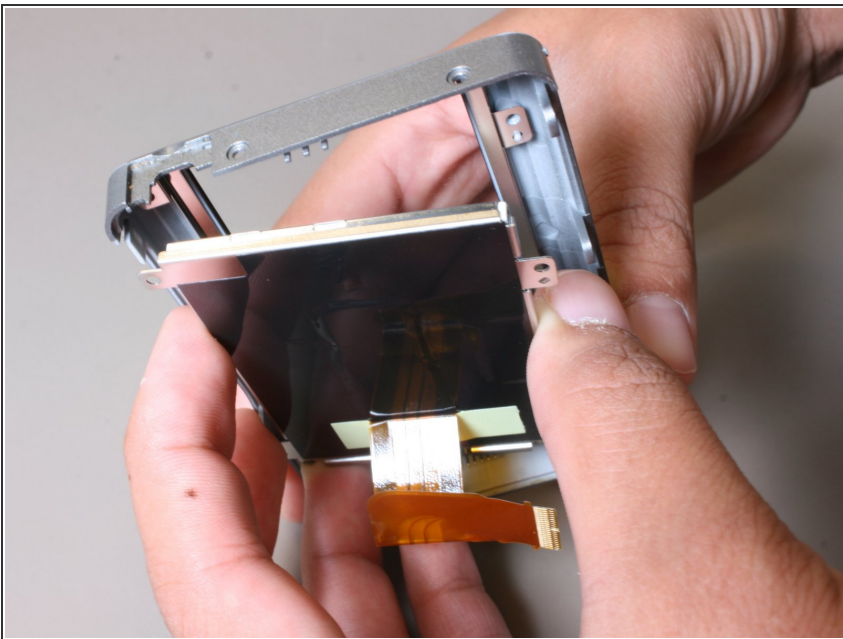

- Remove the LCD screen from the remaining casing of the camera.

To reassemble your device, follow these instructions in reverse order.