



Behringer BCD3000 Disassembly

If the jog wheels scratch and the faders get stuck you'll need to take this bulky baby apart.

Written By: Tobias Isakeit



TOOLS:



- [Pro Tech Toolkit \(1\)](#)
-

Step 1 — Behringer BCD3000 Disassembly



- Unplug from all cables

Step 2 — opening the sides

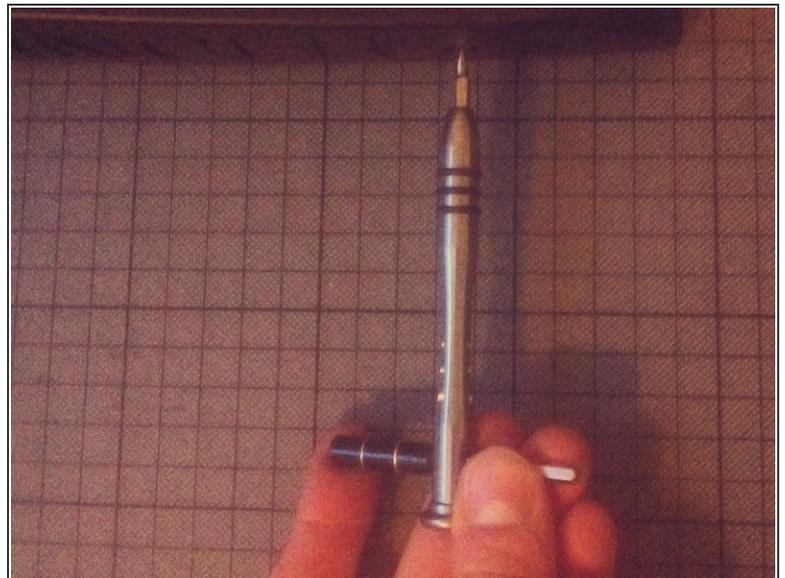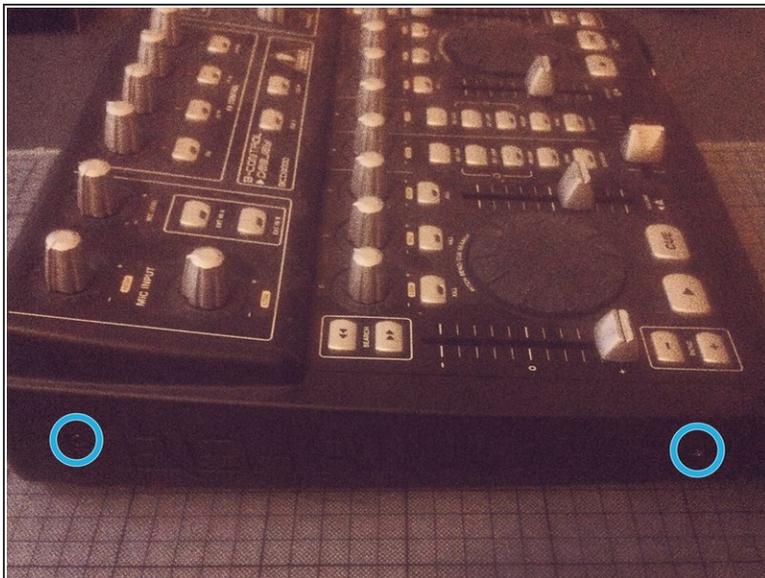



- unscrew two Phillips screws on each side of the BCD3000
- If the screws sit too tight, you can use the extension for better torque

Step 3 — loosening the top part



- unscrew another two Phillips screws on each side

Step 4

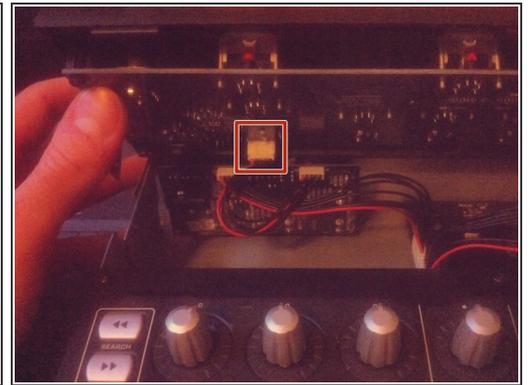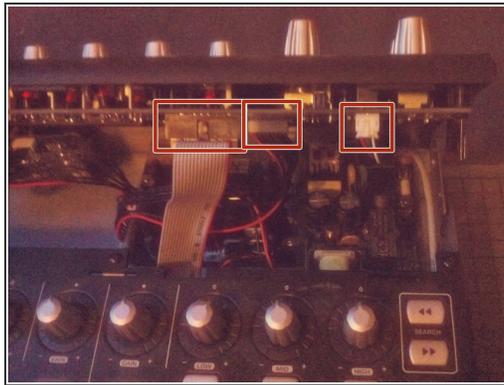

- Lift the upper control part.

⚠ Be careful, there are still some cables connected to the lower section.


- Disconnect the cables by walking them out of their sockets.

Step 5



- Remove the upper part completely.

Step 6

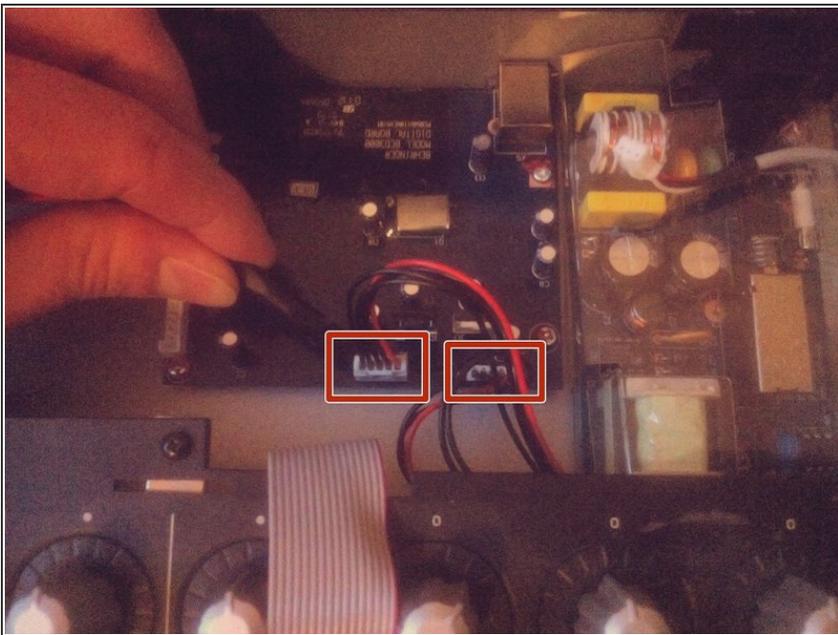


- Disconnect the two cables from the lower section to the connector board.

Step 7




- Slide the lower section to the front.
- Now you can lift it and take it aside.

Step 8

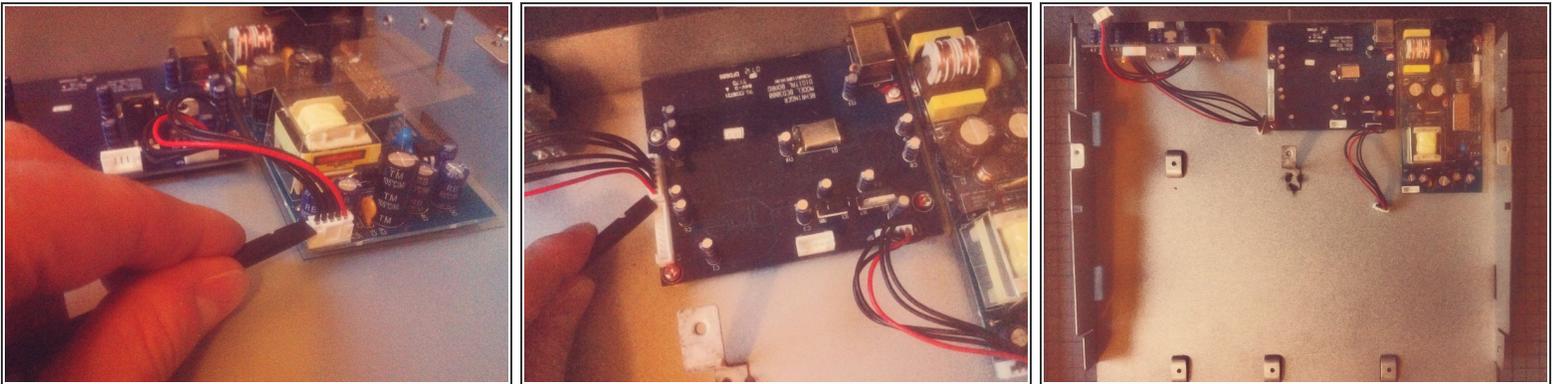


- Disconnect the separate boards.
- Now you can take the modules out by unscrewing them from the case.

Step 9

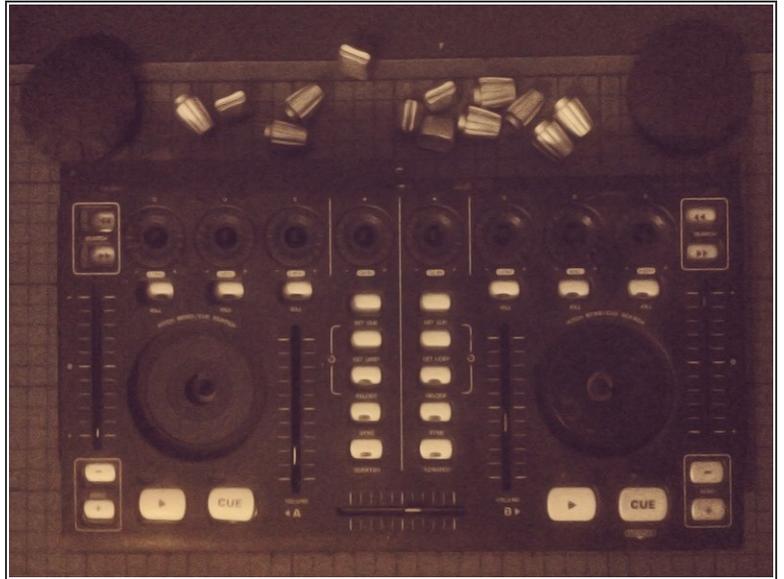

- The jog wheels on the front panel can be taken off by using a spudger and levering them out.

Step 10

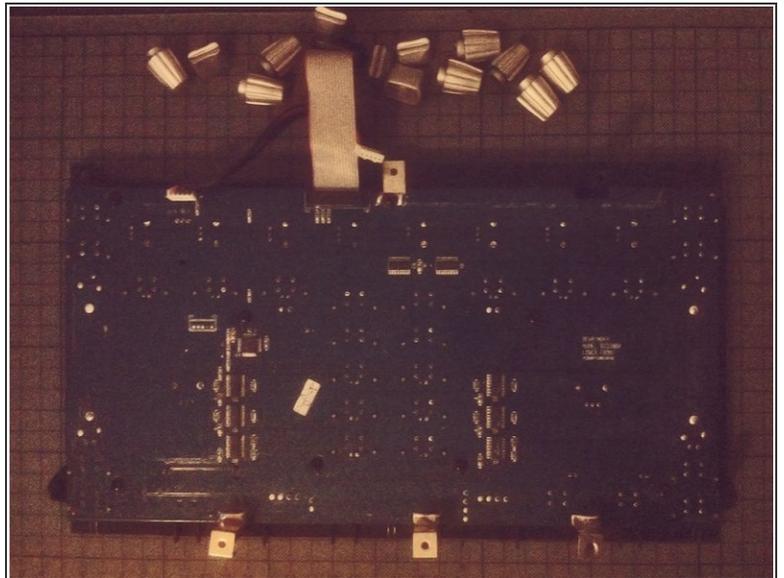

- The knobs can easily be removed just by pulling.

Step 11



- Same goes for the knobs on the top section of the front panel.

To reassemble your device, follow these instructions in reverse order.