



Replacing Creative Zen X-Fi Front Case

You have to pry open the front case in order to gain access of the rest of the device.

Written By: Jonielle McDonnough



INTRODUCTION

The cases of the device help protect the interior components as well as contribute to the device's appearance and aesthetic.

TOOLS:

- [Spudger](#) (1)
-

Step 1 — Detaching Front Case



- Using a spudger, wedge the tip between the front and back case to pry them apart.
- ⓘ Be careful to not apply excessive force since there are six fasteners on the screen's side that holds the cases firmly together.

To reassemble your device, follow these instructions in reverse order.