




Eclipse 180G2 MP3 Video Player LCD screen Replacement

Removal of LCD screen protector from the device for cleaning or replacement.

Written By: Jesse Minor

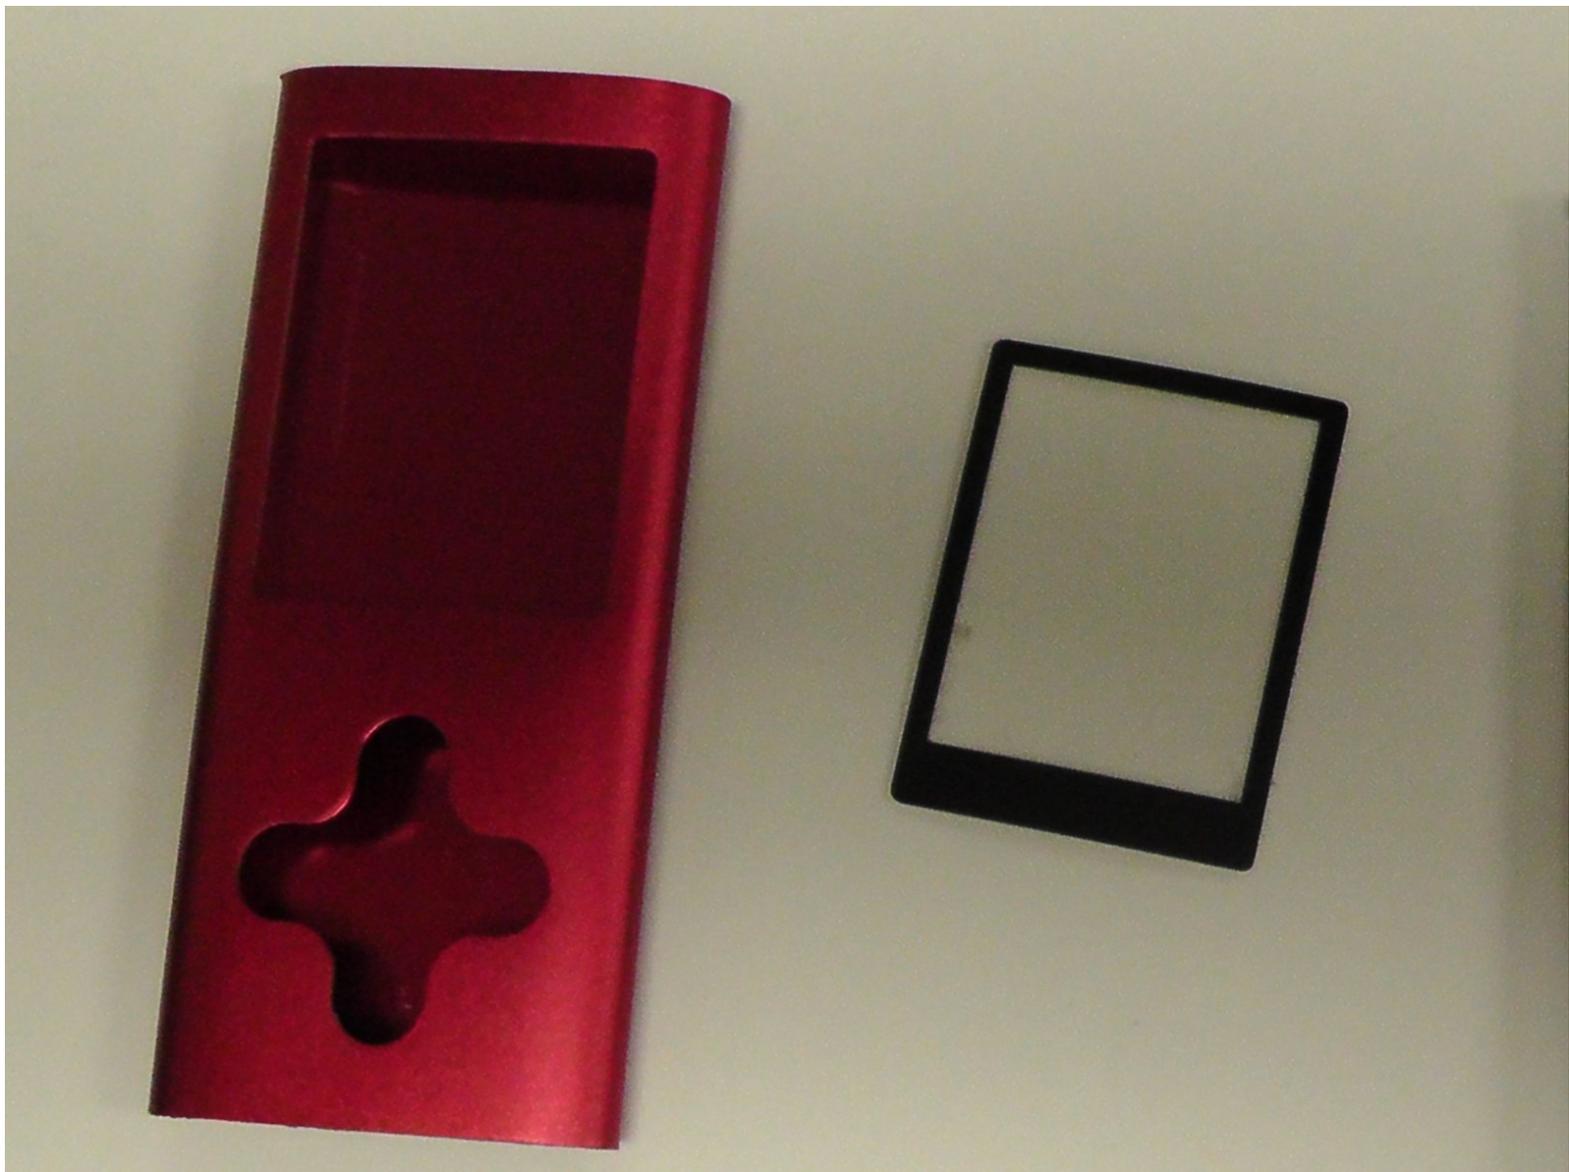

INTRODUCTION

The LCD display is protected by a plastic screen which can become cracked or smudged. However, since it is held in place by tension, removing it for cleaning or replacement is simply a matter of separating the external casing from the electronic components.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Outer Case



- Remove the two screws on the bottom of the device with a Phillips head screwdriver.
- Use a spudger to remove the plastic plate from the bottom of the player.

Step 2 — Remove inner circuit from case shell

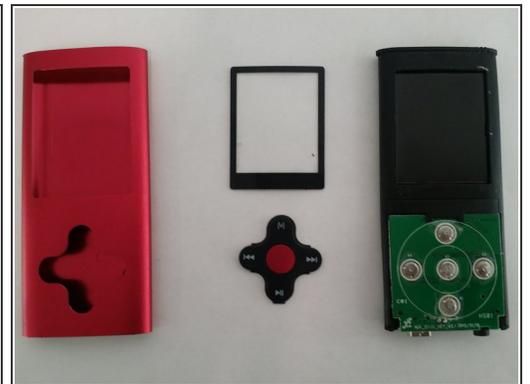

- Hold the device firmly between two fingers. Be sure you aren't holding down the top of the device; the circuit board will slide out of the shell through that end.
- Use the spudger to push the USB port on the bottom of the device inward.
- The plastic LCD cover and the key pad will now be free; they were held in place by the tension between the case and the internal circuit board.

Step 3 — Removing the Screen



- Freed from the internal space of the device, the LCD screen as well as the buttons will simply fall out of the face of the device. They can now easily be replaced.

To reassemble your device, follow these instructions in reverse order.