




Dell Inspiron 3520 Keyboard Replacement

This guide will show you how to remove and replace the keyboard from your Dell Inspiron 3520 notebook.

Written By: Ian

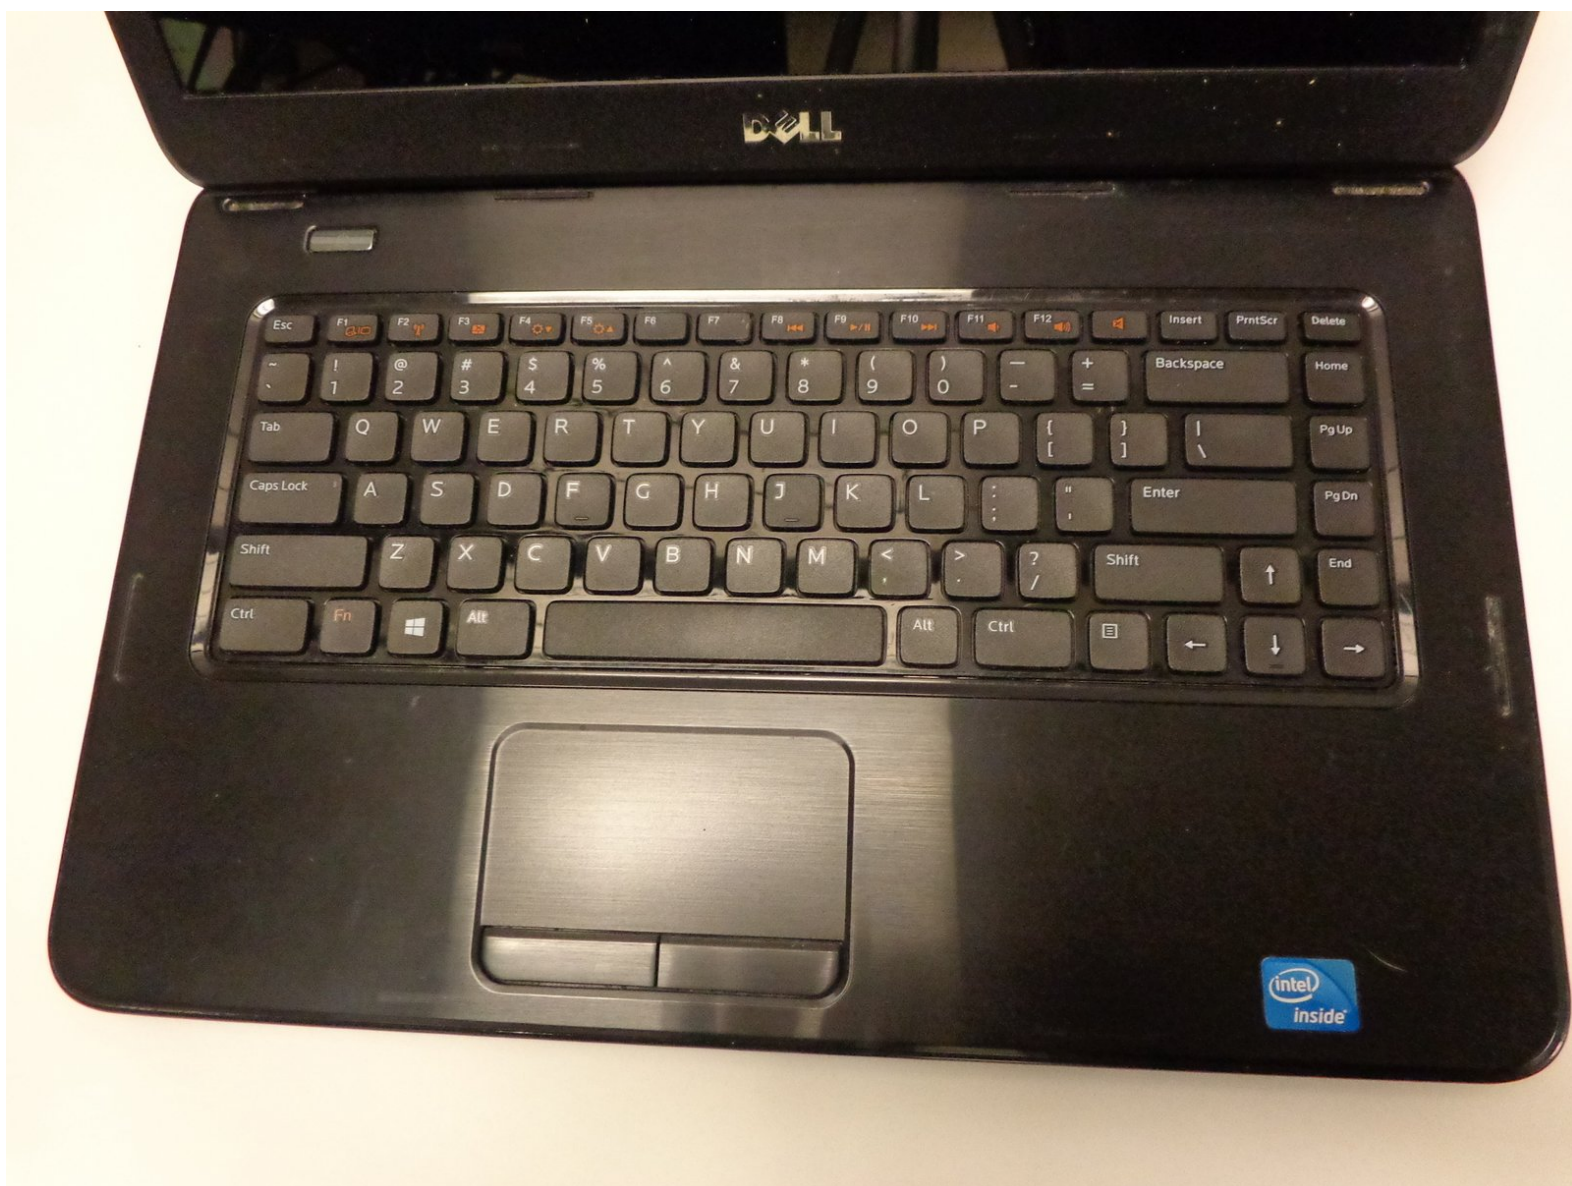

INTRODUCTION

The Dell Inspiron 3520 has a basic keyboard that is easily accessible from the open surface of the notebook. The 3520 model does not have a keyboard backlight. This makes the keyboard much simpler to remove. Keep in mind that this will require some force on the repairers part.



TOOLS:




- [Spudger](#) (1)
-

Step 1 — Battery





- Turn off notebook
- Set the notebook upside down with the battery facing away from you.
- Locate the unlock and release sliding tabs on the bottom right and left hand corners of the battery respectively.

Step 2

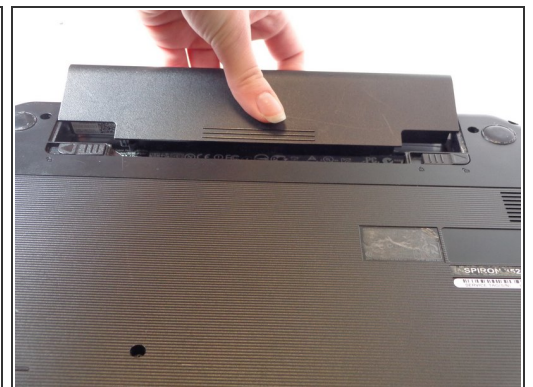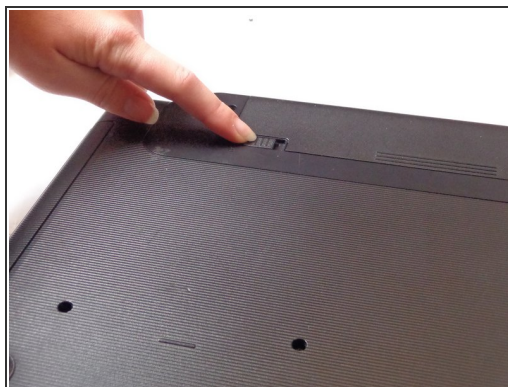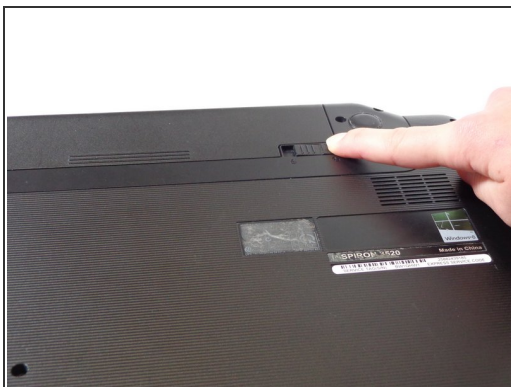


- Slide the right tab to the right to unlock the battery.
- Slide and hold the the left tab to the left to release the battery from the unit.
- Finally, remove the battery by sliding it away from the unit and yourself.

Step 3 — Keyboard

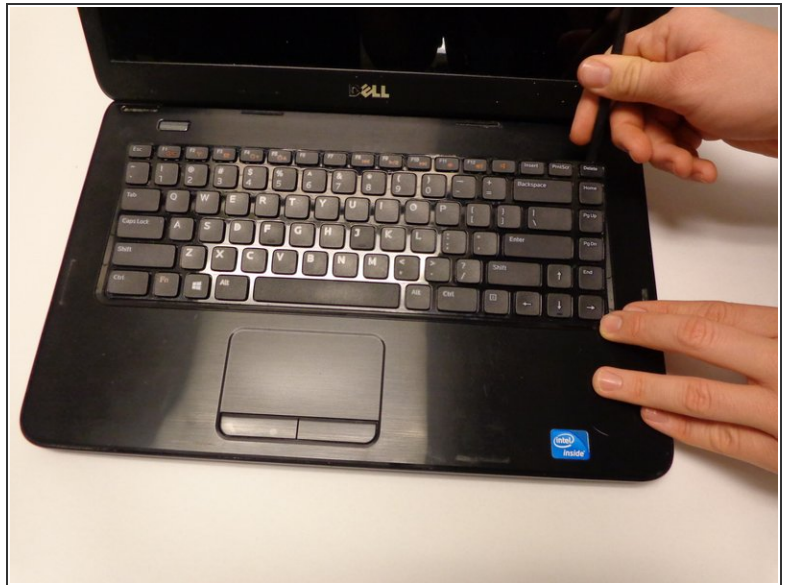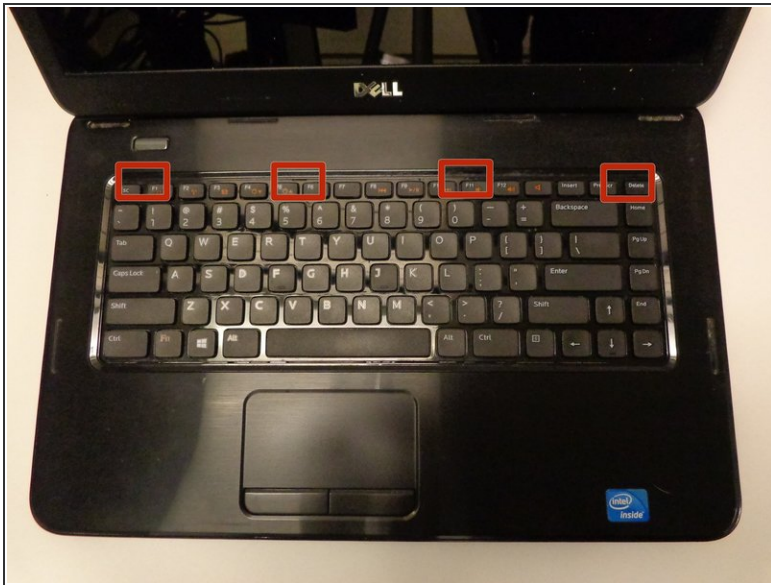



- Locate the four tabs along the top edge of the keyboard.
- Using the spudger, push the tabs away from the keyboard and pull the keyboard up away from the laptop.

Step 4

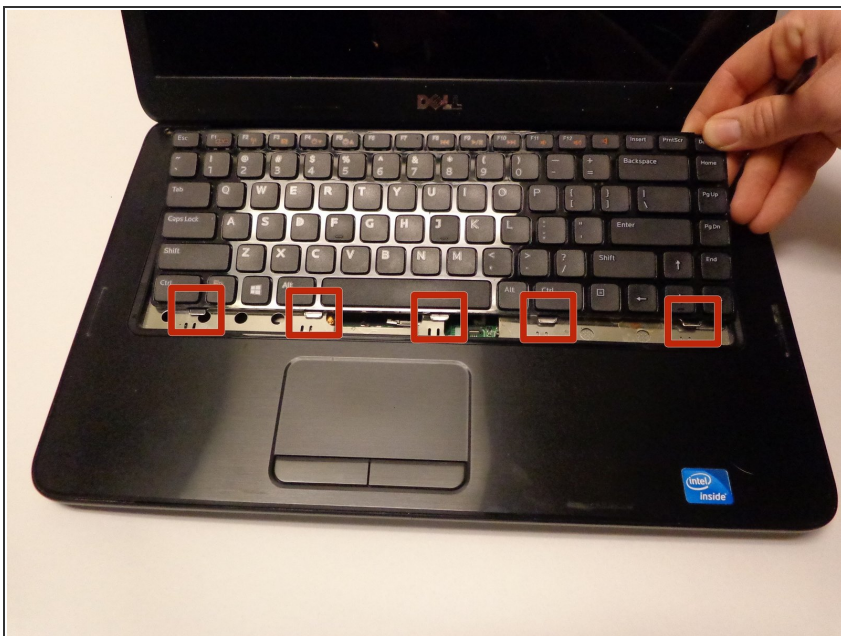

- Slide the keyboard forward towards the screen to release the bottom tabs.

Step 5

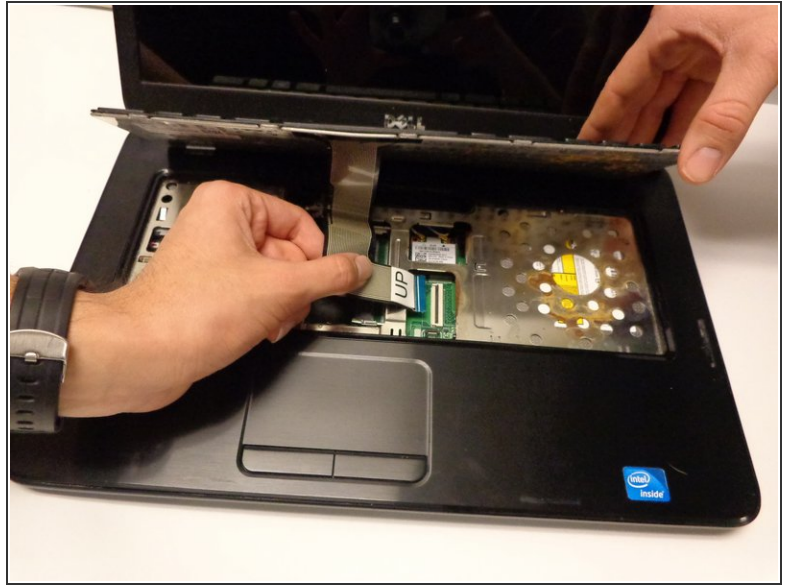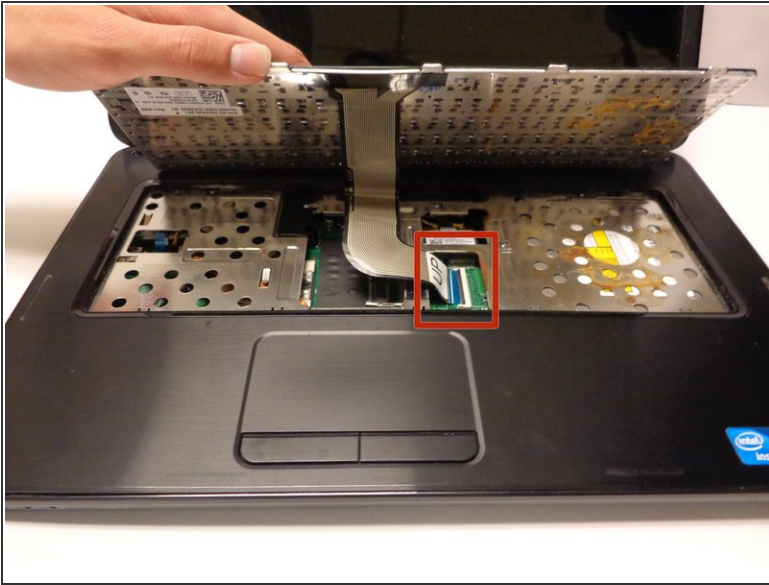

- Carefully lift the board up and locate the connecting cable.
- Gently pull the end of the cable free from the port on the laptop.

To reassemble your device, follow these instructions in reverse order.