




# Kurio Touch 4S Speaker Replacement

This guide will show you how to replace the speakers in your Kurio Touch 4S.

Written By: Moin Khan

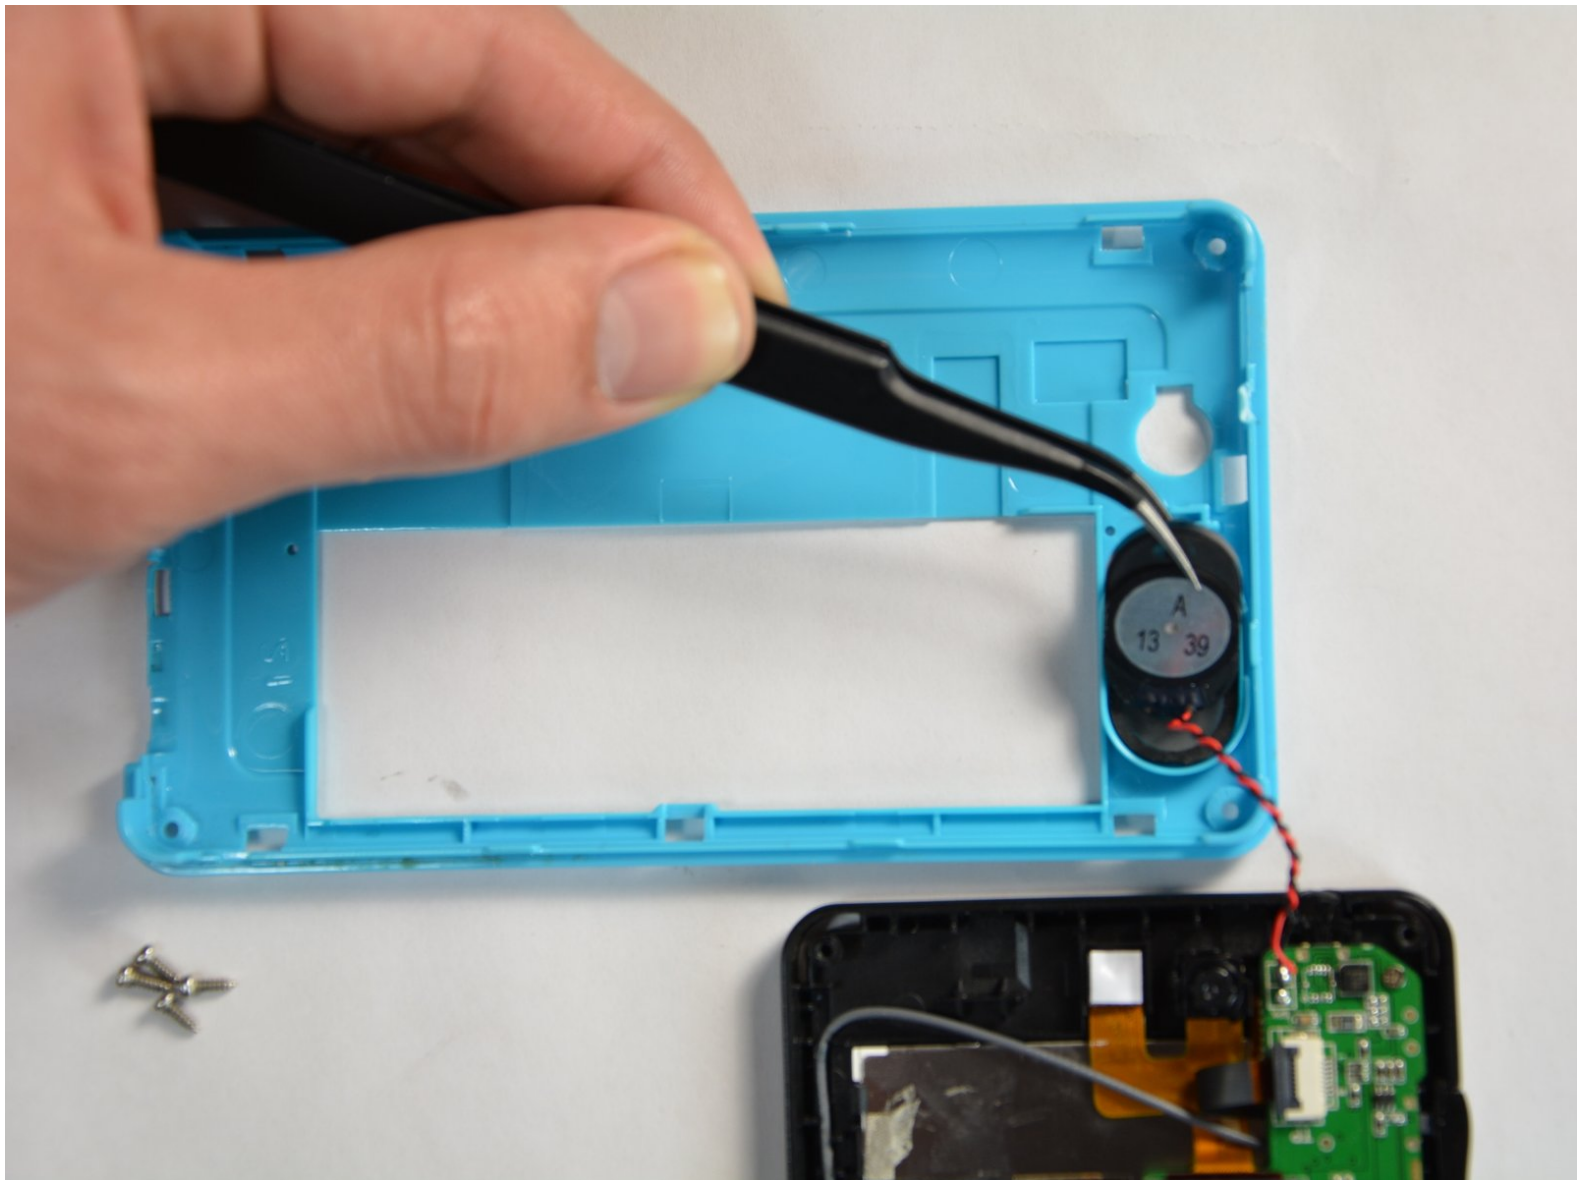



## TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Detailing Brush](#) (1)
- [Soldering Iron](#) (1)

## Step 1 — Speakers



- Make sure to open the back cover easily using the plastic opening tool.

## Step 2



- Remove back cover by prying away from the device.
- ⓘ The easiest place to remove the cover is from the bottom and top; try to open it from the right and left sides.
- ⚠ Open it gently. Do not open it with too much pressure, so that the plastic back cover do not break.

### Step 3




- To remove the battery, make sure the four 5mm Philips screws on each side of your device is open using the Phillips #1 Screwdriver
- After you remove your four 5mm Philips screws, use your plastic opening tool to help you open the plastic cover of your device.

### Step 4



- After you remove your four 5mm Philips screws, use your plastic opening tool to help you open the plastic cover of your device.

## Step 5

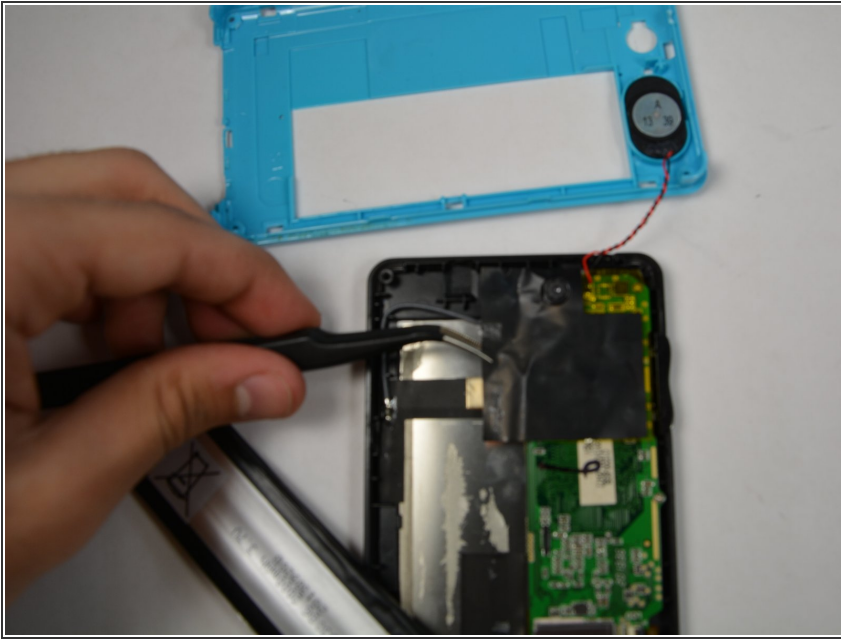

- Gently remove the plastic cover that is covering the camera.

## Step 6




- Separate the two halves of your Kurio Touch 4S and lay them besides each other.

## Step 7




- Use the soldering tool to detach the speaker wires.

 For more information on how to solder the wires [Click here](#)


## Step 8



- Press the speaker in the manner shown so that it comes out of its slot.

 Be sure not to apply too much force or you can break the back cover.

## Step 9

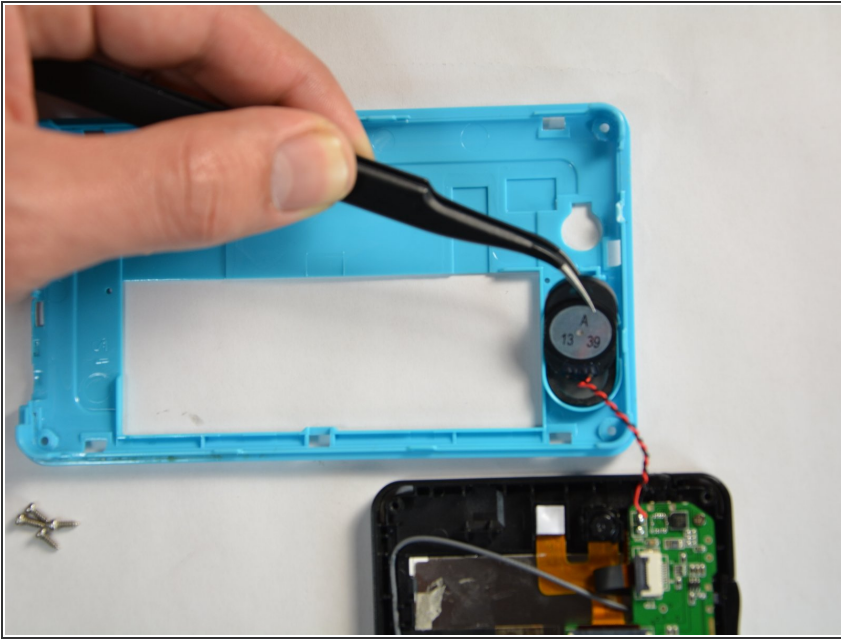

- Use the Tweezers to remove the speaker from its place.

⚠ Remove the speaker gently.

To reassemble your device, follow these instructions in reverse order.