



Cyber-Shot DSC-H55 Battery Replacement

This guide will demonstrate how to successfully replace the camera's battery.

Written By: Jazmin Young



INTRODUCTION

You will learn how to open the battery compartment of the camera, followed by removing the existing battery and inserting a new battery.

Step 1 — Finding the battery compartment



- Before you begin it is important to know where the battery compartment is. The battery compartment is located on the bottom of the camera.
- Place the camera upside down with the lens facing you so that the battery compartment is facing up.
- Place your thumb on the lid of the battery compartment making sure you put some pressure.

Step 2 — Opening Battery Compartment



- Grab the camera with one hand, with your thumb still on the lid, apply pressure and slide to the right.
- Lift the lid, exposing the battery and SD slot.

This document was generated on 2020-11-28 04:10:22 AM (MST).

Step 3 — Removing Battery



- There is a small blue tab on the right of the compartment. In order to remove the battery, move this tab aside and the battery will pop up.

Step 4 — Inserting a New Battery



- Grab the new battery. Place the battery so that the arrow is pointing down and facing you. Next, slide the the battery into the battery compartment.
- The blue tab will lock the battery into place.

To reassemble your device, follow these instructions in reverse order.