




Acer Aspire V5-571 Upper Cover Replacement

Acer Aspire V5-571 Upper Cover Replacement

Written By: ZFix

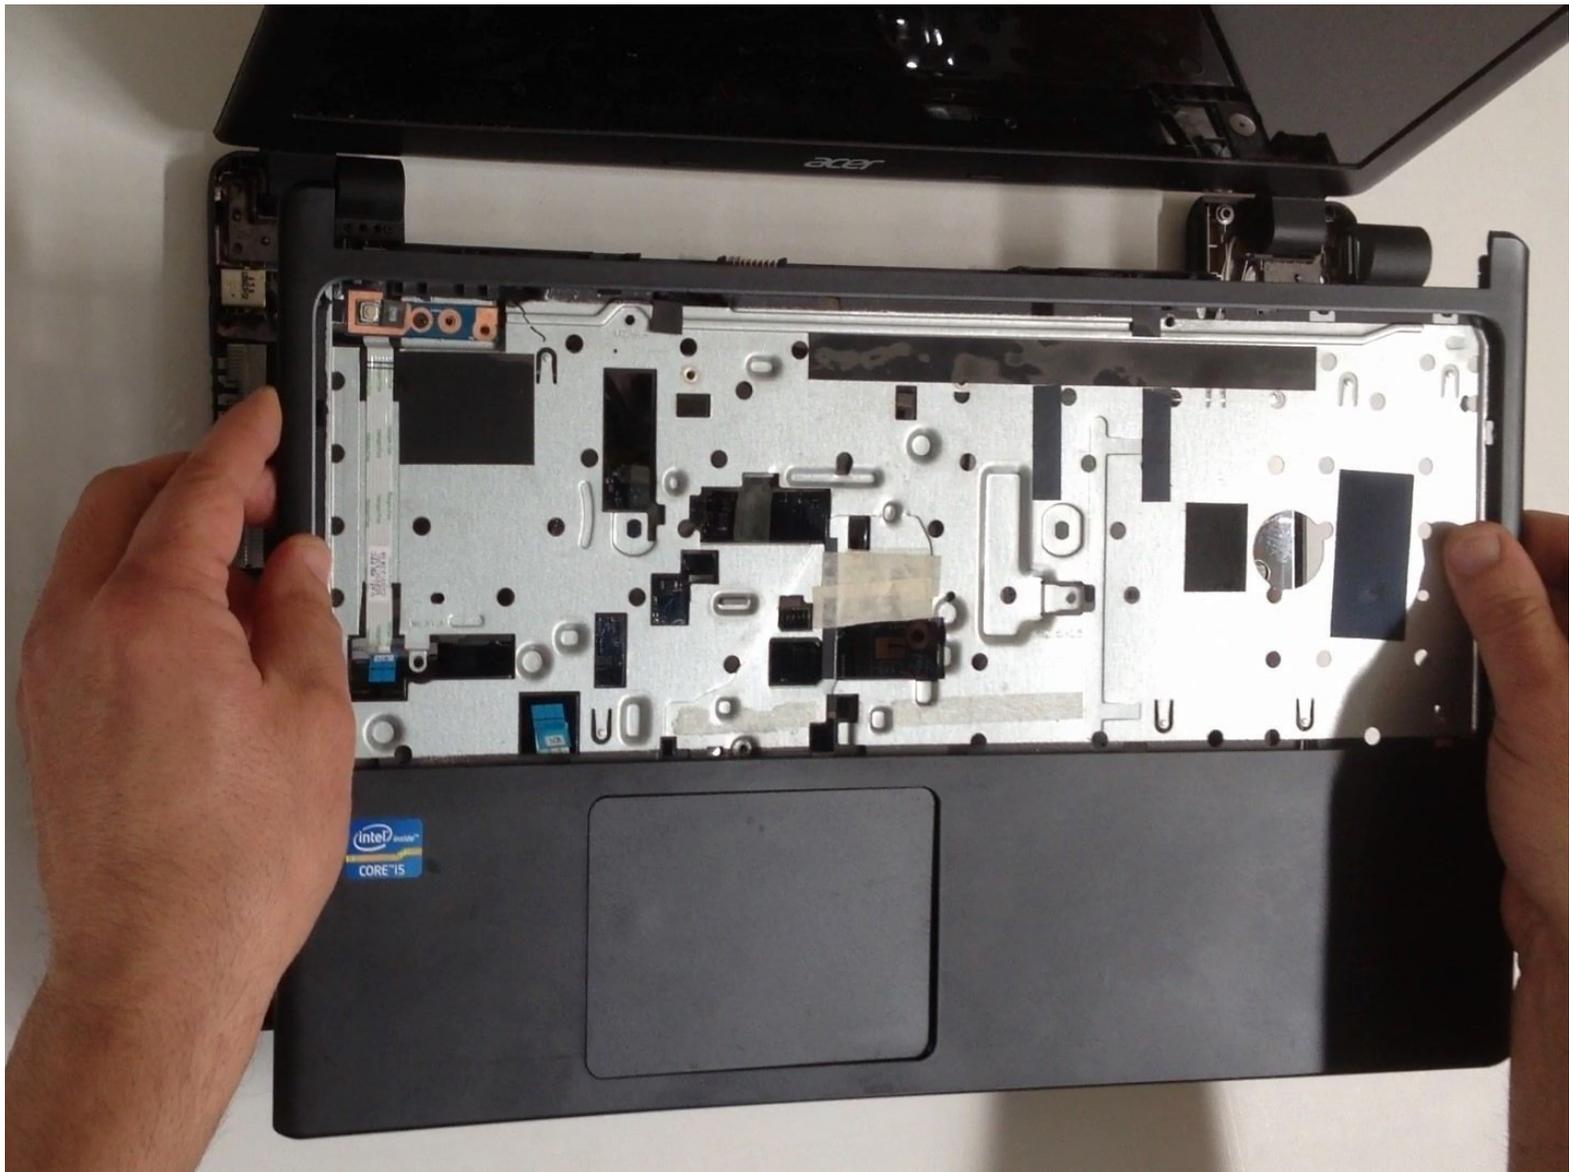

INTRODUCTION

Acer Aspire V5-571 - How to remove the Upper Cover.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
-

Step 1 — Keyboard



- Turn off the laptop and remove the battery.
- Remove two screws securing the Keyboard.
- The Keyboard is held by two locking clips, under the battery. Use the sharp tip of a plastic tool to release the keyboard.

Step 2



- Remove the Keyboard and disconnect the two flex cables:
 - Keyboard flex cable
 - Keyboard Light flex cable


 [Please SUBSCRIBE to my channel ツ](#)

Step 3 — Optical Drive



- Remove the screw securing the Optical drive and gently press the drive to show slightly as at the second pic.
- Slide the drive to the left and remove it.

Step 4 — Upper Cover

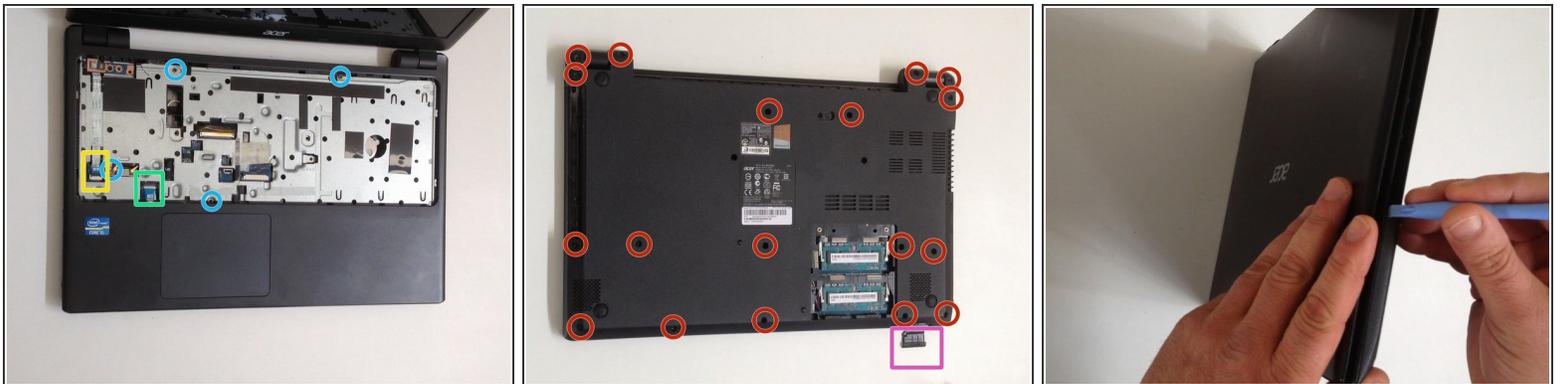

- Remove 4x phillips screws and disconnect:
 - Power On button flex cable
 - Touch pad flex cable
- Remove 18x Phillips screws from the bottom cover.
- Remove any memory SD Card from the Card reader.
- Start opening with a plastic opening tool.

Step 5



- Carefully separate the upper cover and remove it.

To reassemble your device, follow these instructions in reverse order.