



LG 440G Keypad Replacement

How to replace the keypad of your LG 440G phone.

Written By: JP Belanger



INTRODUCTION

If the keypad on your LG 440G phone has worn out or unresponsive, you may want to replace it, Use this step-by-step guide to learn how to change the keypad.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Turn off phone.



- Turn the device off.
- To do so, press and hold the red button.

Step 2 — Flip phone.



- Flip the phone over.

Step 3 — Rear cover removal.




- Slide the rear cover downward
- Lift it off to access the battery

Step 4 — Removal of battery.



- Locate the small rounded recess to get access to the battery
- Gently, lift the battery

Step 5 — Unscrew six screws along edges of casing

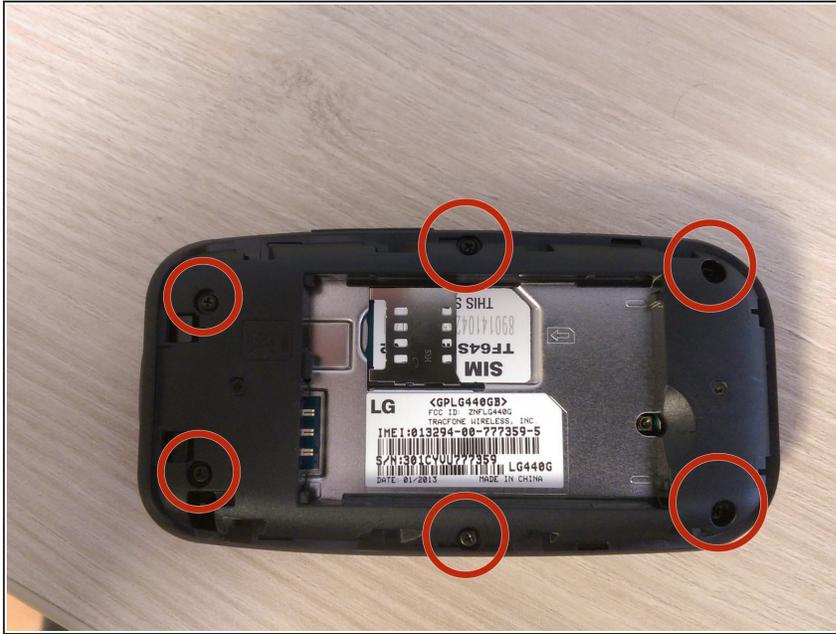

- Use a Phillips #00 screw driver to remove six screws.
- ⓘ Save screws for reassembly.

Step 6 — Lift casing cover



- Run the plastic opening tool along the edge of the phone to release the casing cover.
- Lift the casing cover.

Step 7 — Remove rectangular piece (with orange tape attached)



- Use the plastic opening tool or fingernail to lift the rectangular piece up. The piece can be identified by the orange tape attached to it.

Step 8 — Dislodge logic board



- Dislodge the logic board using a plastic opening tool.

Step 9 — Lift logic board out



- Remove the logic board by lifting up.

Step 10 — Lift keypad out of casing



- Remove the keypad from the phone by pushing the keypad itself out from the front of the phone. Then, lift the keypad out of the casing to separate the keypad from the casing.

To reassemble your device, follow these instructions in reverse order.