




Nook Color Battery Replacement

Be cautious when removing the back panel of the...

Written By: John Goly

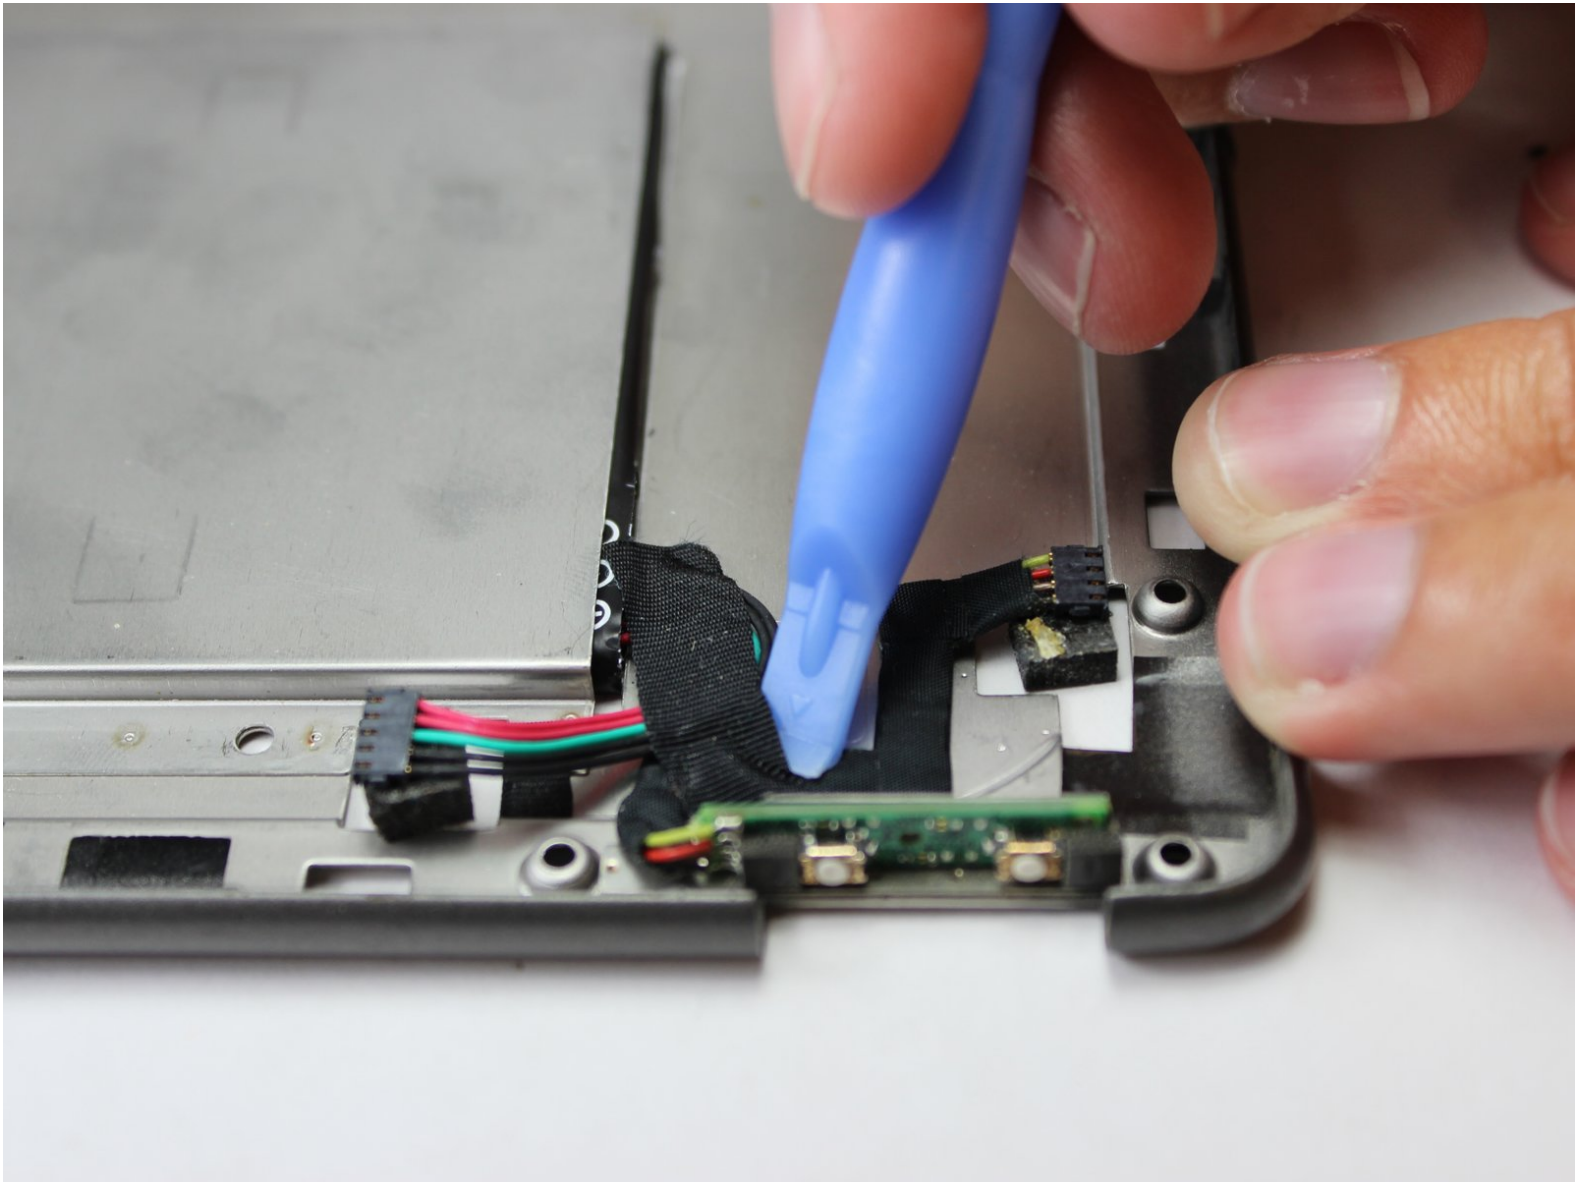

INTRODUCTION

Be cautious when removing the back panel of the device. Buttons tend to become loose and fall out of place. Some force is necessary in removing the back and front panels.

TOOLS:

- [iFixit Opening Tool](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Back Cover



- Remove the two 3.8 mm screws located in the back right corner of the device using the T5 Torx screwdriver.

Step 2





- Pry off the back cover with the plastic opening tool. Go around the device with the tool to ensure complete detachment.

Step 3 — Front Cover




- Remove the ten 4.0 mm screws from the device's perimeter using the T5 Torx screwdriver.

Step 4

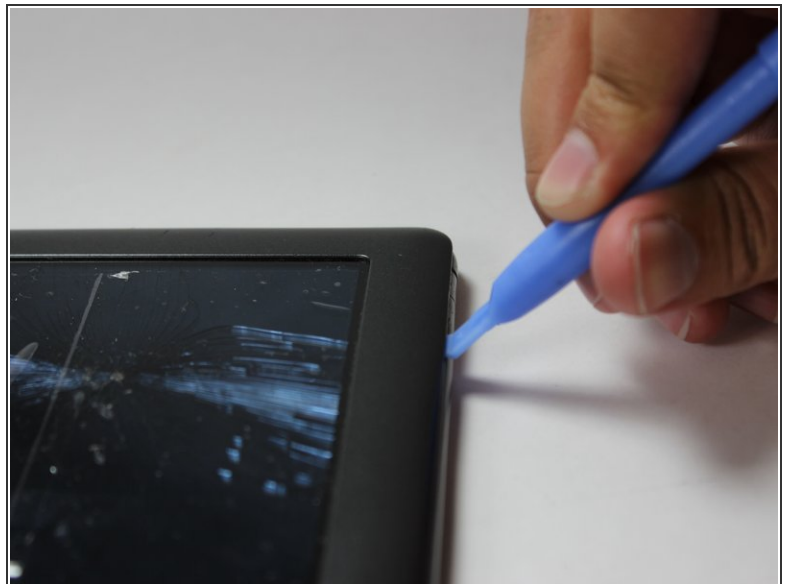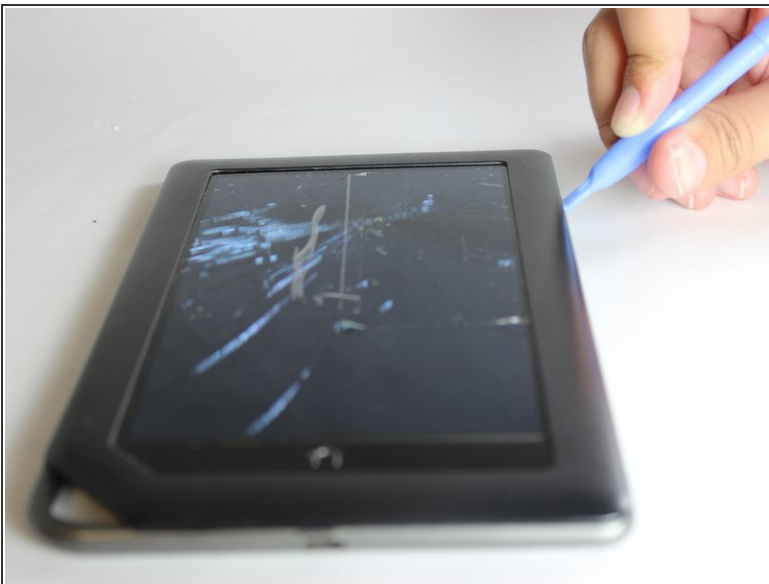



- Pry off the front panel using the plastic opening tool.

Step 5

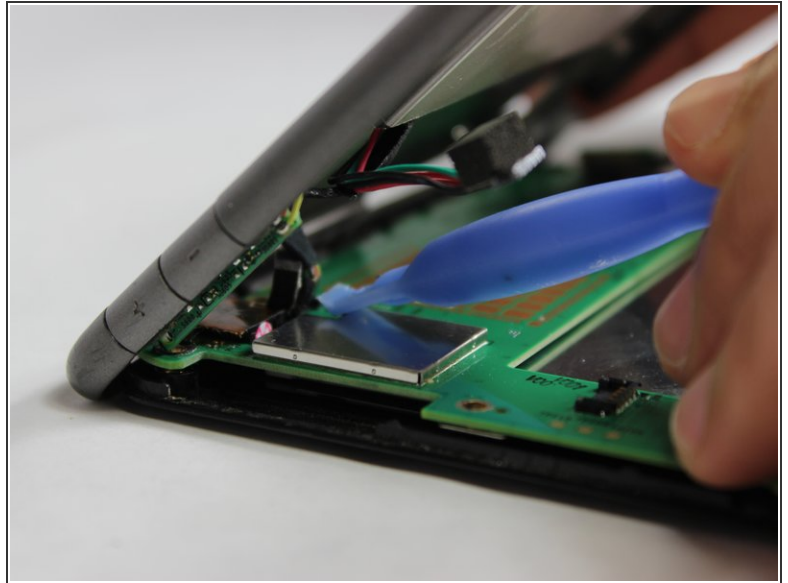


- Lift up on the connectors to disconnect them using the plastic opening tool.

Step 6 — Battery

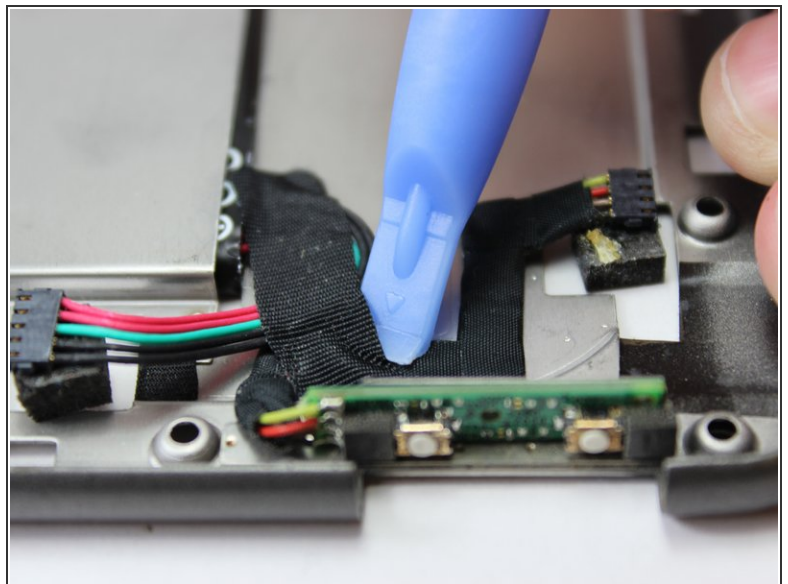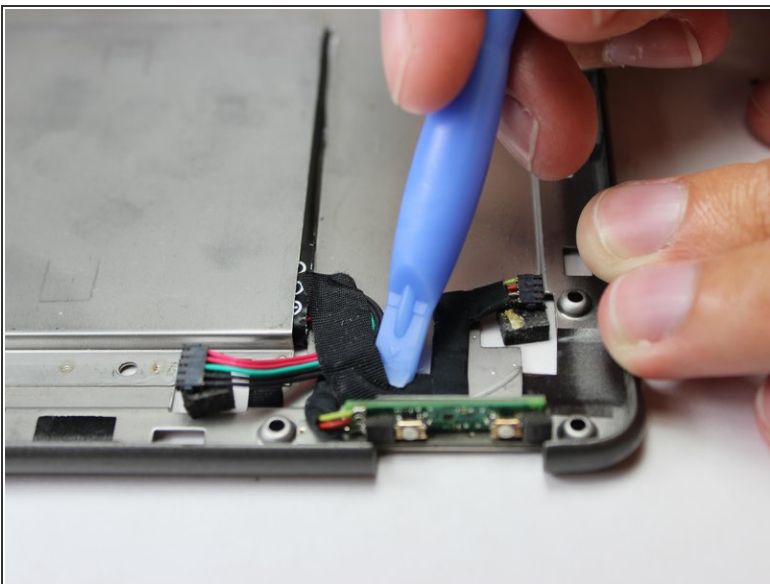


- Remove the tape which holds the wiring to the battery using a plastic opening tool.

Step 7

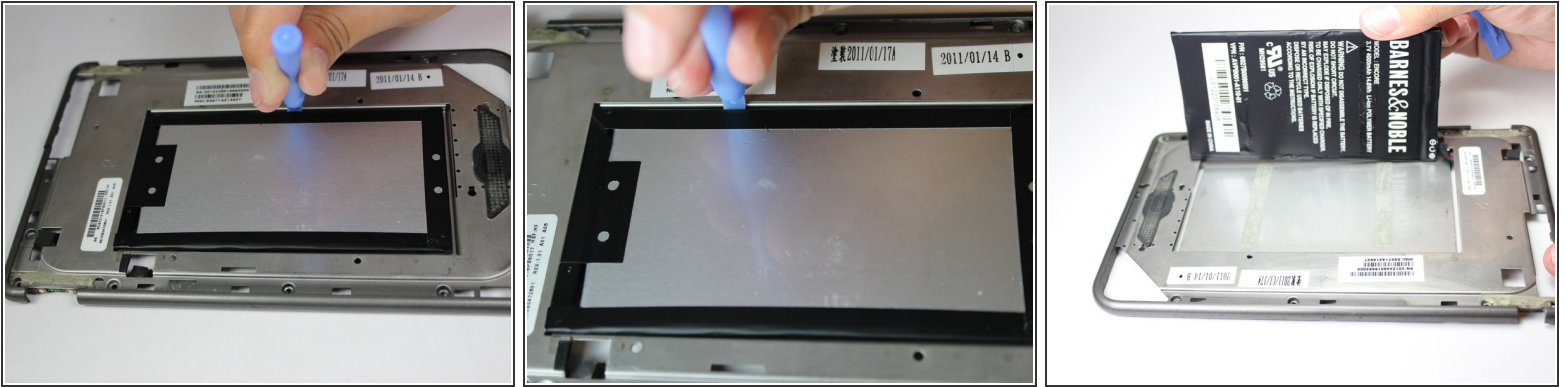

- On the back side of the middle panel, pry the battery using the plastic opening tools.
- ⓘ Use of force is necessary since the battery is glued down.

Step 8

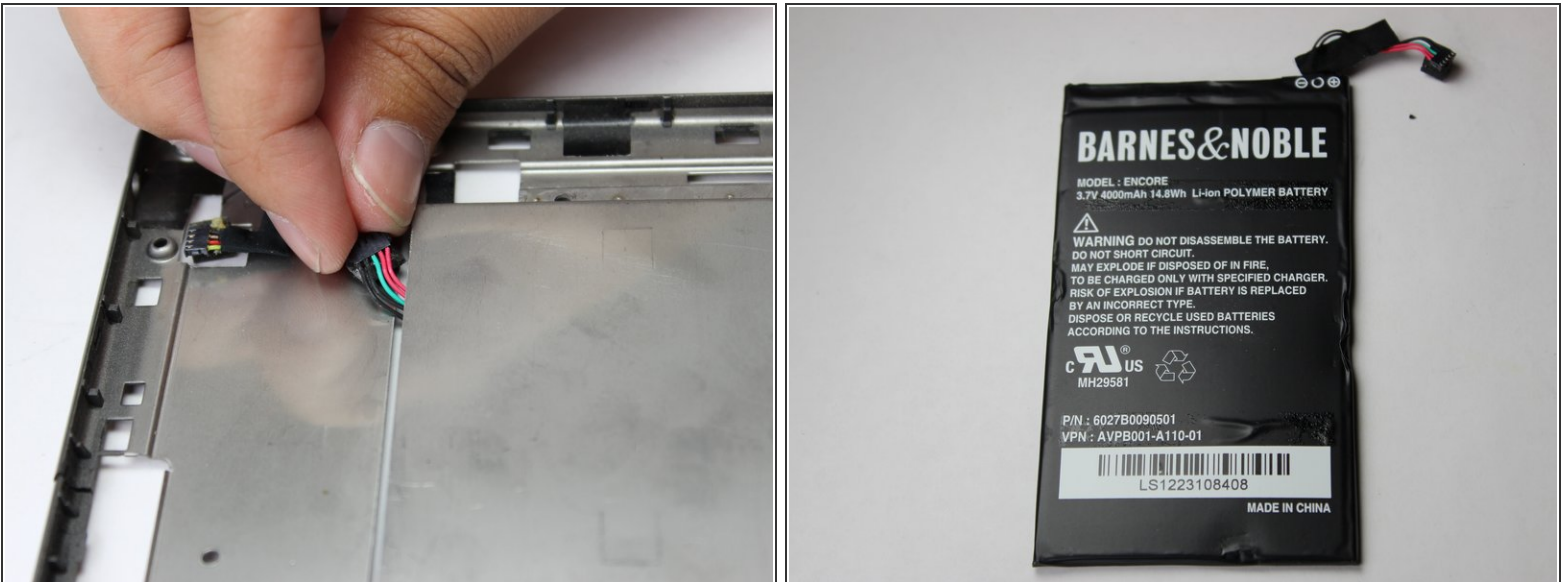

- Slide the connecting wire through the opening of where the battery was placed.

To reassemble your device, follow these instructions in reverse order.