



# Logitech Dual Action disassembly

If your buttons are sticking and they cannot be...

Written By: Brian Neuman



# INTRODUCTION

If your buttons are sticking and they cannot be cleaned from the outside, here is how you can clean it from the inside.

## TOOLS:

[iFixit Opening Tool](#) (1)

[Pro Tech Toolkit](#) (1)

[70% Isopropyl Rubbing Alcohol](#) (1)

[Cloth](#) (1)

## Step 1 — Taking out the screws



- To get into the controller, you will need to unscrew the 7 screws on the back.
- You will have to remove the bottom oval sticker to reveal the screw circled in orange.

## Step 2 — Opening the controller



- With the screws removed, turn the controller upside down. Insert the iFixit opening tool between the top and bottom casing to pry them apart.
- Separate the top and bottom casing.
- It is likely that the buttons will fall out of place, so as you open the controller, try to keep track of where the pieces go.
  - There should be the four circular buttons labeled 1-4, four smaller circular buttons for the D-Pad, and three rounded rectangular buttons.

## Step 3 — Cleaning the buttons



- Turn the top casing of the controller over to remove all the buttons.
- Wipe each individual button with a piece of cloth and rubbing alcohol.